

# PowerCon 4.1



## Installation / Operation Manual

# INDEX

---

Features .....	4 -
System requirements .....	4 -
Software Installation.....	5 -
Program start .....	6 -
Surface description.....	7 -
Explorer .....	7 -
Menu bar .....	7 -
General function description.....	8 -
Configuration .....	8 -
Menu bar / Program .....	8 -
Menu bar / View .....	8 -
Menu bar / Edit.....	9 -
Menu bar / Tool .....	24 -
Menu bar / System .....	27 -
User rights management .....	33 -
Application User Rights Management .....	33 -
Creating new user .....	33 -
User rights assignment .....	34 -
Group membership.....	35 -
System Access Rights Management .....	35 -
Database maintenance .....	36 -
Menu bar / Help.....	36 -
Internet update .....	36 -
About .....	36 -
Getting started .....	37 -
DVR Setup in 10 steps.....	37 -
Setup DVR connection.....	37 -
Composition of Graphic User Interface .....	39 -
Setup of maps and graphics .....	39 -
Sample project: Setup of LOCATIONS and AREAS .....	42 -
Step 1: Defining LOCATIONS.....	43 -
Step 2: Defining AREAS.....	44 -
Step 3: Defining DVR systems and cameras .....	47 -
Step 4: Linking locations, areas, DVRs and cameras in design mode.....	50 -
PowerCon 4.1 Operation.....	57 -
Opening video windows .....	57 -
Live View .....	58 -
Record search.....	59 -
Saving Screenshots.....	61 -
Printing screenshots .....	61 -
Archiving video files .....	61 -
Sequence view.....	63 -
Bug report wizard .....	63 -
APPENDIX A: BITMAP GRAPHICS FOR ICONS AND BUTTONS .....	63 -
PowerCon 4.1 Alarm Receiver .....	63 -
Alarm Receiver Configuration.....	63 -
Bindings: IP settings for the receiver PC.....	63 -
PC Operation mode .....	63 -
Languages .....	63 -
Database .....	63 -
DVR settings .....	63 -
Alarm actions.....	63 -
Alarm server operation .....	63 -
Alarm overview.....	63 -
I/O Controller EPS 100.....	63 -
EPS 100 setup in PowerCon.....	63 -
Setting for visualization in Explorer List.....	63 -
Network alarm setup .....	63 -

EPS 100 operation .....	- 63 -
Network Alarm .....	- 63 -
<b>PowerCon 4.1 SystemChecker .....</b>	<b>- 63 -</b>
General settings.....	- 63 -
Configuration of monitored systems.....	- 63 -
Operation.....	- 63 -
Network traffic monitor .....	- 63 -
<b>EDR 1600 / 400 HDD Player .....</b>	<b>- 63 -</b>
Operation.....	- 63 -
Print images / export images and video streams.....	- 63 -
Search recordings .....	- 63 -

# Features

- ✓ unlimited number of managed systems (DVRs, network cameras)
- ✓ live and playback view
- ✓ local storage and printout of video data or single pictures on client PC
- ✓ multi-window design with scalable video windows
- ✓ free definable multiviews with up to 4 DVR systems or network cameras, also mixed display of different DVRs (max. 64 cameras in 1 multiview with 4 x 16-channel DVR)
- ✓ mapview: visualisation of CCTV system in areas or buildings with free scalable maps / graphics (BMP or JPG format)
- ✓ remote DVR configuration (EDR DVR series only)
- ✓ network alarm reception and management
- ✓ multi-monitor support (depending on PC configuration)
- ✓ advanced access rights management with individual user rights for functions and system access
- ✓ network monitor for visualisation of network traffic
- ✓ system checker: integrated background port checker with alarm function for availability of DVRs and cameras in network
- ✓ support of external program starts

## System requirements

---

<b>Processor:</b>	PC Pentium IV (1.6 or higher) AMD Athlon (1.8 or higher)
<b>Operating system:</b>	Windows XP, service pack 1 or higher
<b>VGA card:</b>	32 MB min., 16,7 million colours, with DirectX 9.0C support
<b>USB:</b>	2.0 interface
<b>Memory:</b>	256 MB RAM 30 MB free HD space for installation min. 10 MB free HD space for storage
<b>Mediaplayer:</b>	Microsoft mediaplayer version 8.x or higher
<b>Further:</b>	DirectX 9.0C
<b>Supported DVRs:</b>	EDR 400 / 1600* EDSR 400 H / M* EDSR 100 / 600 / 900 / 1600* EDR 410 / 810 H/M EDR 910 / 920 / 1610 / 1640 * latest DVR firmware version

**Supported network cameras:** EAN 600

<b>Versions:</b>	<b>PowerCon 4.1</b>	Single client version with USB key
	<b>PowerCon 4.1 Update</b>	Update version for PowerCon Pro and PowerCon Station (serial number of existing version required)

# Software Installation

---

1. Insert the CD-ROM into the CD drive.
2. If autostart function is activated, setup will start automatically by opening internet explorer. If autostart function is deactivated, choose the CD drive from your desktop and start the program manually by double-click.
3. If your browser asks to confirm the authorization of active contents, confirm this dialogue with **"YES"** to enter the setup dialogue.
4. Select **SETUP** to start the PowerCon 4.0 software setup.
5. If your browser asks to either save or execute the setup file, confirm with **EXECUTE**.
6. If your browser shows a security warning concerning the digital signature, confirm with **EXECUTE**.
7. From the pulldown menu, choose the appropriate setup language and follow the instructions in the dialogue box.  
**NOTE:** Acceptance of the end-user license agreement is compulsory to continue the setup program!
8. Start PowerCon 4.0 remote software.

# Program start


---



When starting PowerCon 4.1, the login dialogue will pop up. The default settings for user name and password are:

**User name: admin**  
**Password: admin**

Enter user name and password and confirm with **LOGIN**. The following screen will appear:

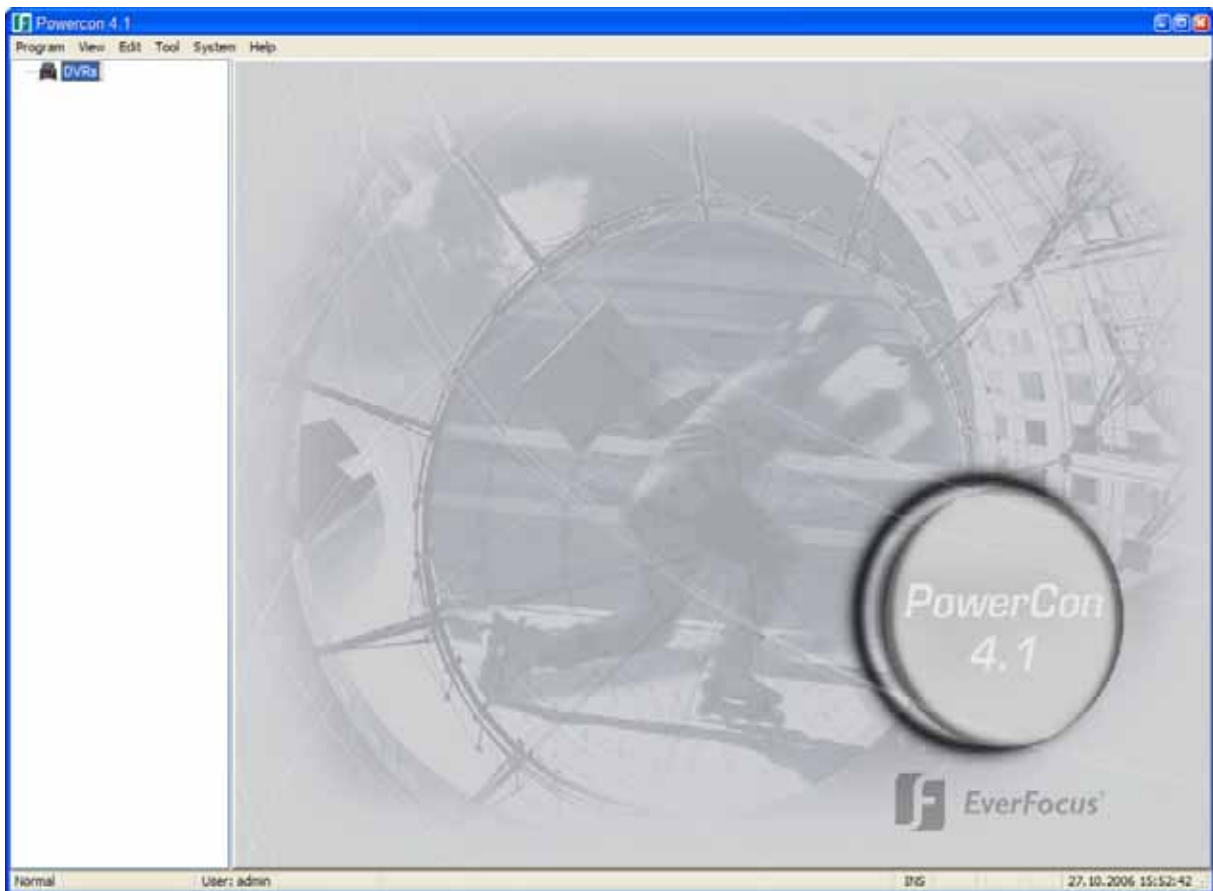

# Surface description

---

## Explorer

The left part of the screen shows the explorer. In case not all listed items are displayed, the two screen parts may be resized through the vertical line between them. Screen sizes are saved after logout. The explorer is structured as follows:

- Location ..... - general location
  - Area ..... - areas defined within the location
    - - Camera ..... - all cameras installed in this area
    - - DVR ..... - all DVRs installed in this area
      - - Camera ..... - all cameras connected to the specific DVR
      - - View ..... - all multiscreen views defined for this DVR
    - - I/O Controller ..... - all I/O controllers installed in this area
    - - Other ..... - external single devices installed in this area
    - - Sequences ..... - all sequences defined in this area
    - - View ..... - all multiscreen views defined in this area
  - Camera ..... - all cameras installed in the location
  - - DVR ..... - all DVRs installed in the location
    - - Camera ..... - all cameras connected to the specific DVR
    - - View ..... - all multiscreen views defined for this DVR
  - - I/O controller ..... - all I/O controllers installed in the location
  - - Other ..... - external single devices installed in the location
  - - Sequences ..... - all sequences defined in the location
  - - View ..... - all multiscreen views defined in the location

The group names **LOCATION**, **AREA**, **CAMERA**, **DVR**, **I/O CONTROLLER**, **OTHER**, **SEQUENCES** and **VIEW** are default names and may be modified individually by the administrator. The administrator also has the possibility to show or hide every single group in the explorer after configuration.

## Menu bar



- |                |  |
|----------------|--|
| <b>Program</b> | - close PowerCon 4.1 or logout   |
| <b>View</b>    | - define the display options for explorer and system checker   |
| <b>Edit</b>    | - add / delete / modify locations, areas, cameras, DVRs, I/O controllers, sequences, views and external devices and programs |
| <b>Tool</b>    | - start traffic monitor<br>- start Windows locking utility   |
| <b>System</b>  | - set up the system  |
| <b>Help</b>    | - start help program, update PowerCon 4.1, display system information  |

# General function description

---

## Configuration

### Menu bar / Program

Select **CLOSE** to close PowerCon 4.1.

Select **LOGOUT** to close the current session and return to the login dialogue.

### Menu bar / View

Activate/deactivate **EXPLORER** to show / hide the explorer – default setting is **"Activated"**.

Select **EXPLORER OPTIONS** to define more display options:

#### **a) Show group description**

Activate this option to show the group descriptions (Location / Area / Camera / DVR / I/O controller / Sequence / View / Other) displayed as explorer. Deactivate to hide the group descriptions and only list all installed devices

#### **b) Alphasort**

Activate this option to arrange the groups in alphabetic order. Deactivate to arrange the groups in the order Location-Area-DVR-Camera-I/O Controller-Sequence-View-Other.

**Note:** if activated, the groups **"Location"** and **"Area"** are always on top, whether Alphasort is activated or deactivated.

#### **c) Aggregate under location**

Activate this option to arrange all groups not only under the dedicated area, but also independent from the areas, arranged by groups. Deactivate to show the groups only beneath the dedicated area.

#### **d) Show Location / Area / DVR / Camera / View / Sequence / Other / I/O controller / I/O input / I/O output**

Activate each group to be displayed in the explorer. Deactivate to not display the group in the explorer. You may also use the menu System\Configuration to design the explorer outlook.

Activate **SYSTEMCHECKER NOTIFICATION** to observe the process of the installed DVRs. An additional window will be displayed at the bottom of the right screen. Default setting is **"Deactivated"**. Use the horizontal line to resize the window.

**NOTE:** To enable this function, the add on program **"EVF SystemChecker"** has to be executed on any PC in your local network.

Select **NOTIFICATION OPTIONS** to define more display options:

#### **a) Alarm messages**

Activate this option to display network alarm messages, which are forwarded from **"Alarm Receiver"** application.

Deactivate to not display alarm messages. Default setting is **"Activated"**.

#### **b) Successful checks**

Activate this option to show all successful checks of all installed DVRs, executed by **"SystemChecker"**.

Deactivate to not display successful checks. Default setting is **"Deactivated"**.

#### **c) Status message**


Activate this option to show all status messages of the installed DVRs.

Deactivate to not display status messages. Default setting is **"Deactivated"**.



## Menu bar / Edit

Select **Location** to enter the location setup dialogue.

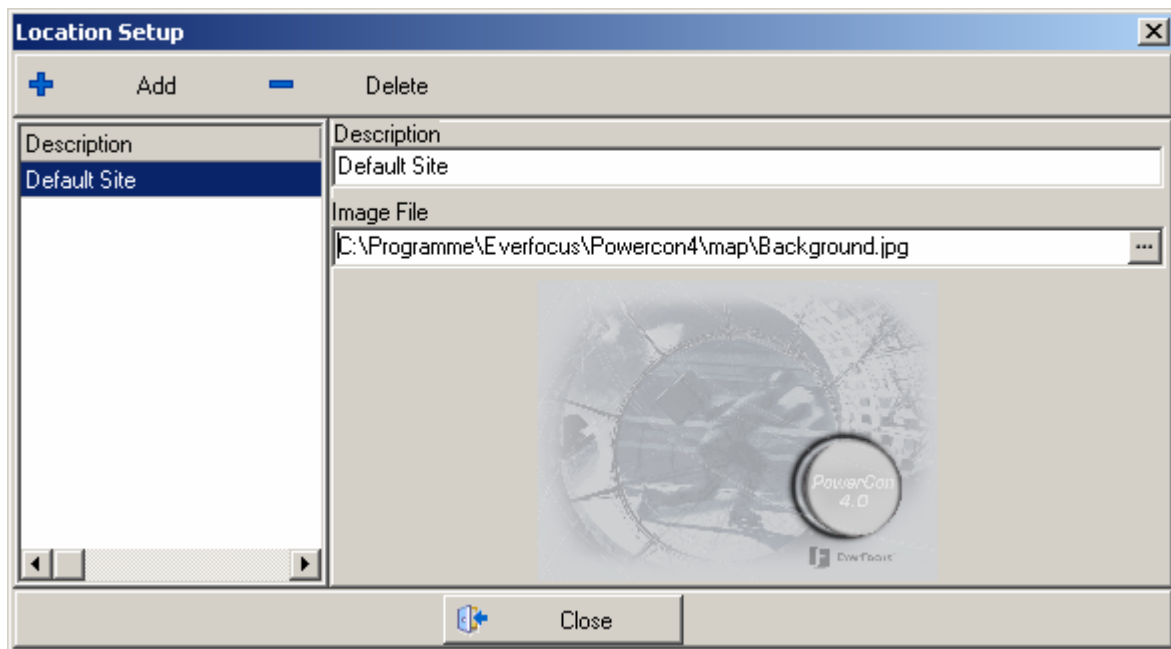


All existing locations are listed on the left of the dialogue box.

Choose an existing location to rename it in the **DESCRIPTION** field and, if applicable, choose a location image from either the image directory or your local drive. Confirm your settings with **CLOSE**.

Select + **ADD** to add a new location. Assign a description to the new location and, if applicable, choose a location image from either the image directory or your local drive. Confirm your settings with **CLOSE**. Your new location is now listed in the explorer. The groups Area / DVR / Camera / I/O Controller / Sequence / View / Other are created automatically.

Select - **DELETE** to delete the activated location and confirm your settings with **CLOSE**.

Select **AREA** to enter the area setup dialogue.

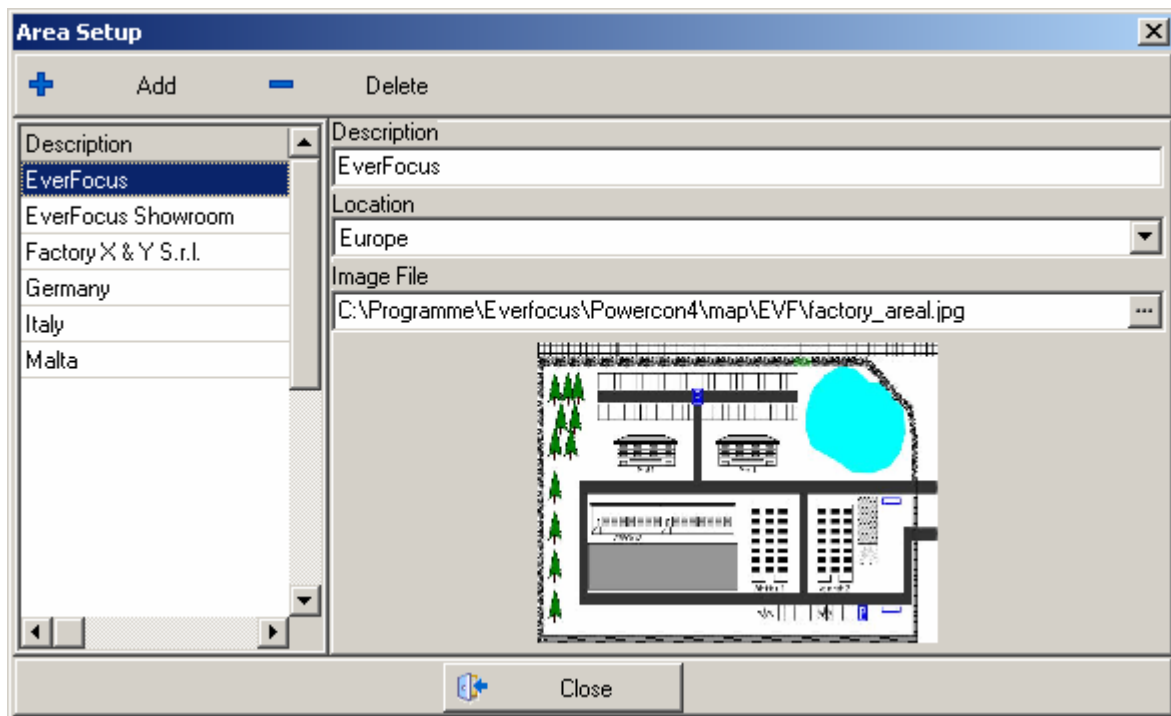

All existing areas are listed on the left of the dialogue box.

Select an existing area to change the settings.

Rename the chosen area in the **DESCRIPTION** field.


In the **LOCATION** field, select the location which the area shall be assigned to from the pulldown menu.

If you want to provide a floorplan of the area, enter the directory path of the respective graphic file into the **IMAGE FILE** field. The chosen image is displayed in the bottom window.

Select + **ADD** to add a new area. Assign a description, the dedicated location and – if applicable, an image – to the new area and confirm your settings with **CLOSE**. Your new area is now listed in the explorer. The groups DVR / Camera / I/O Controller / Sequence / View / Other are created automatically.

Select - **DELETE** to delete the highlighted area and confirm your settings with **CLOSE**.

Select **DVR** to enter the DVR setup dialogue.

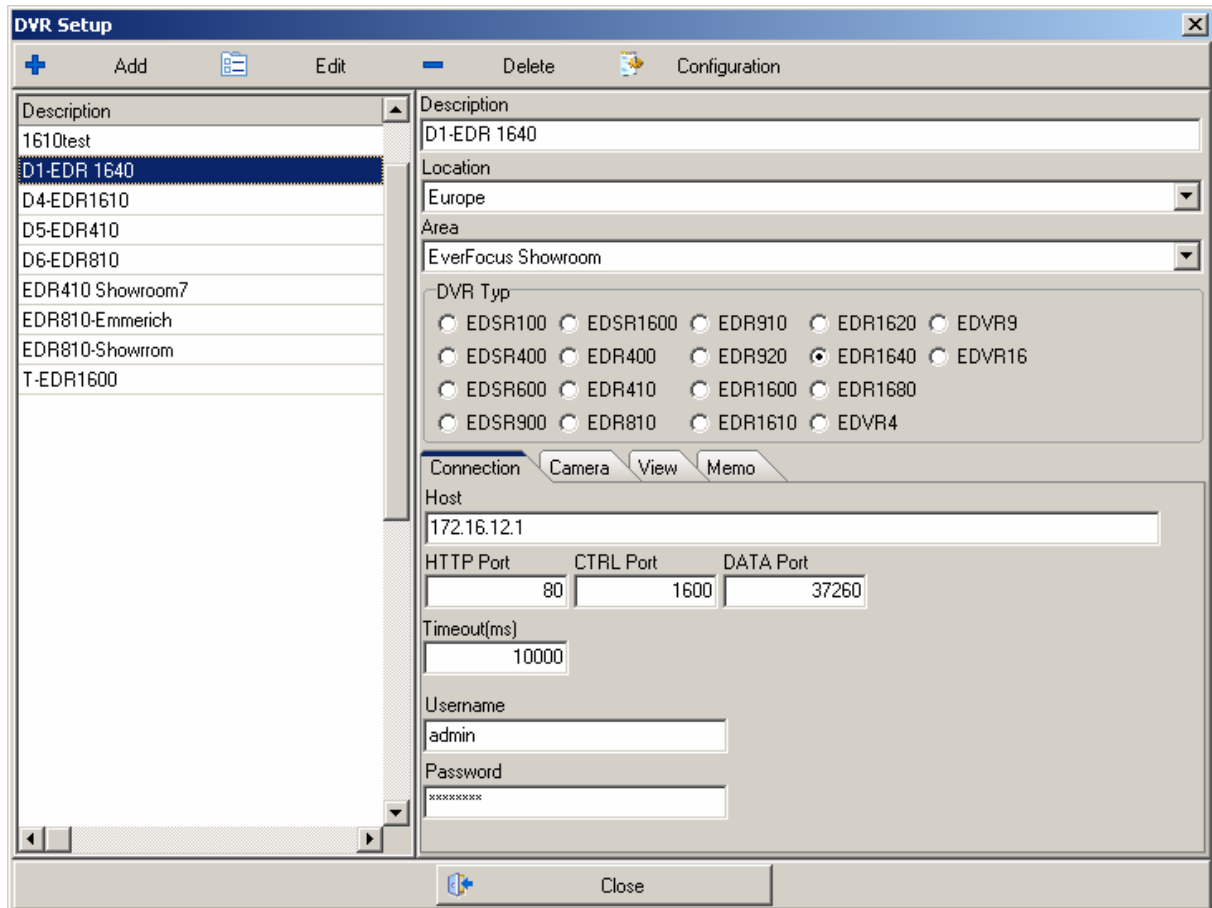

The screenshot shows the 'DVR Setup' dialog box. On the left, a list of DVRs includes 'D1-EDR 1640', which is selected. The right side of the dialog is divided into two main sections. The top section contains fields for 'Description' (D1-EDR 1640), 'Location' (Europe), 'Area' (EverFocus Showroom), and 'DVR Typ'. Under 'DVR Typ', several radio buttons are shown, with 'EDR1640' being the selected option. The bottom section contains four tabs: 'Connection', 'Camera', 'View', and 'Memo'. The 'Connection' tab is currently active, displaying fields for 'Host' (172.16.12.1), 'HTTP Port' (80), 'CTRL Port' (1600), 'DATA Port' (37260), 'Timeout(ms)' (10000), 'Username' (admin), and 'Password' (masked with 'XXXXXXXXXX'). A 'Close' button is located at the bottom right of the dialog.

All existing DVRs are listed on the left of the dialogue box.

Select an existing DVR to change the settings.

Rename the chosen DVR in the **DESCRIPTION** field.

In the **LOCATION** field, select the location which the DVR shall be assigned to from the pulldown menu.

In the **AREA** field, select the area which the DVR shall be assigned to from the pulldown menu.

In the **DVR TYPE** field, select the DVR model.

In the following field, there are 4 tabs for different configuration options:

## Tab CONNECTION

The screenshot shows the 'CONNECTION' tab with the following fields and values:

Host	HTTP Port	CTRL Port	DATA Port	Timeout(ms)	Username	Password
195.243.225.27	80	1600	37260	15000	Admin	xxxxxxxx

At the bottom, there is a 'Close' button.

Enter the host name OR the IP address of the DVR in the **HOST** field.

Enter the HTTP port, control port and data port numbers as well as the requested timeout time (msec) in the respective fields.

Enter DVR user name and password.

## Tab CAMERA

The screenshot shows the 'CAMERA' tab with a table listing cameras:


Nr	Description
1	Camera 01-EVF EDR410
2	Camera 02-EVF EDR410
3	Camera 03-EVF EDR410
4	Camera 04-EVF EDR410

At the bottom, there is a 'Close' button.

By selecting a DVR model in the **DVR TYPE** field, PowerCon 4.1 automatically detects the maximum number of cameras for this DVR model. The cameras are assigned when selecting the **CAMERA** tab. The description is also assigned automatically and depends on the DVR's description entered in the **DESCRIPTION** field.

For further definition and setup of the cameras, select **EDIT**.

**NOTE:** Cameras connected to a DVR can only be set up using the DVR setup menu. There is no possibility to set up a connected camera directly from the explorer!

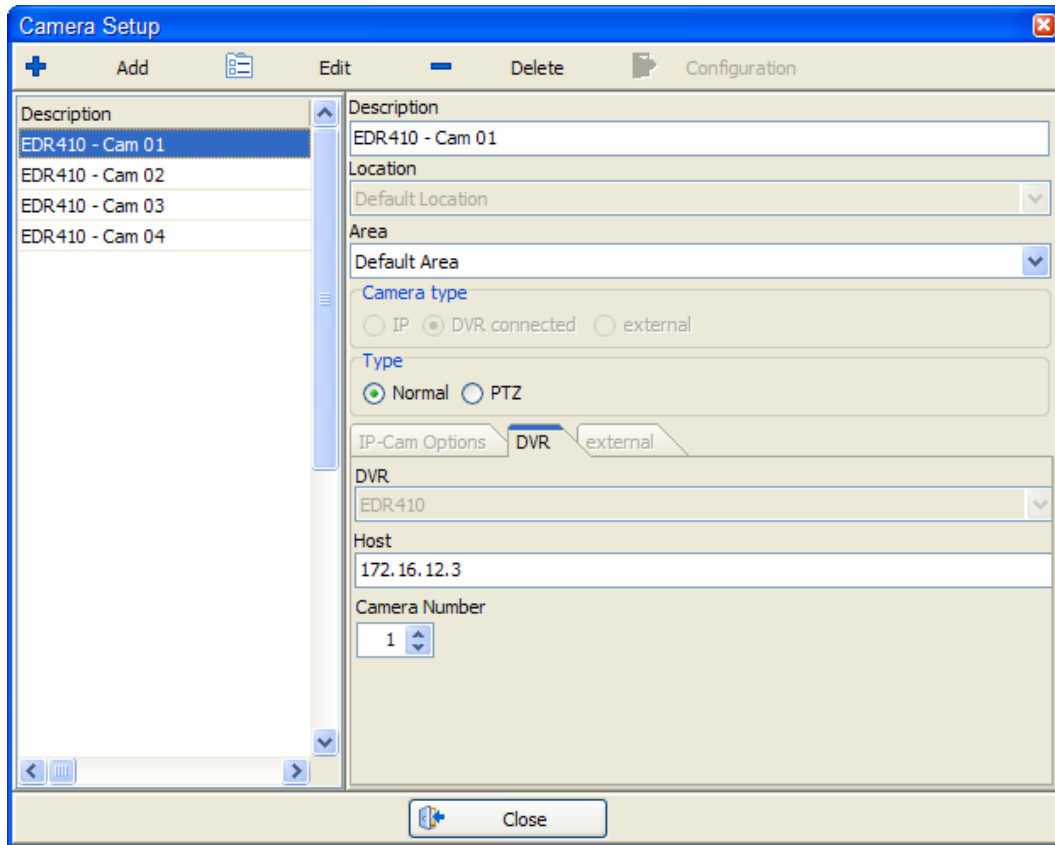

The maximum number of cameras per DVR are listed on the left of the dialogue box.

If not all possible cameras are installed, the surplus cameras should be removed by choosing **DELETE**.

If a camera is connected to the DVR after the initial DVR setup, or if a camera has been deleted by mistake, choose **ADD** to add a new camera to the DVR.

Select an existing camera to change the settings.

Rename the chosen camera in the **DESCRIPTION** field.

The **LOCATION** field cannot be modified as the location is automatically pre-defined by the DVR's location.

In the **AREA** field, select the area in which the camera is installed from the pulldown menu.

The **CAMERA TYPE** field is only available when single cameras are configured. When linked to a DVR, the field cannot be modified, but automatically shows "**DVR connected**".

In the **TYPE** field, select whether this camera is a static camera or a camera with PTZ function.


**NOTE:** It is important to activate PTZ at this stage of configuration, as otherwise the PTZ control function will not be available during remote sessions!

The linked DVR's description and IP address are displayed for information. Further options are only available when single cameras are configured.

Finally, assign a camera number (1~16) to the active camera.


Having defined all cameras, select **CLOSE** to leave the camera configuration and return to DVR setup.

## Tab VIEW

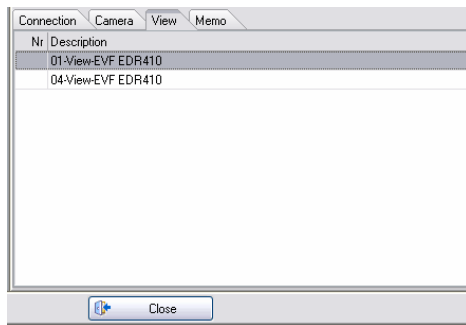

By selecting a DVR model in the **DVR TYPE** field, PowerCon 4.1 automatically detects the possible multiscreen views for this DVR model and lists these in the **VIEW** tab. The description is also assigned automatically and depends on the DVR's description entered in the **DESCRIPTION** field.

For further definition and setup of the multiscreen views, select **EDIT**.

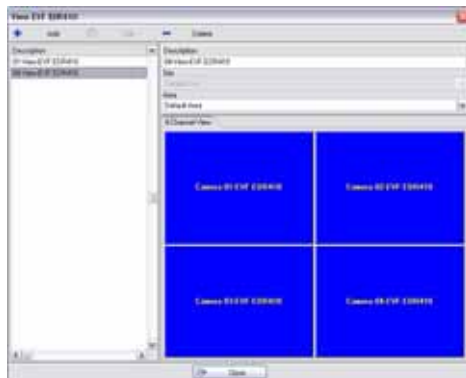

The possible multiscreen views per DVR are listed on the left of the dialogue box.

If not all possible views are required, the surplus views should be removed by choosing **DELETE**.

To add further multiscreen combinations, choose **ADD** to add a new view to the DVR.

Select an existing view to change the settings.

Rename the chosen view in the **DESCRIPTION** field.

The **LOCATION** field cannot be modified as the location is automatically pre-defined by the DVR's location.

In the **AREA** field, select the area the view belongs to from the pulldown menu.

Click once into the requested screen part to choose the camera to be displayed from the context menu.

Having defined all views, select **CLOSE** to leave the view configuration and return to DVR setup.


## Tab MEMO



PowerCon 4.1 offers this memo page as a pure text area field type which may be used for further individual information.

## DVR remote configuration download / upload

If applicable, select **CONFIGURATION** to load the configuration of your DVR.

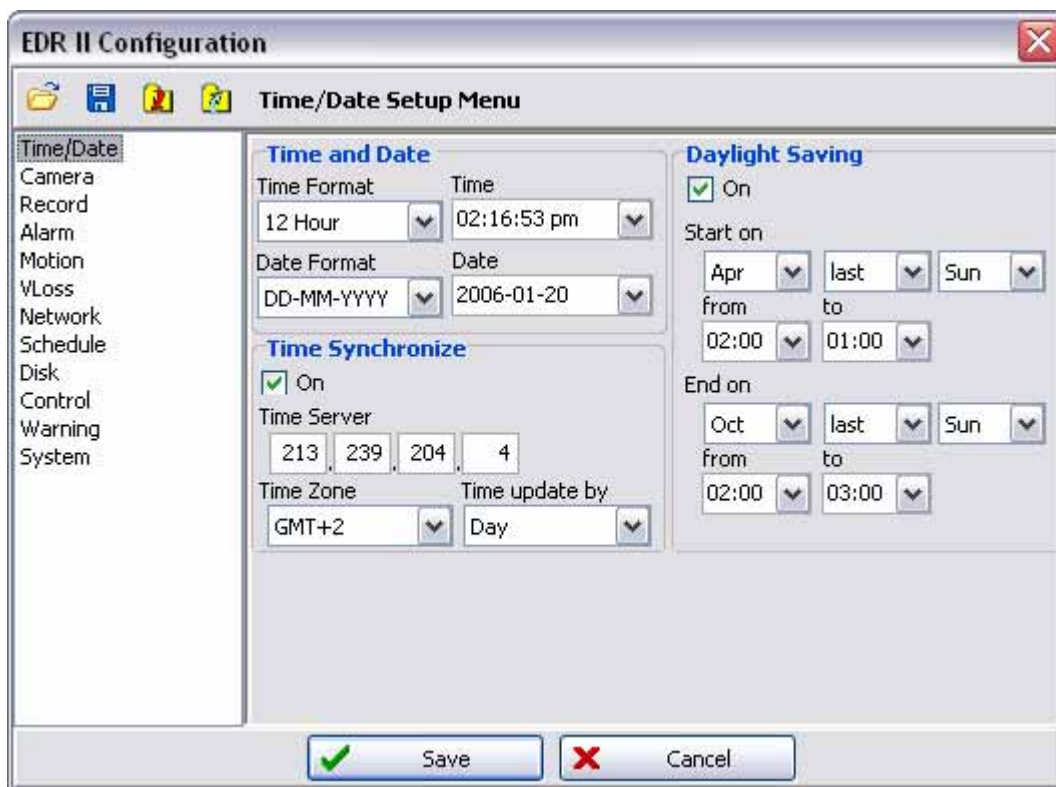

Use the menu bar to open/save/download/upload DVR configuration files.



open configuration file from local drive



save configuration file to local drive



download configuration file from DVR by network



upload configuration file to DVR by network

The available settings correspond with the settings of the machine itself. For detailed information about the configuration of your DVR, please refer to the device's manual.

Having finished the DVR configuration, select **SAVE** to confirm the settings and return to the DVR setup menu. If you don't want to confirm the settings, select **CANCEL** to leave the DVR configuration and return to the DVR setup menu.

Having defined all DVR settings, select **CLOSE** to leave the DVR setup and return to the main menu.

**ATTENTION:** PowerCon 4 does not provide motion detection zones for EDR MPEG-4 series!



Select **CAMERA** to enter the camera setup.

All single and DVR-connected cameras are listed on the left of the dialogue box, irrespective of the sites and areas they're assigned to.

Select **+ ADD** to add a new single camera.

Select an existing camera to change the settings.

Rename the chosen camera in the **DESCRIPTION** field.

In the **LOCATION** field, select the location in which the camera is installed from the pulldown menu. The **LOCATION** field is only available when single cameras are set up. For DVR-connected cameras, the location is pre-defined by the DVR's location.

In the **AREA** field, select the area in which the camera is installed from the pulldown menu.


The **CAMERA TYPE** field is only available when new cameras are configured. When pre-configured in the DVR setup menu, the field cannot be modified, but automatically shows "**DVR connected**". Select the new camera type:

#### a) EAN 600

The screenshot shows the 'Camera Setup' dialog box. On the left, a list of cameras includes 'EAN600', which is selected. The right pane shows the configuration for this camera. The 'Description' field contains 'EAN600'. The 'Location' field is set to 'Default Location'. The 'Area' field is set to 'Default Area'. Under 'Camera type', the 'IP' radio button is selected. Under 'Type', the 'Normal' radio button is selected. The 'IP-Cam Options' tab is active, showing the 'Type' field with 'EAN600' selected. The 'Host' field contains '172.16.13.103'. The 'Username' field contains 'admin' and the 'HTTP Port' field contains '80'. The 'Password' field is masked with '\*\*\*\*'. The 'Timeout(ms)' field contains '10000'. A 'Close' button is at the bottom right.

When EAN 600 is selected, the **TYPE** field is not available. Within the **IP-CAM OPTIONS** tab, insert the IP address / host name, user name, password and HTTP port of the EAN 600.


## b) DVR-connected

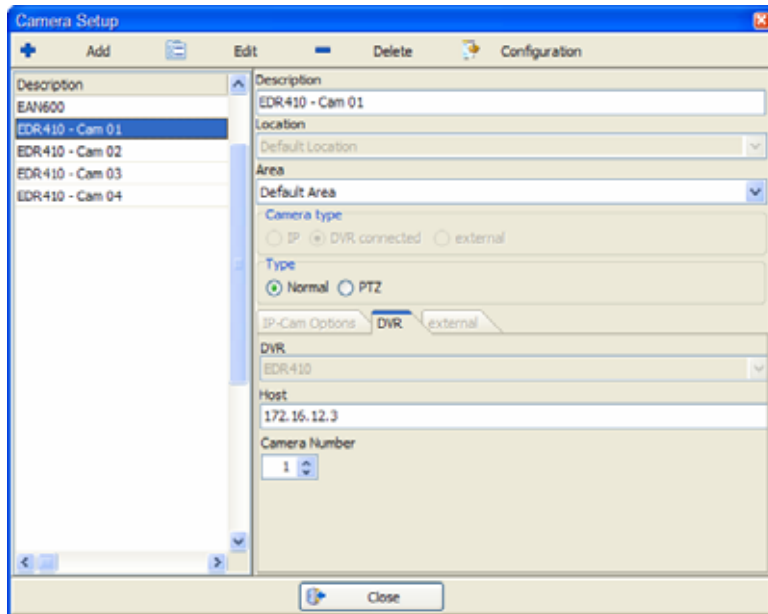

In the **TYPE** field, select whether this camera is a static camera or a camera with PTZ function.

**NOTE:** If your camera does provide PTZ function and has not been chosen as PTZ camera in the DVR setup, it is important to activate PTZ at this stage of configuration, as otherwise the PTZ control function will not be available during remote sessions! The linked DVR's description and IP address are displayed for information.

## c) External

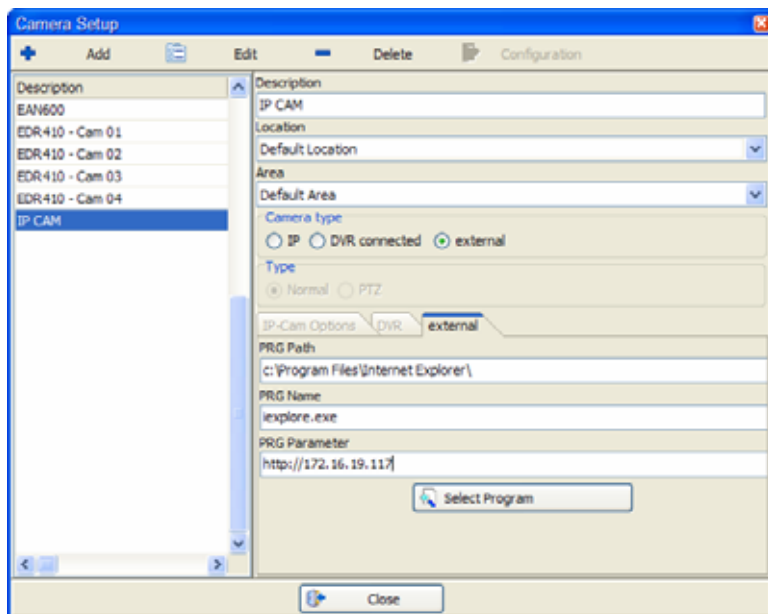

If **EXTERNAL** is selected, the **TYPE** field is not available. Within the **EXTERNAL** tab, choose **SELECT PROGRAM** to select the path of the external program. Confirm your choice with **OPEN** to transfer the data.

In the **PRG PATH** field, the program's path is inserted automatically.

In the **PRG NAME** field, the program's file name is inserted automatically.


In the **PRG PARAMETER** field, enter the external parameters, e.g. the IP address of the external camera.

Select **DELETE** to remove a camera from the list.

**NOTE:** If a DVR-connected camera is removed in the camera setup menu, this camera can only be re-added in the DVR setup menu, as it's directly linked to the respective DVR!

Having defined all cameras, select **CLOSE** to leave the camera configuration and return to the main menu.

Select **VIEW** to enter the view setup menu.

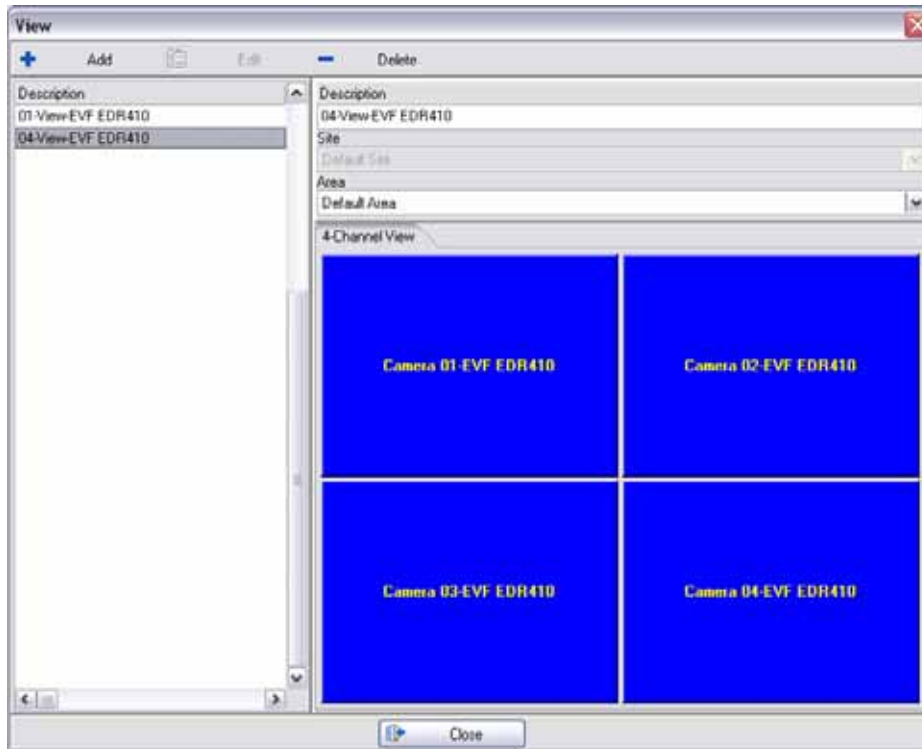

All available multiscreen views of all configured DVRs are listed on the left of the dialogue box.

In this menu, views can neither be added nor deleted – it is compulsory to add / delete views in the **DVR setup menu**, as the views are directly linked to the DVRs.

Select an existing view to change the settings.

Rename the chosen view in the **DESCRIPTION** field.


The **LOCATION** field cannot be modified as the location is automatically pre-defined by the DVR's location.

In the **AREA** field, select the area the view belongs to from the pulldown menu.

Click once into the requested screen part to choose the camera to be displayed from the context menu.

Having defined all views, select **CLOSE** to leave the view configuration and return to the main menu.

Select **MULTIVIEW** to enter the multiview setup.

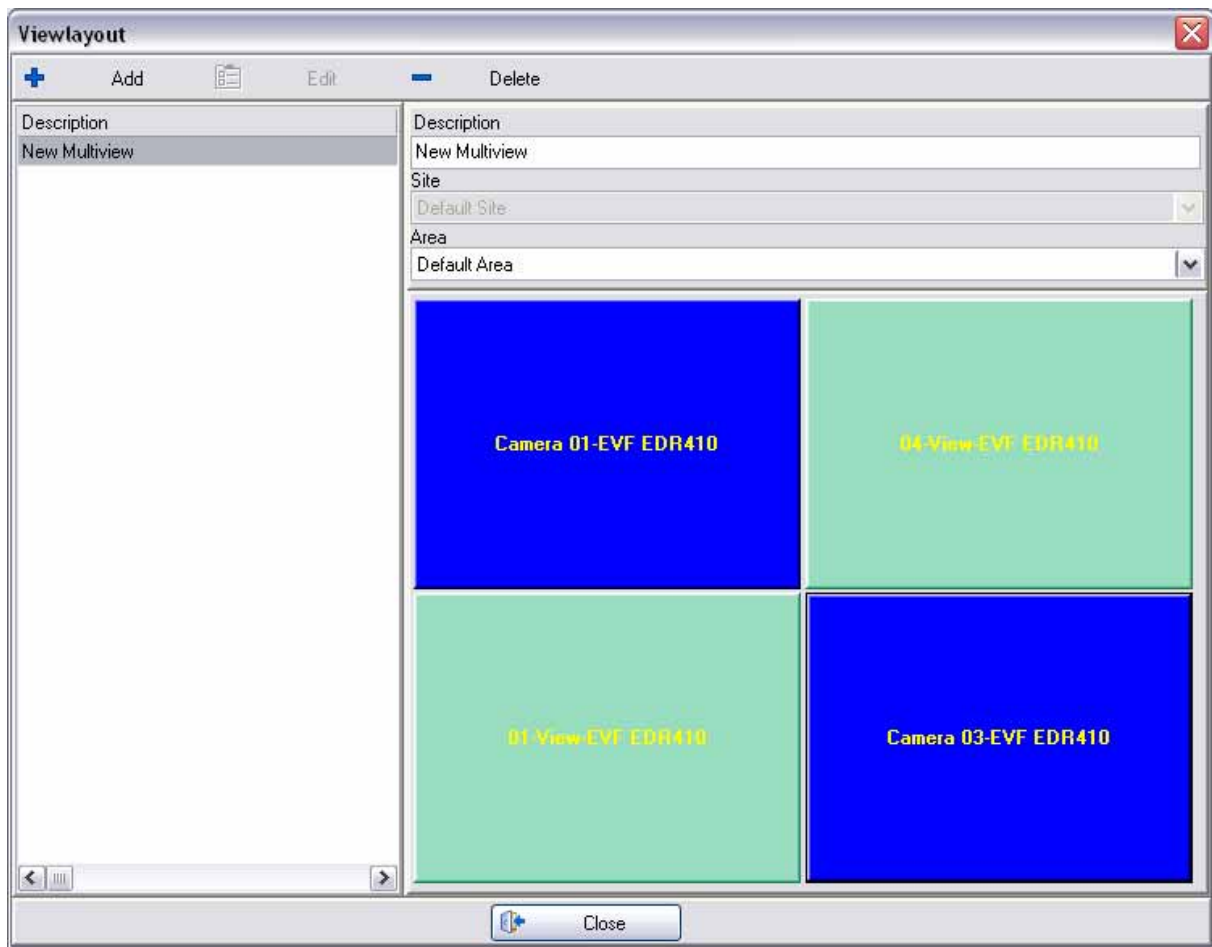

Select + **ADD** to add a new multiview and – **DELETE** to remove an existing multiview from the list.

Rename the chosen multiview in the **DESCRIPTION** field.


The **LOCATION** field cannot be modified as the multiview is automatically assigned to the location where it is added. Despite this restriction, multiviews can also be created cross-side.

In the **AREA** field, select the area the multiview belongs to from the pulldown menu.

Click once into the requested screen part to choose either the camera or the view from any installed DVR in this location to be displayed from the context menu.

Having defined all multiviews, select **CLOSE** to leave the multiview configuration and return to the main menu.

Select **SEQUENCES** to enter the sequence setup menu.

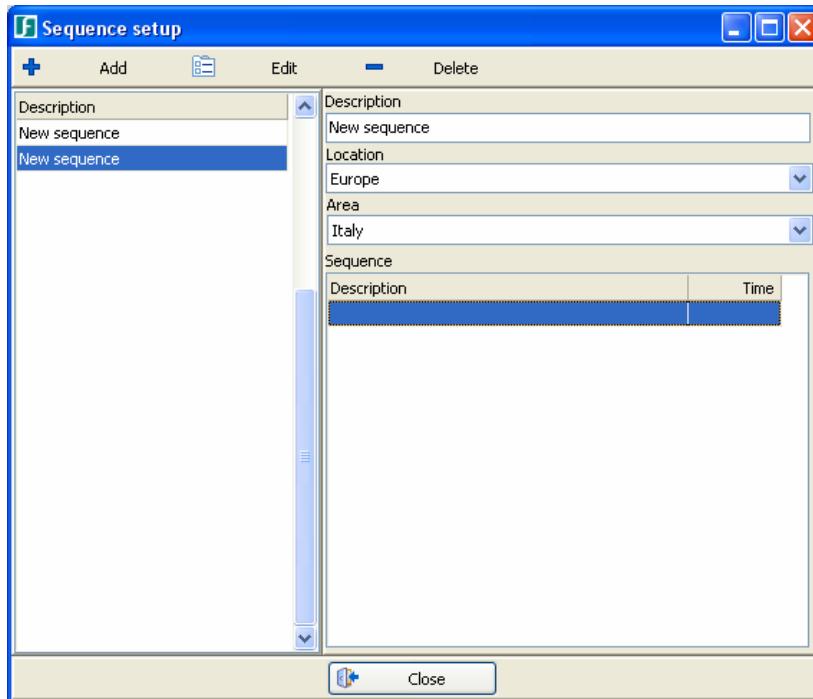

All available sequences are listed on the left of the dialogue box.

Select + **ADD** to create a new sequence and - **DELETE** to remove an existing sequence from the list.


Select an existing sequence to change the settings.

Rename the chosen sequence in the **DESCRIPTION** field.


In the **LOCATION** field, select the location the sequence belongs to from the pulldown menu.

In the **AREA** field, select the area the sequence belongs to from the pulldown menu.

Within the **SEQUENCE** field, highlight the **DESCRIPTION** line and select + **ADD** to add new sequence entries.

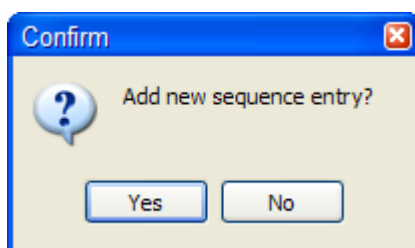

Confirm with **YES** to open the sequence detail editor.

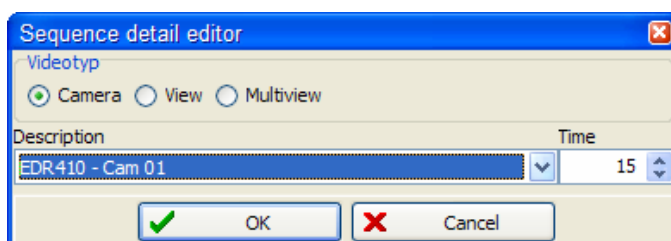


Within the sequence detail editor, choose whether the sequence entry is a single camera, a view or a multiview. Depending on your choice, the respective cameras, views or multiviews are available from the pulldown menu – independent of the location, area and DVR they are assigned to. Select the requested dwell time for this sequence segment by using the up and down arrows.

After confirming your choice with **OK**, the sequence entry will be displayed in the **SEQUENCE** field.

Having defined all sequences, select **CLOSE** to leave the sequence configuration and return to the main menu.

Select **OTHER** to enter the external programs' setup.

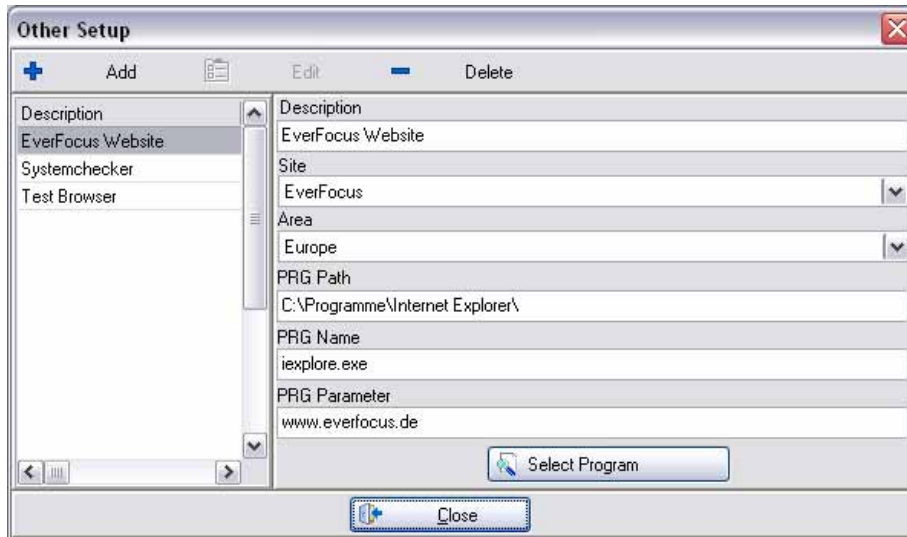

Next to external cameras, PowerCon 4.1 also offers the possibility to embed the start of any external program.

All available external programs are listed on the left of the dialogue box.

Select + **ADD** to add a new external program.

Select - **DELETE** to remove an external program.

Select an existing program to change the settings.

Rename the chosen program in the **DESCRIPTION** field.

In the **LOCATION** field, select the location in which the program shall be placed from the pulldown menu.

In the **AREA** field, select the area in which the program shall be placed from the pulldown menu.

Select **SELECT PROGRAM** to select the path of the external program. Confirm your choice with **OPEN** to transfer the data.

In the **PRG PATH** field, the program's path is inserted automatically.

In the **PRG NAME** field, the program's file name is inserted automatically.


In the **PRG PARAMETER** field, enter further parameters, e.g. the IP address or hostname of a website.

Having added all requested external programs, select **CLOSE** to exit and return to the main menu.

**NOTE:** PowerCon 4.1 enables the start of any external program, but does not support any further functionality concerning this program. Starting an external program from PowerCon will create a new screen window and will not affect PowerCon 4.1!

## Menu bar / Tool

Select **TRAFFIC MONITOR** to instantly access the network traffic monitor:

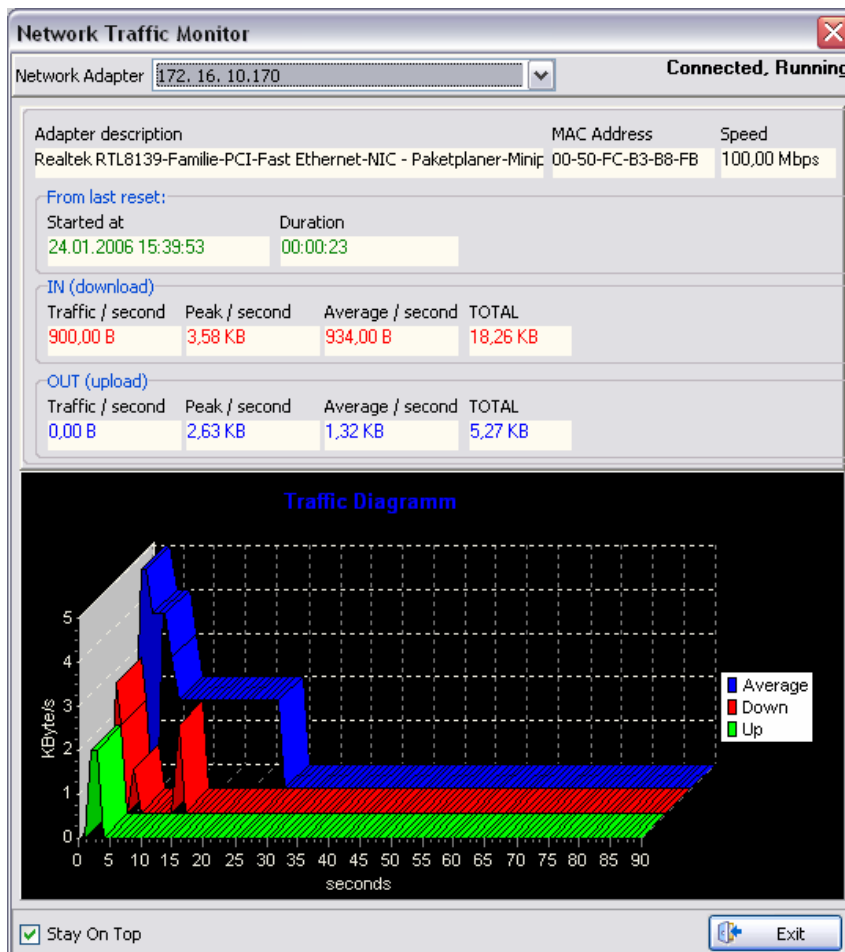

With this integrated network traffic monitor, PowerCon 4.1 enables the permanent observation of the local PC's network activity.

PowerCon automatically detects the installed network adapters on the local PC. In the field **NETWORK ADAPTER**, open the pulldown menu and select the network adapter to be monitored.

The upper right status bar shows the network adapter's connection and activity.

The next line shows the adapter's description, MAC address and speed.

In the **FROM LAST RESET** field, the start time of the traffic monitor and the time passed since application start is indicated.

The **IN (DOWNLOAD)** fields shows the downloading traffic, the **OUT (UPLOAD)** field shows the uploading traffic.

To have the traffic monitor permanently visible, activate **STAY ON TOP**. To move the traffic monitor into the background, deactivate this option. Default setting is **"Activated"**.

Select **EXIT** to close the network traffic monitor.




Select **WINDOWS LOCKER** to enter the Windows lock utility.


Default, the Windows Locker is not available in the menu.



Select **System \ Security Configuration \ Application** to activate the Windows key lock and assign the right **MENU TOOL -> WINDOWS LOCKER** to the **ADMINISTRATOR** group:

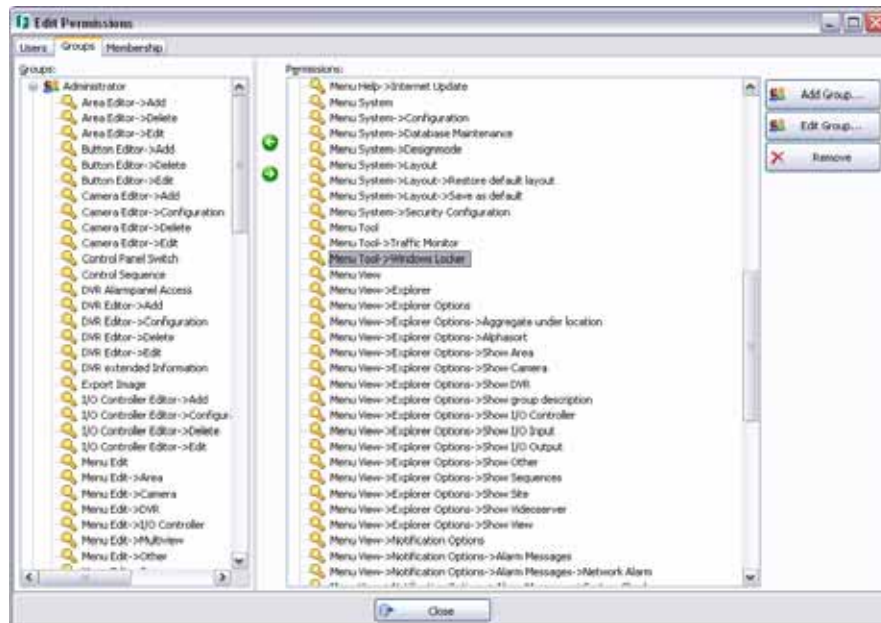

The changed setting is visible in the **TOOL** menu:

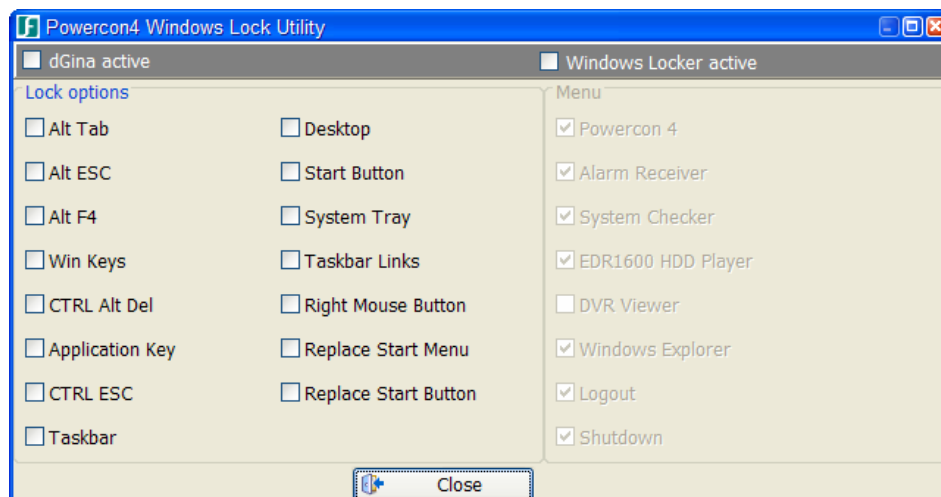

Use this module to lock certain Windows keys or shortcuts. Activate the checkbox

☒ **Windows Locker active** to activate the Windows locker.

To disable the shortcut **Ctrl+Alt+Del**, the standard login interface of the WinLogon process **MSGINA** (Graphical Identification and Authentication) must be replaced. As Windows doesn't use a firm login interface, it can be replaced by a login interface of another manufacturer. With **dGINA**, we have developed a login interface which transfers all commands - besides the shortcut Ctrl+Alt+Del - to the original MSGINA interface. Activate the **CTRL Alt Del** checkbox to install the new **dGINA** login interface automatically after a security advice. This is a one-time procedure requiring administrator rights.

Some special features:

### Start Button

By activating this checkbox, the Windows START icon can be hidden or shown in the Windows taskbar. However, the original Windows start menu remains available through the CTRL+ESC hot key and via the Win keys.

### Application key

By activating this checkbox, the application key (Windows menu key) and the hot key Shift+F10 is disabled.

### Desktop

By activating this checkbox, the Windows desktop can be hidden. All desktop icons are hidden, while the background image remains visible.

### Win Keys

By activating this checkbox, the following hot keys are locked:

Win key: Show start menu  
Win + D: Minimise or restore all windows  
Win + E: Open Windows Explorer  
Win + F: Show search dialogue  
Win + STRG + F: Show search for computers

Win + F1: Show help and support centre  
Win + R: Show execute dialogue  
Win + Pause: Show system properties  
Win + L: Lock PC  
Win + U: Open help program manager  
Win + Q: Change user

### Replace Start Button

This item is effective in combination with „Replace Start Menu“ only.

### Replace Start Menu

If activating this checkbox, it is recommended to also lock both the hot key **CTRL+ESC** and the **WIN** keys, as otherwise the original Windows start menu is further available upon activating these keys.

Select **CLOSE** to activate the Windows locker settings and to return to PowerCon 4.1.


## Menu bar / System

Select either a location or an area from the explorer to enable the **DESIGN MODE**.

Select **System\Design Mode** from the menu bar to switch to design mode.

**NOTE:** It is recommended to set up all locations, areas, cameras, DVRs, I/O controllers, sequences, views and further required external devices prior to entering the design mode. Additionally, it is helpful to assign applicable maps or floorplans to the respective areas in advance. This will ensure the most proper design possibilities.

Select the location / area to be designed by double-click to display the assigned floorplan / map in the right screen window.

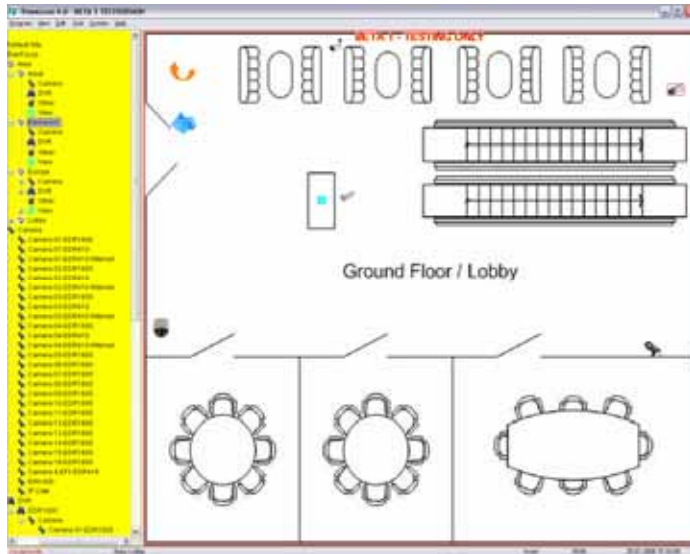

Place all objects which shall be assigned to this location / area onto the requested position within the map. There are two ways of placing objects:

1. Move the requested object by **"drag & drop"** using mouse control
2. Click right into the map and choose **EDIT OBJECTS** from the context menu. In the following dialogue, select **ADD** to add a new object to the map.


The following objects can be placed in the map:

- other areas
- cameras
- views
- I/O controllers
- sequences
- external cameras
- external programs

By right mouseclick with the mousepointer placed in the map, select

<b>EDIT OBJECTS</b>	to add, delete and configure objects in the map
<b>EXIT DESIGN MODE</b>	to close the design mode and return to normal mode
<b>HIDE EXPLORER</b>	to enlarge the map view to full screen size and close the explorer temporarily
<b>SHOW EXPLORER</b>	to scale down the map view to original screen size and show the explorer

## EDIT OBJECTS

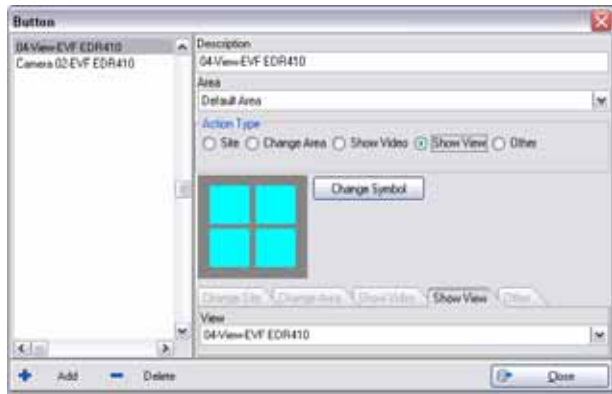

Select + **ADD** to add new objects and - **DELETE** to remove objects from the area.

Rename objects in the **DESCRIPTION** field.

Assign objects to another area using the pulldown menu.

**NOTE:** By selecting a different area, the selected object will be removed from the active area!

In the **ACTION TYPE** field, select the action to be initiated when clicking on this object as follows:

**LOCATION** displays another location which can be chosen from the pulldown menu in the **CHANGE SITE** tab.

**CHANGE AREA** displays another area which can be chosen from the pulldown menu in the **CHANGE AREA** tab.

**SHOW VIDEO** choose the single camera to be monitored in the remote monitor from the pulldown menu in the **SHOW VIDEO** tab.

**SHOW VIEW** choose the view to be monitored in the remote monitor from the pulldown menu in the **SHOW VIEW** tab.

**SHOW SEQUENCE** choose the sequence to be monitored in the remote monitor from the pulldown menu in the **SHOW SEQUENCE** tab.

**OTHER** choose the external program to be started from the pulldown menu in the **OTHER** tab.

To optically differentiate the objects placed in the area from each other, select **CHANGE SYMBOL** to replace the standard symbol by another icon. There are several icons available which are automatically added when installing PowerCon 4.1 and which can be found in the PowerCon 4.1 program directory. If these icons are not suitable for your application, you may import any other JPEG or BMP graphic file from your local drive.

Having edited all objects, select **CLOSE** to leave the objects' configuration menu.


Repeat this procedure for all locations and areas where objects need to be placed.

For further information on the PowerCon 4.1 design mode, please refer to the sample project described in chapter "Sample project: Setup of LOCATIONS and AREAS"

After arranging all required objects, open the context menu by right mouseclick and select **EXIT DESIGN MODE** to leave the design mode and return to normal operation mode.


Select **CONFIGURATION** to enter the system configuration dialogue.

#### Tab "Explorer"

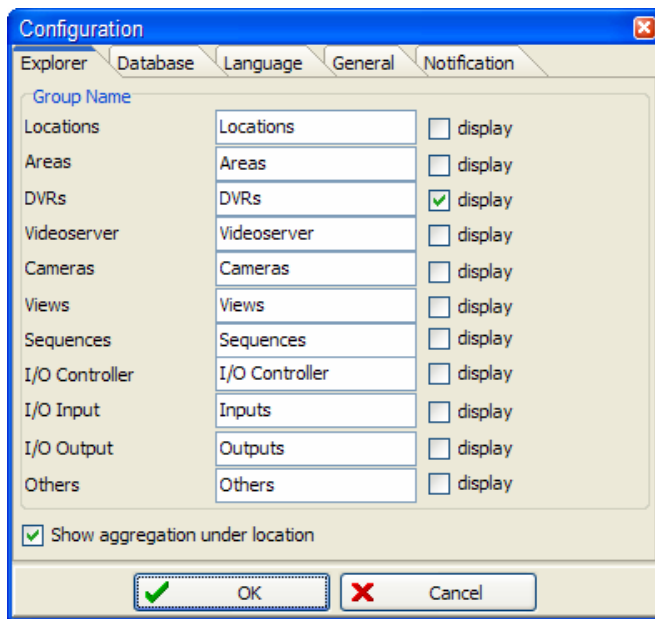

The standard explorer items are named: Locations / Areas / DVRs / Cameras / Views / Sequences / I/O Controller / I/O Input / I/O Output / Others. Use this tab to customize the items to your personal needs.

#### Tab "Database"

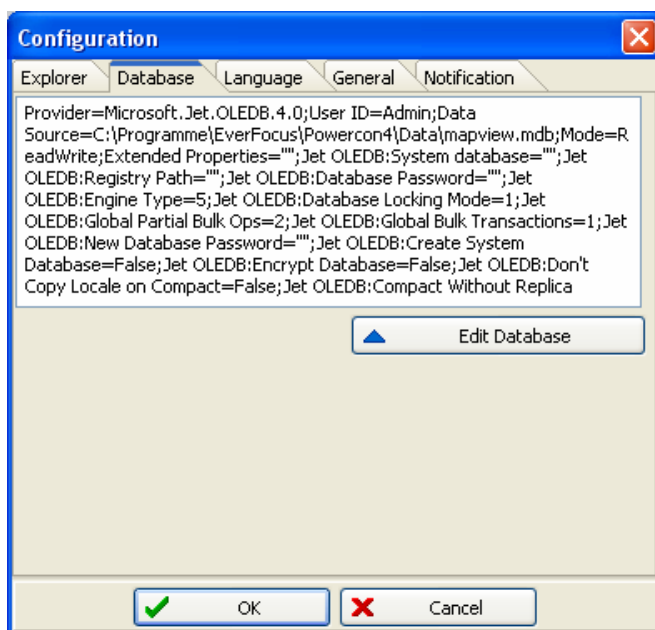


The window shows the currently used database.

**ATTENTION:** Changes in the database settings should only be conducted by experienced administrators with enhanced database management knowledge. For standard single user installations, no changes are required in this menu!


A change in the database file path is only required if several users require access to the same database. Therefore, the database has to be hosted on a server.

"Edit Database" opens a new window:

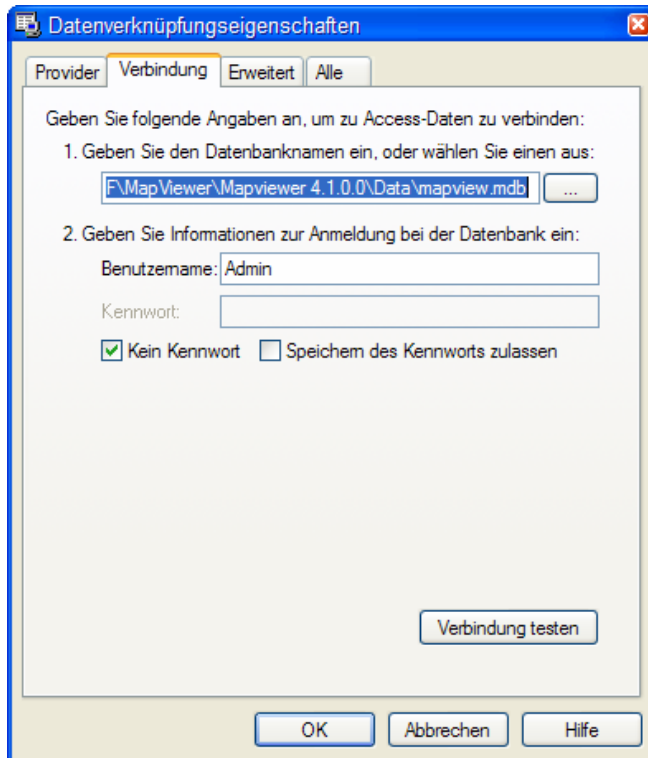


The language of the database connection string dialogue depends on the language of the installed windows system. For details and help to create and modify database connection strings, use the help database of the operating system.

Tab "Language"

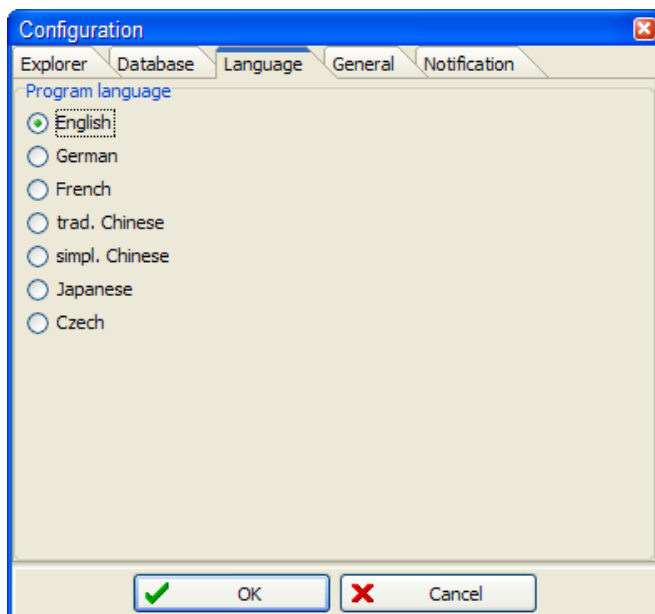

Select one of the program languages available for PowerCon 4.1.

## Tab "General"

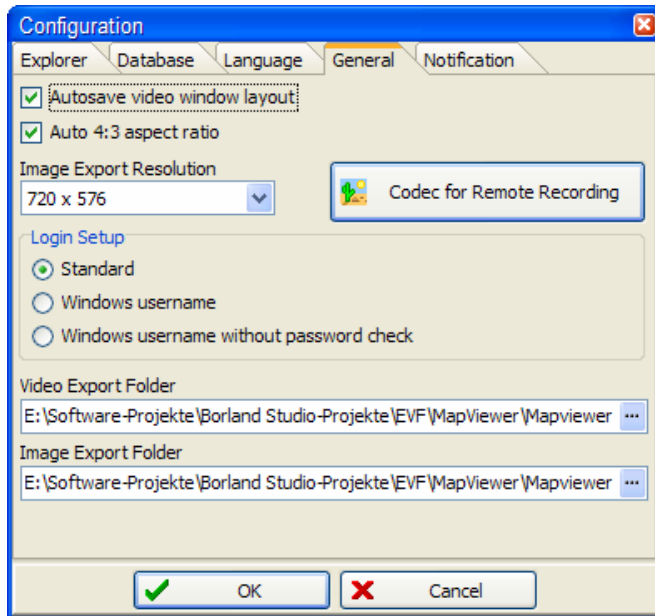

### **Autosave video window layout**

Activate this checkbox to save the video windows' positions upon program shutdown. Upon program restart, all video windows of remote connections will be displayed at the same position of the screen.

### **Auto 4:3 aspect ratio**

Activate this checkbox to display all remote video windows in 4:3 aspect ratio. If activated, it is no longer possible to resize the remote video window different from 4:3 aspect ratio.

### **Image Export Resolution**

Select the image resolution with which images are exported to local directory from the pulldown menu. Available resolutions are:

176x144 / 352x240 / 352x288 / 640x480 / 720x480 / 720x576 / 800x600 / 1024x768 / 1280x1024.

### **Login setup / Standard**

Select this item to make use of the user names and passwords defined in the "User rights management".

### **Login setup / Windows username**

User names can be chosen according to the users' common Windows user name. With this setting, the Windows user name will be inserted in the login screen and the user must only enter his password.

**NOTE:** The Windows user name must also be set up in the "User rights management".

### **Login setup / Windows username without password check**

Same setting as above, but without additional password entry. Login details are verified automatically by means of the users' Windows login details.


### **Video export folder**

Enter the directory path for recorded and archived video sequences (format: \*.avi files for remotely recorded videos; \*.arv files for archived videos). Default path is: \Folder\Powercon4\Video\Export.

### **Image export folder**


Enter the directory path for saving still images (format: \*.jpg files). Default path is: \Folder\Powercon4\Image\Export.

"Codec for Remote Recording" opens a new window:

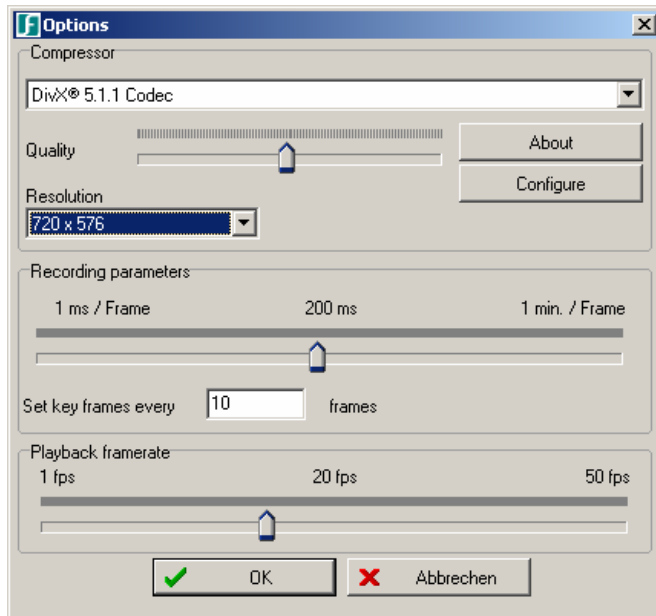

All video codecs installed on the PC are listed under "**Compressor**". The available options and settings for framerate, picture size and quality depend on the employed type of codec. There is no general rule for an optimal setting; this depends amongst others on the available PC system performance. Comprehensive codec settings guides are available for download on the DivX homepage [www.divx.com/support](http://www.divx.com/support).

Tab "**Notification**"

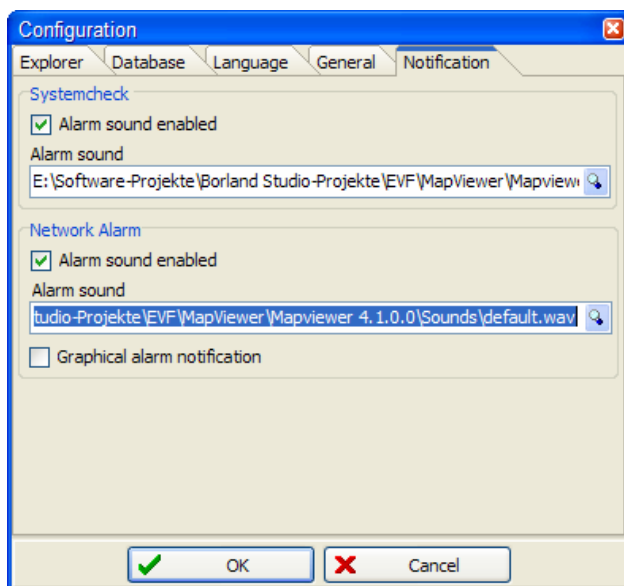

Use the checkboxes to enable / disable alarm sounds for system checks and network alarms. The default setting for both events is "**Enabled**".

If requested, enter a new directory path to any sound file in \*.wav format.

The checkbox **GRAPHICAL ALARM NOTIFICATION** is related to utilisation of the I/O controller EPS 100. For further information, please refer to the related chapter of this manual.

Select **LAYOUT** to either save the current program layout as default setting or to load the default program layout after changing the layout.



## User rights management

The PowerCon user rights management allows for setting up individual user rights for program functions or access to connected CCTV systems.

Users with similar user rights can be combined in user groups.


The setup is splitted in 2 parts:

**Application:** related to program functions

**Restricted access:** related to installed CCTV systems

### Application User Rights Management

Menu bar > Security configuration > Application

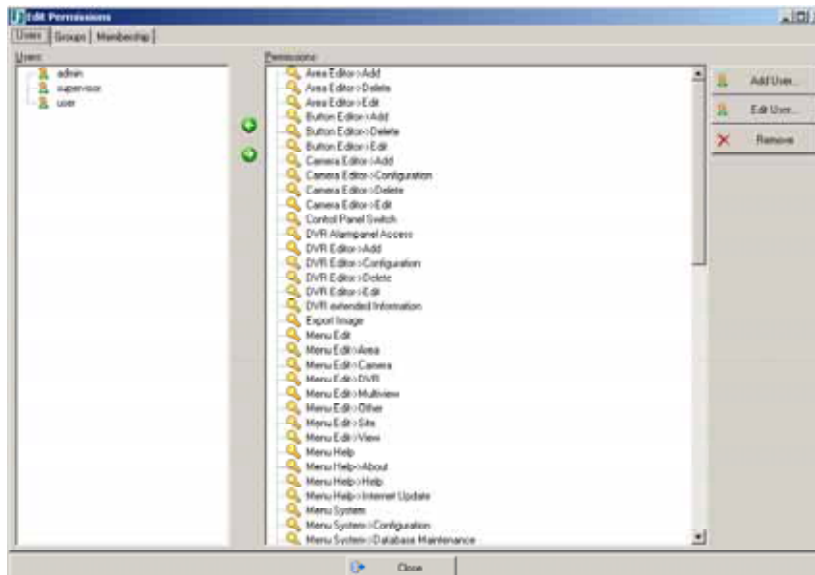


In default setting, 3 users (admin, supervisor, user) are pre-set.

"**admin**" has access to all program functions, "**supervisor**" and "**user**" have no access rights to program functions.

### Creating new user

Select "**Add User**" :

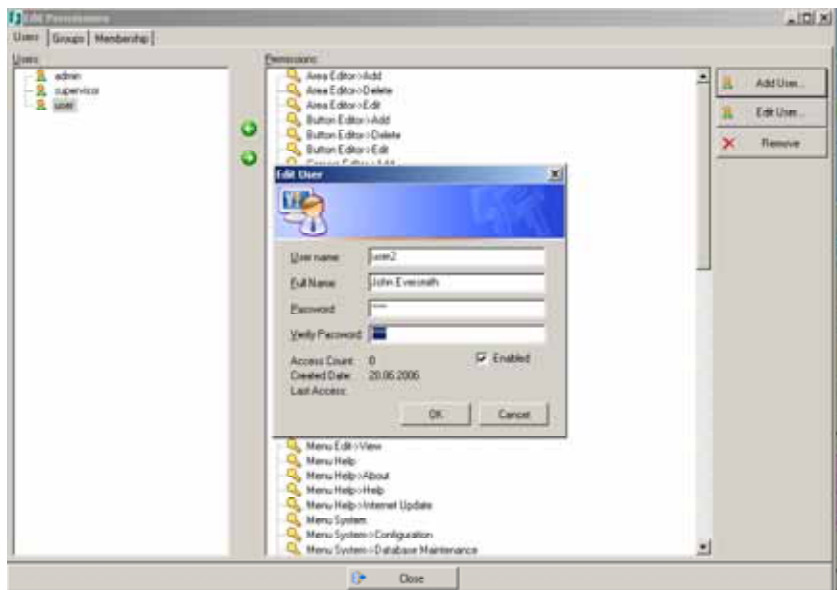


After entering user name, full name and password, select "**OK**" to save the settings.

## User rights assignment

There are 2 ways to assign user rights in this menu - either by assigning individual user rights or by employing user groups:


### 1. Individual user rights assignment:

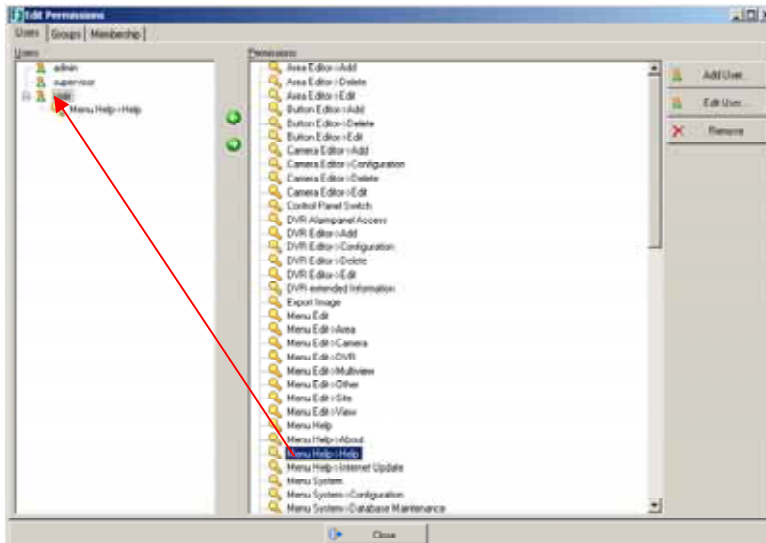

Use "**Drag and drop**" to assign a program function to the user in the list on the left. Alternatively, the green arrows between the two lists can be used.

### 2. Access rights management in user groups

Select the "**Groups**" tab:

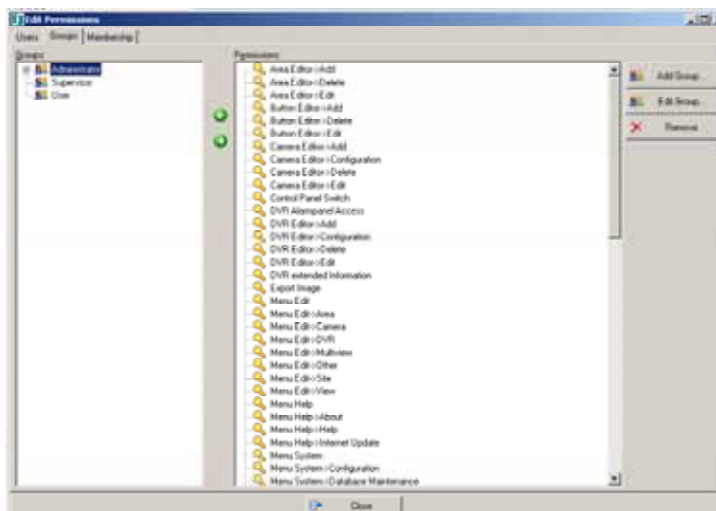


In default setting, 3 user groups are defined:

**Administrator:** all program functions  
**Supervisor:** no functions  
**User:** no functions

Use "**Drag and drop**" to assign a program function to the group in the list on the left. Alternative, the green arrows between the two lists can be used, also for removing functions.

## Group membership

For working with user groups, all users have to be assigned to a user group. Select the "**Membership**" tab to set up group members:

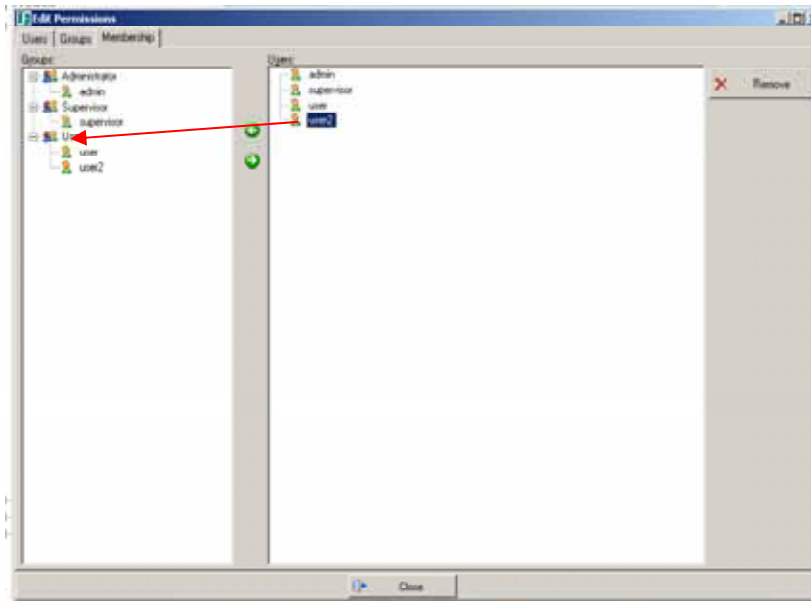

Use "**Drag and drop**" to assign a user to one of the groups in the list on the left. Alternatively, the green arrows between the two lists can be used, also for removing users from a group.


## System Access Rights Management

Independently of the user rights for functions, PowerCon provides an access right management for all installed CCTV systems.

### Menu bar > Security configuration > Restricted Access:


In default setting, all users have access to all installations. For blocking access to a view, camera or area, use "**Drag and drop**" to move the restricted item from the "**Record**" list on the right to the related user on the left.

This restrictions can be set for individual users (tab "**Users**") or for complete user groups (tab "**Groups**").

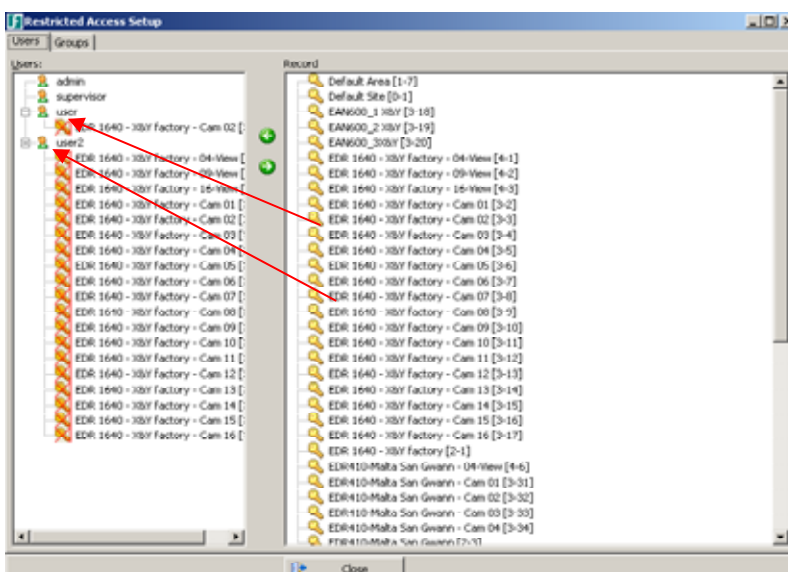

## Database maintenance

Select **DATABASE MAINTENANCE** to reorganize the database.

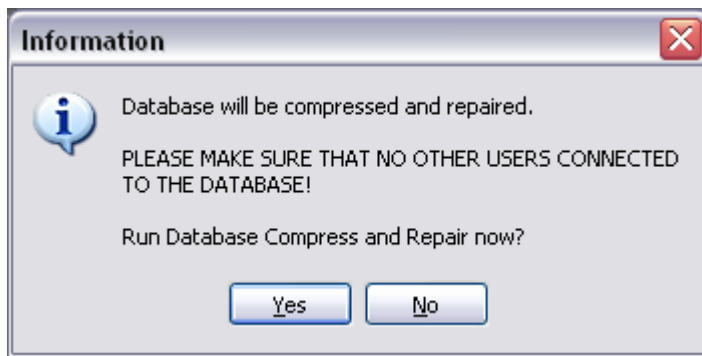


## Menu bar / Help

Select **HELP** to enter the online help file.

**NOTE:** The program ADOBE ACROBAT 7.0 must be installed on your computer to enable the help file function.

## Internet update

Select **INTERNET UPDATE** to check online for current program updates.

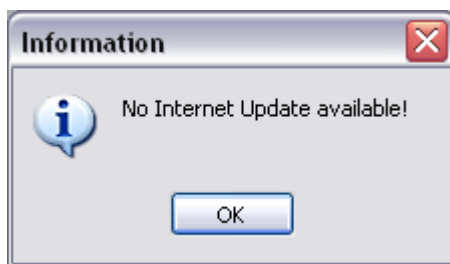

## About

Select **ABOUT** to check the current program version and serial number of PowerCon 4.1.




# Getting started

## DVR Setup in 10 steps


First step after installing the software is the setup of DVRs and Network cameras which are to be managed by PowerCon.

### Setup DVR connection


From the menu bar, select **EDIT > DVRs** to enter the DVR setup menu.

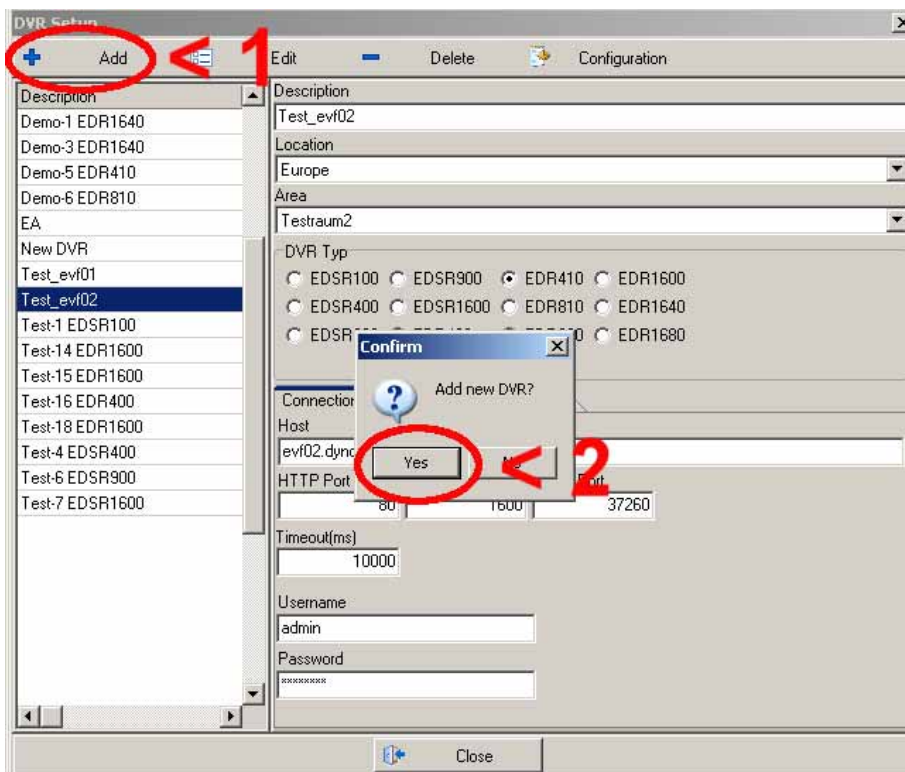

1. Select **+ ADD** to create a new DVR system in the database.
2. Confirm "**Add new DVR**" with "**YES**".

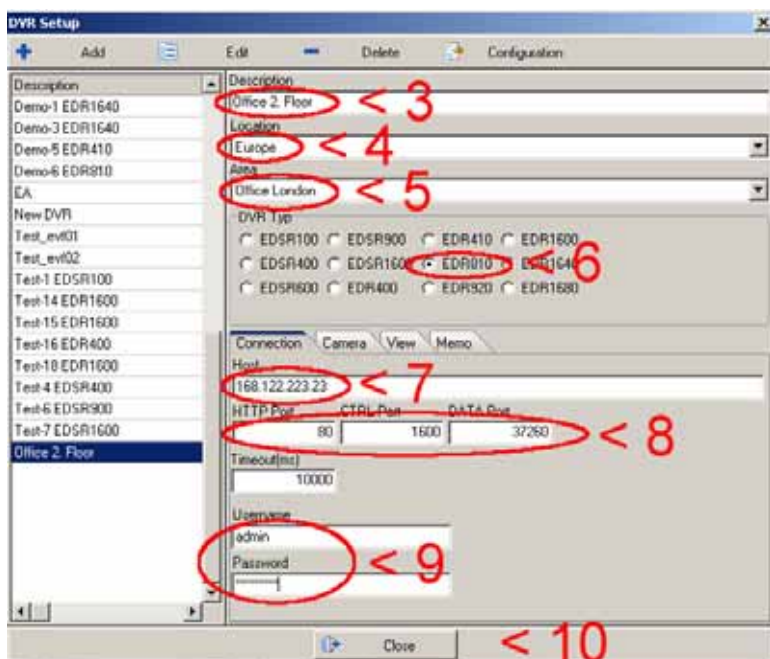

3. Enter a free DVR system description (this text appears in the explorer and is also used as default description text for **VIEWS** and **CAMERAS**).
  4. If PowerCon uses different locations for better overview on the system, select a location. If this feature is not required, keep the **DEFAULT** setting. For **LOCATION** setup, please refer to chapter "**Defining LOCATIONS**".
  5. If areas are utilized, assign the DVR system to an **AREA**. For **AREA** setup, please refer to chapter "**Defining AREAS**".
  6. Select the DVR type. After changing the DVR type, the program will ask "**Restore default Camera and View settings?**". Upon confirmation with "**YES**", the program will create a list with all **VIEWS** and **CAMERAS** available for this DVR type. The created cameras and views can be edited in the **EDIT > CAMERA / EDIT > VIEW** menus or through right mouseclick on the camera / view in the explorer: **> EDIT**. "**NO**" preserves the **VIEW AND CAMERA** list from the default DVR.
  7. Enter the IP address or web address assigned to the DVR.
  8. Enter the required ports for IP connection.  
Required ports for EverFocus DVR, please check these ports also in your firewall setting:
- |                                       |  |
|---------------------------------------|--|
| <b>EDR 1600 (from version 3.1)</b>    | Port 80, 1600, 1111                      |
| <b>EDR 400 (from version 1.3):</b>    |  |
| <b>EDR 1600/400 versions 2.xx~3.0</b> |  |
| <b>(not supported by PowerCon!):</b>  | Port 80, 1600, 1024 to 1125              |
| <b>EDSR series:</b>                   | 80, 1111, 2222, 3333, 4444, 6666         |
| <b>New EDR series (MPEG4):</b>        | default ports 80, 1600, 37260            |
|                                       | + 3 following ports                      |
|                                       | (37261, 37262, 37263)                    |
|                                       | (ports are editable in EDR network menu) |
9. Enter user name and password for network access to the DVR (setup in DVR network settings).
  10. Continue with step **(1)** to add more DVR systems or select **CLOSE** to exit DVR setup.

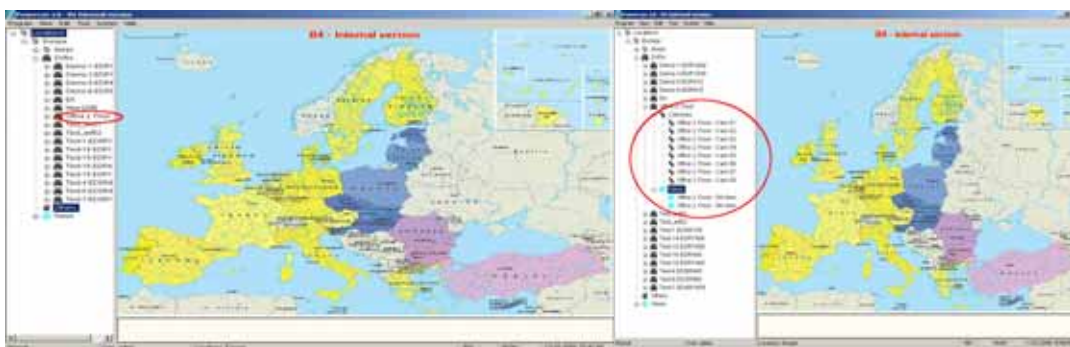


# Composition of Graphic User Interface

---

## Setup of maps and graphics

The **EXPLORER** on the left of the screen contains all installed PowerCon DVR and camera systems, available maps, graphics and other visualisations.

Select **VIEW > EXPLORER** to define which items are displayed in the list. If the user decides to work with maps and graphics only, the list can be switched off by deactivating **> EXPLORER** in the **VIEW** menu.

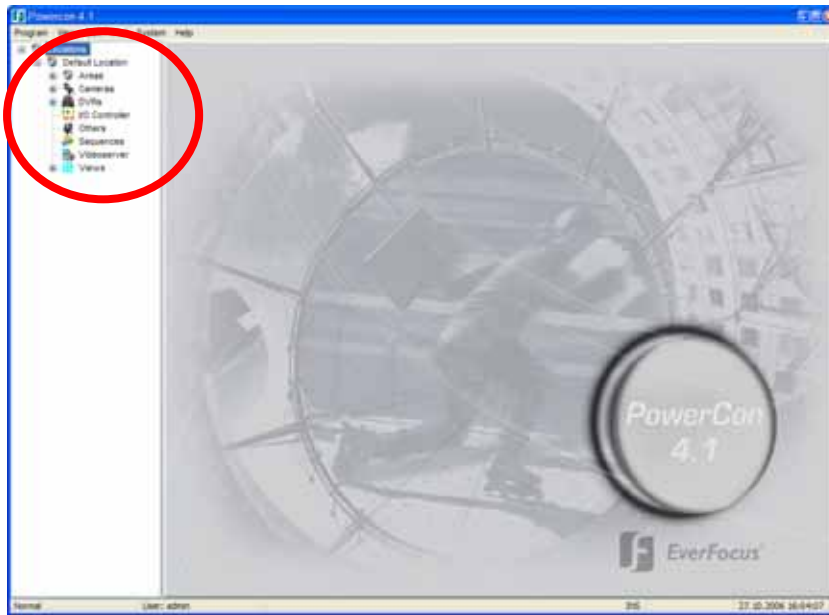

**LOCATIONS:** Superordinate level to manage multiple areas, DVRs, cameras and views.

**AREAS:** areas can be maps, building drawings or photos containing camera and DVR icons to indicate the location of the CCTV equipment. Live connection to these cameras and views can be established by simple double-click on the icon.

Areas can be linked among each other. This allows the creation of maps with zoom function or other functionalities such as "switch to next area" or further visualisations.

**CAMERAS:** Installed DVR or network cameras. DVR cameras are created automatically if a DVR is installed in the system.

**DVRs:** Installed digital recording systems. DVRs can be assigned to both a location and an area.


**I/O Controller:** Installed I/O controllers. I/O controllers can be assigned to both a location and an area.

**OTHERS:** This function allows the startup of 3<sup>rd</sup> party software applications installed on the client PC.

**Sequences:** Defined sequences. Sequences can be defined independent of the location, area and DVR they are assigned to.


**VIEWS:** DVR multiviews. Depending on DVR model, PowerCon provides 4x, 9x and 16x view. Additionally, also **MULTIVIEWS** can be defined; up to 4 systems (DVR or network camera) can simultaneously be displayed in one window.

The **EXPLORER** is structured as follows:

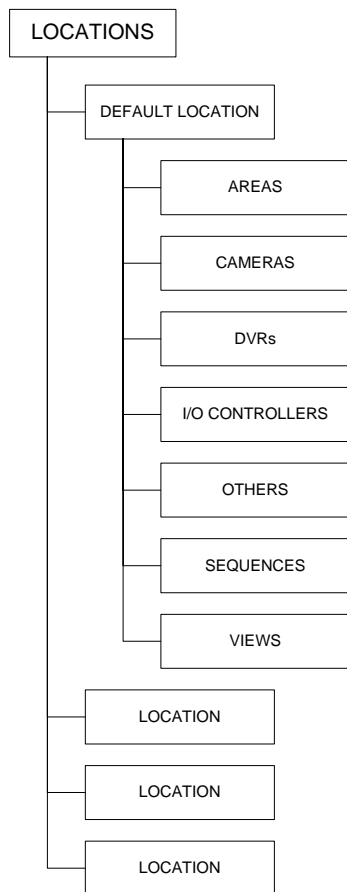

The "**DEFAULT LOCATION**" is created automatically during installation of the PowerCon software. All DVRs, cameras, I/O controllers, sequences, views and others not assigned to specific locations are allocated under the default location.



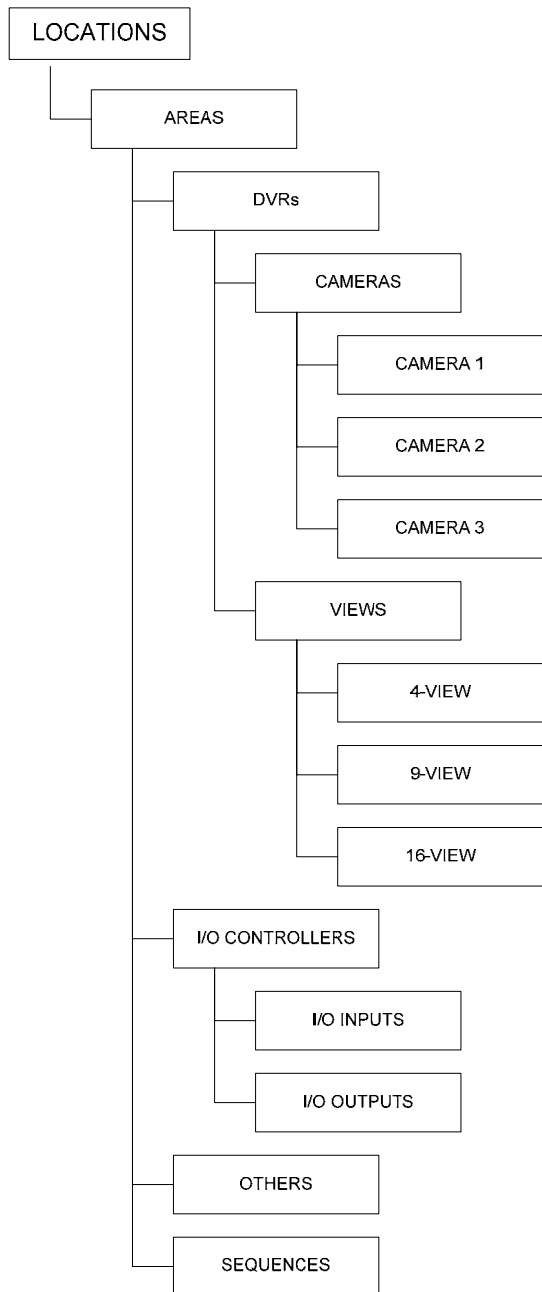

DVRs, cameras, I/O controllers, sequences, views and others assigned to specific locations and areas will be listed under these locations and areas.

# Sample project: Setup of LOCATIONS and AREAS

The setup of **LOCATIONS** and **AREAS** and the assigned video systems should be done in the following order:

## 1: LOCATIONS

## 2: AREAS


## 3: DVRs, CAMERAS, OTHERS

In order to simplify the setup, the following sample project installation is utilized:

### 3 installation sites in Europe:

- 1: 1 x EDR1640 and 3 EAN600 network cameras, located in a factory in Rome
- 2: 1 x EDR810, installed in EverFocus Europe office, Showroom
- 3: 1 x EDR410, installed in an office building in Sliema, Malta


The sample project will have the following PowerCon structure:

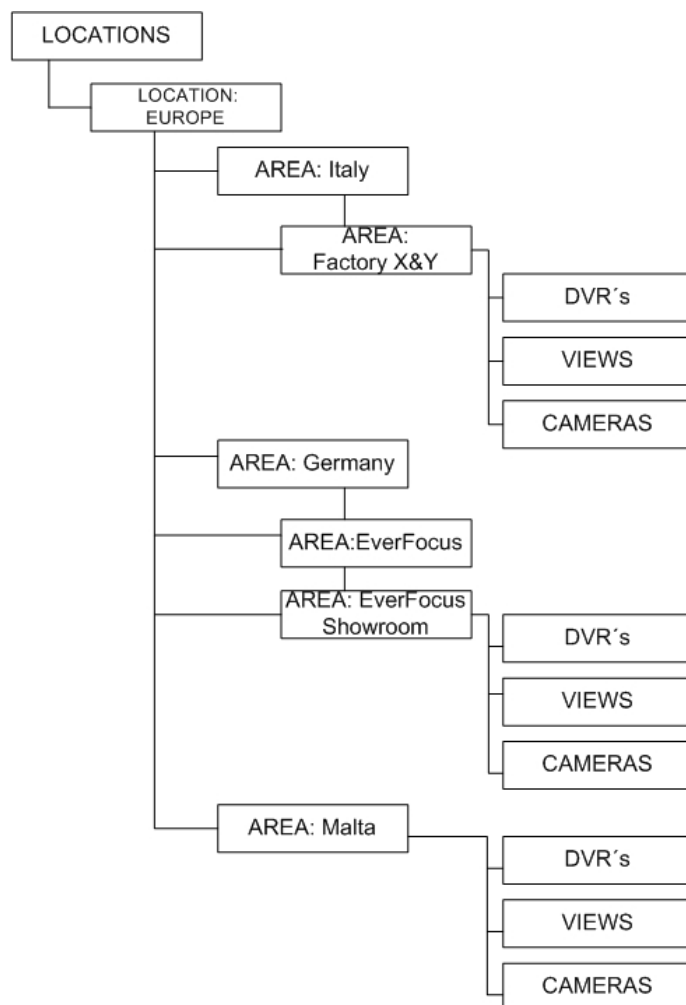

## Step 1: Defining LOCATIONS

All 3 installation sites shall be integrated in the location "**EUROPE**":

**MENU BAR > EDIT > LOCATIONS:**

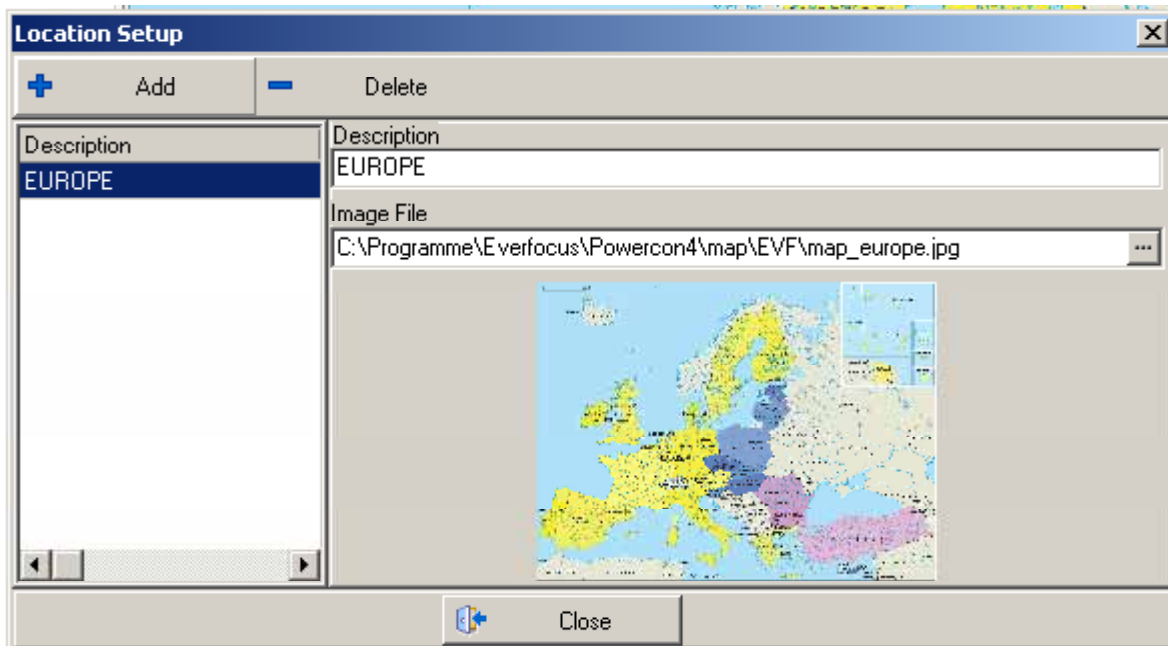

Enter the location description (name) and the file path of the image file. For image files, \*.bmp and \*.jpg file formats are supported. Picture size will be adjusted to the window size available in the program.

**ATTENTION:** Please consider the aspect ratio of the image file. If working with the explorer, an aspect ratio of 1:1 is recommended. Without using the explorer, an aspect ratio of 4:3 is recommended.


After having finished, select **CLOSE** to leave the location setup. Settings will be saved automatically.

## Step 2: Defining AREAS

### System 1:

2 x EDR1640 and 3 EAN600 network cameras located in a factory in Rome


MENU BAR > EDIT > AREAS

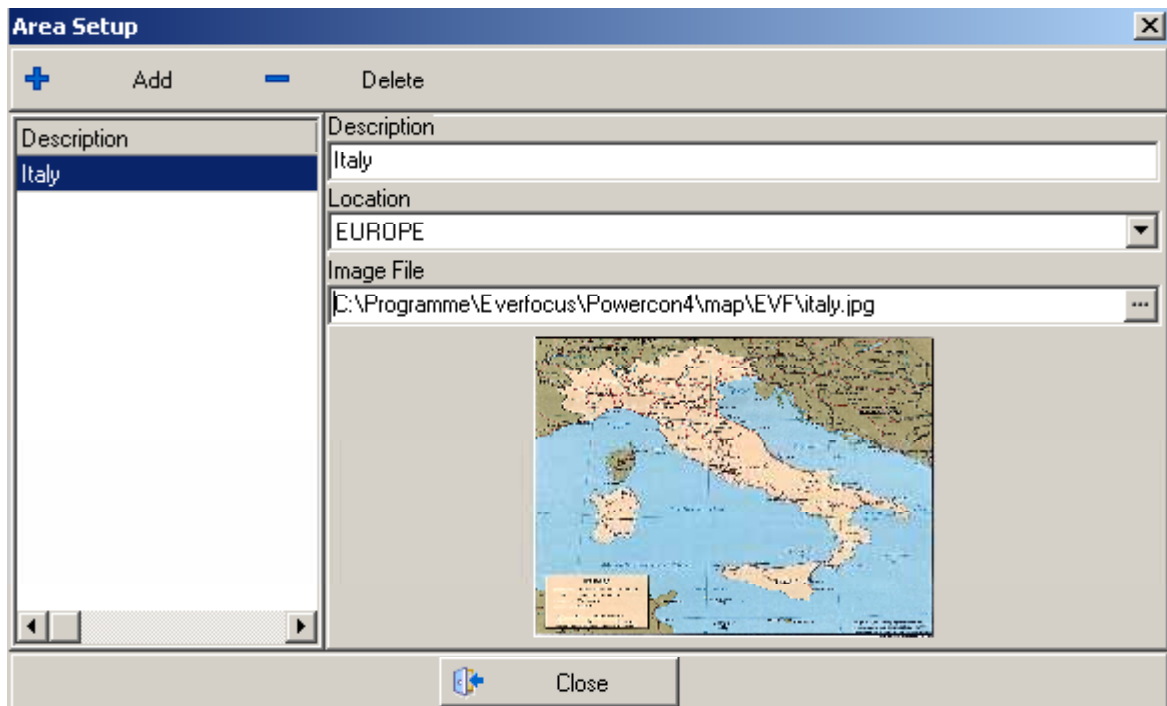

An area "**Italy**" is created, assigned to the location "**EUROPE**".

For better visualisation, the CCTV system shall be displayed in a drawing of the factory site:

Select "+ **Add**" and confirm with "**YES**" to create a new area:

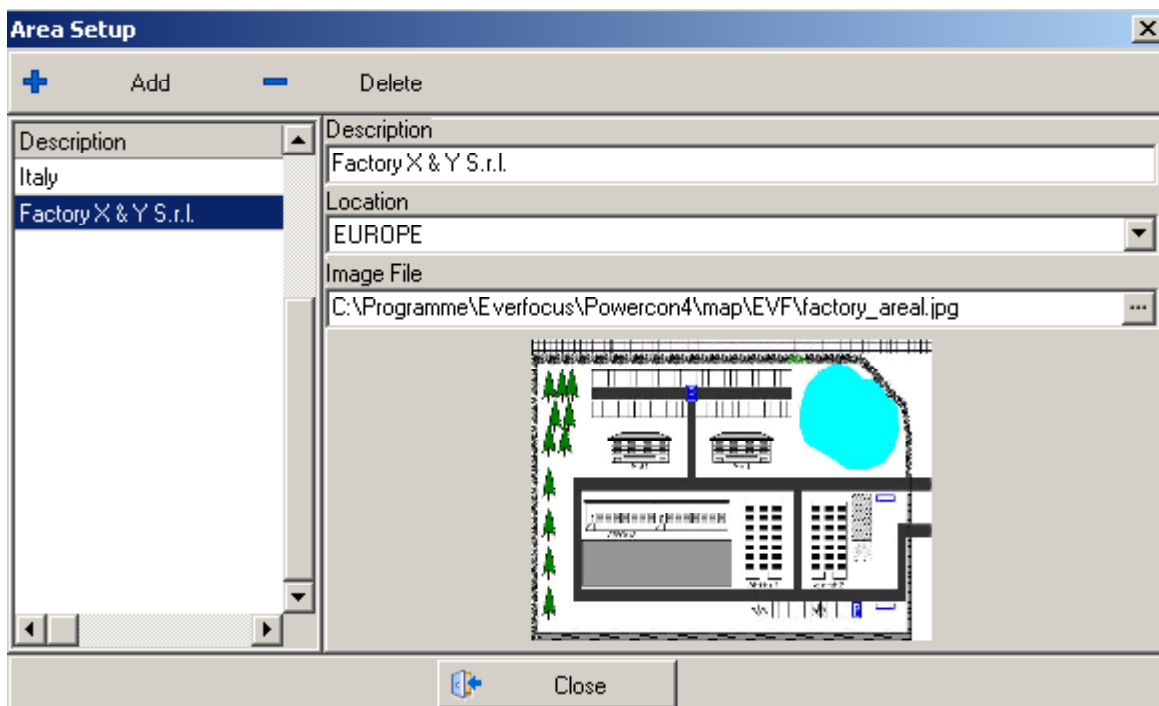

Enter the description, the related location and the file path of the drawing.


Select "+ Add" again to create the area of the second system:

### System 2:

#### 1 x EDR810 installed in EverFocus Europe showroom


The system shall be visualized with a map of Germany and photos of the installation site:

#### a) Map of Germany

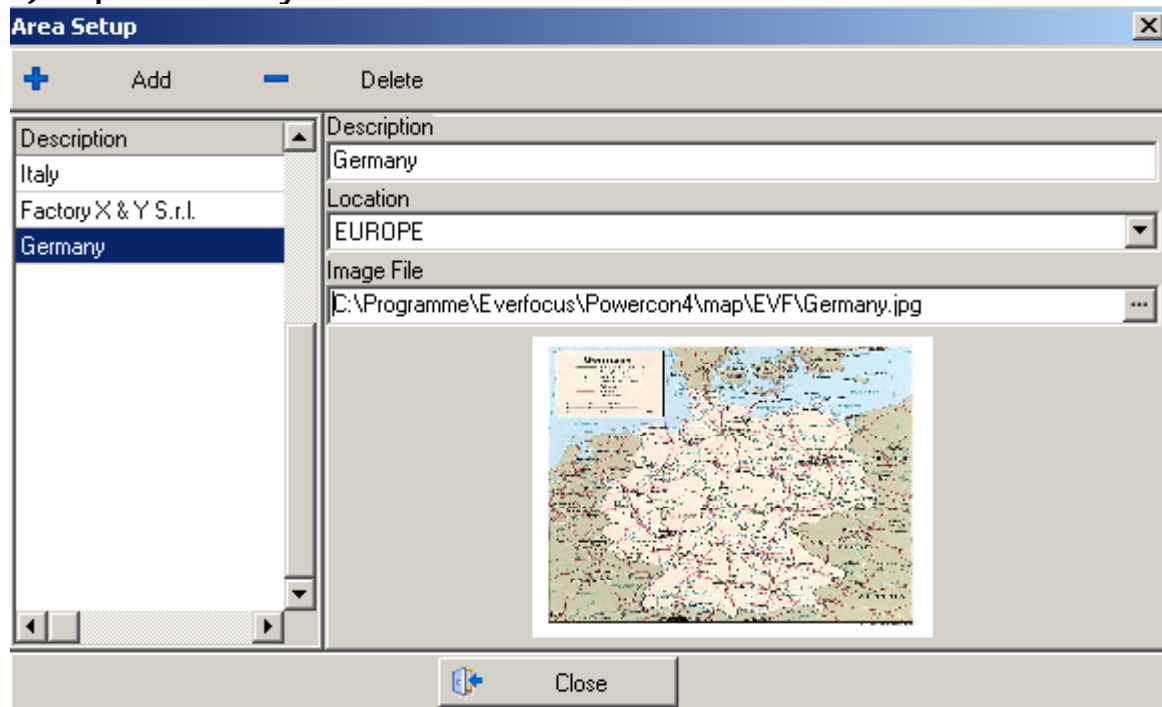


> "Add":

#### b) EverFocus building:

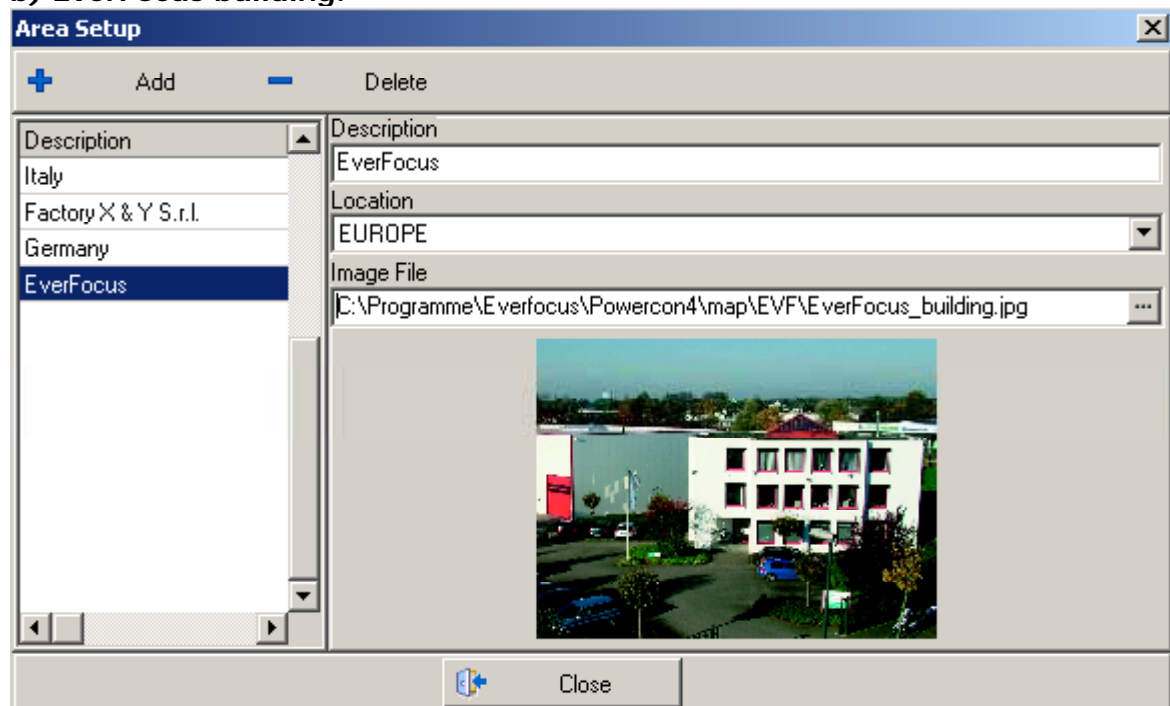

> "Add":

c) EverFocus showroom:

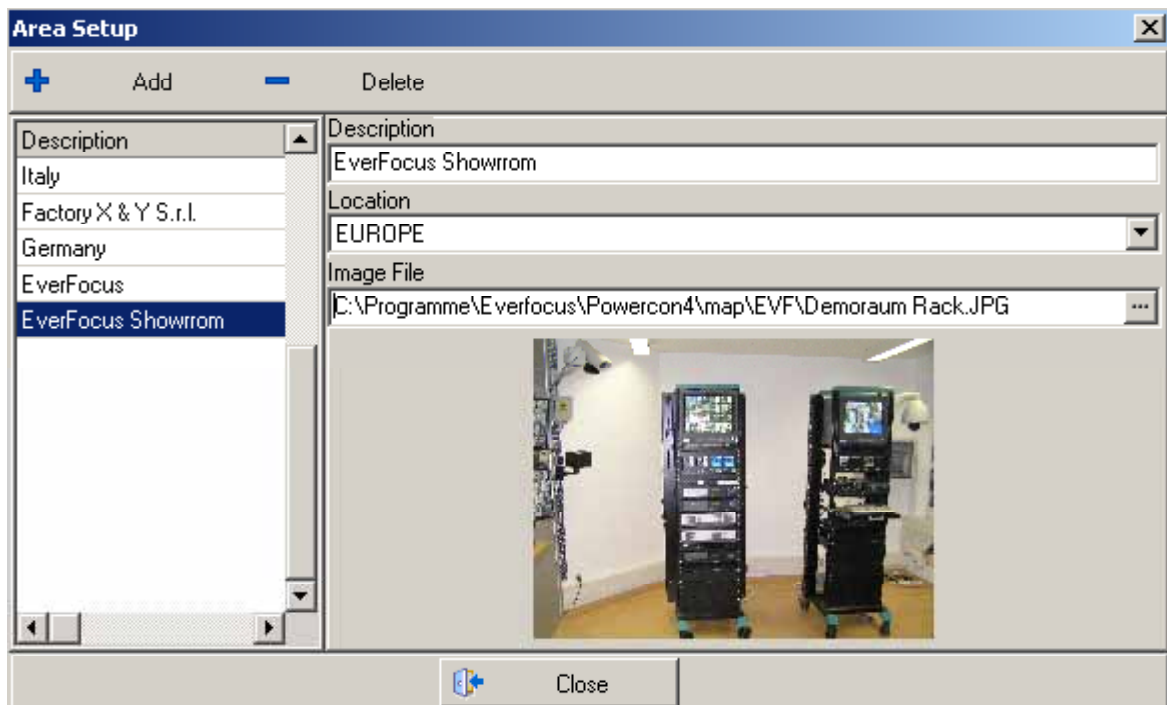


Select "+ Add" again to create the area of the third system:

**System 3:**


**1 x EDR410 installed in an office building in San Gwann, Malta**

The videostream of this system shall be displayed by simple click on an icon placed in the map of Malta.

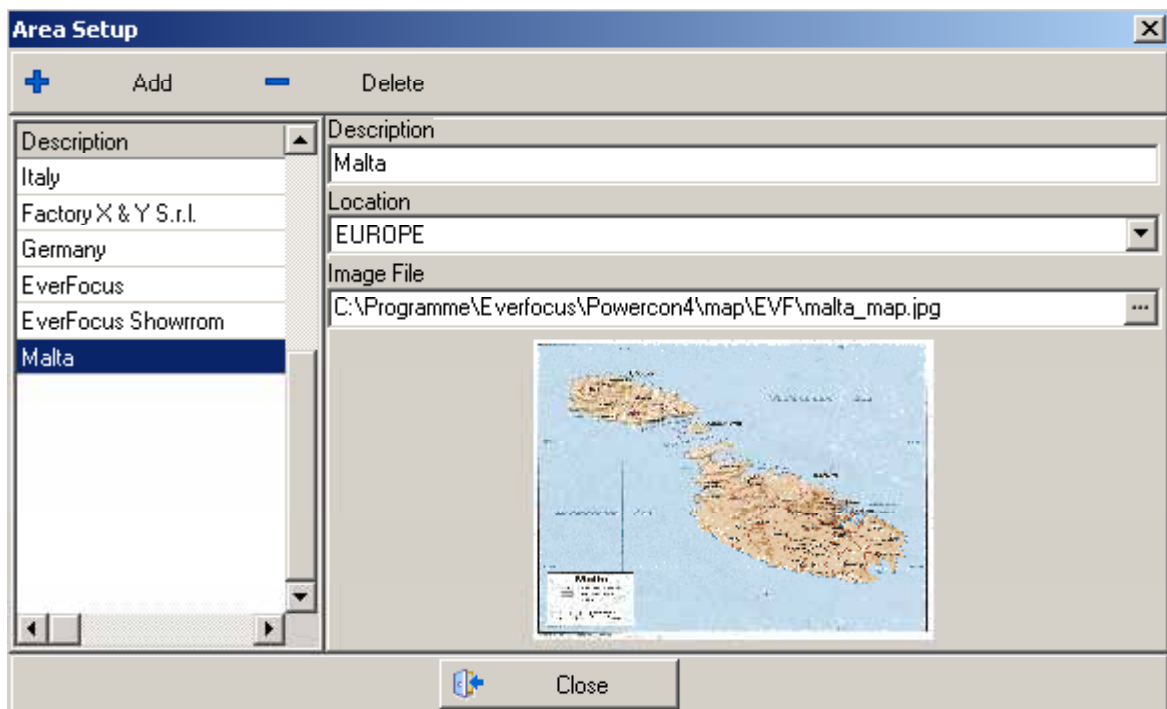

Finish the area setting with "CLOSE"

All created areas are listed in the **EXPLORER**:

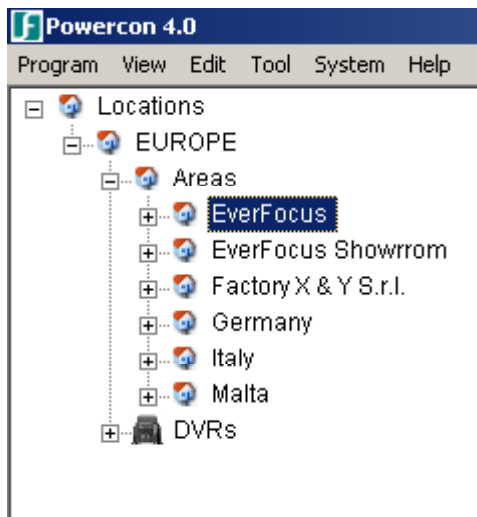

### Step 3: Defining DVR systems and cameras

All required DVRs and network cameras are defined with


**MENU BAR > EDIT > DVR**

and

**MENU BAR > EDIT > CAMERAS**

System 1: 1 x EDR1640 and 3 EAN600 network cameras located in X&Y factory in Rome


**MENU BAR > EDIT > DVR**

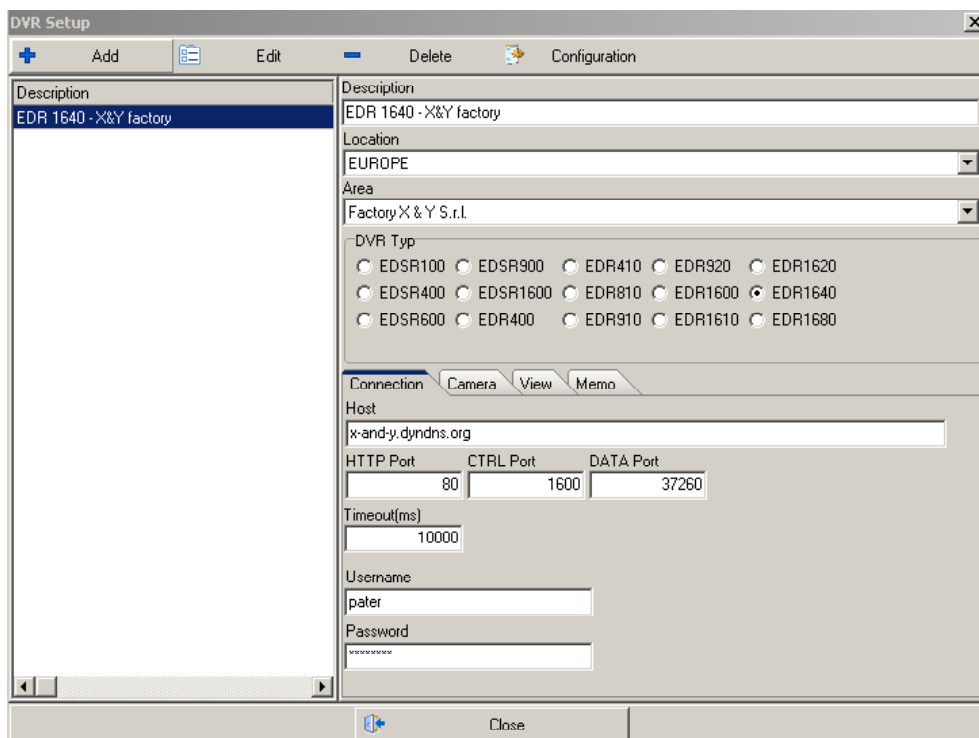

Set the location to "**EUROPE**", the area to "**FACTORY X&Y s.r.l.**" and enter the remaining DVR settings. For DVR settings details, please refer to chapter "**DVR Setup**".

3 x EAN 600 network cameras:  
**MENU BAR > EDIT > CAMERAS**

The list already contains the automatically installed EDR1640 cameras:

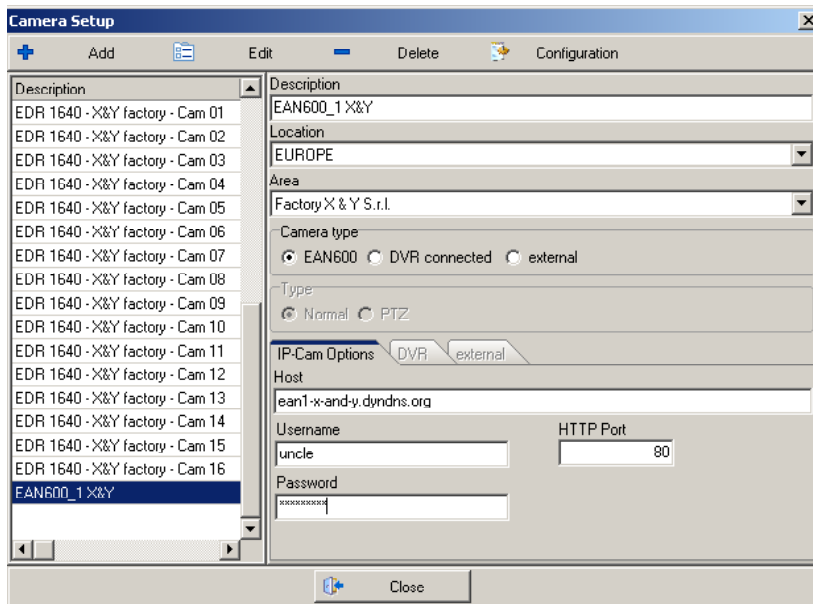

> **" + Add"**

Select **"EAN600"**, set the location to **"EUROPE"**, the area to **"Factory X&Y S.r.l."** and enter the remaining camera settings.

For EAN600 setup details, please refer to chapter **"camera setup"**.

> **" + Add"**

Enter the settings for the cameras **EAN600\_2X&Y** and **EAN600\_3X&Y**.

Finish the settings with **"CLOSE"**



System 2: 1 x EDR810 installed in EverFocus Europe showroom

## MENU BAR > EDIT > DVR

DVR Setup

Add Edit Delete Configuration

Description: EDR 1640 - XGV factory, EDR810-Emmerich

Description: EDR810-Emmerich

Location: EUROPE

Area: EverFocus Showroom

DVR Type: ☐ EDSR100 ☐ EDSR900 ☐ EDR410 ☐ EDR920 ☐ EDR1620 ☐ EDSR400 ☐ EDSR1600 ☒ EDR810 ☐ EDR1600 ☐ EDR1640 ☐ EDSR600 ☐ EDR400 ☐ EDR910 ☐ EDR1610 ☐ EDR1680

Connection Camera View Menu

Host: emmer810.dyndns.org

HTTP Port: 80 CTRL Port: 1600 DATA Port: 37260

Timeout(ms): 10000

Username: user2

Password: [redacted]

Close

Set the location to "**EUROPE**", the area to "**EverFocus Showroom**" and enter the remaining DVR settings. For DVR settings details, please refer to chapter "**DVR Setup**".

Select "+ **Add**" again to set up the third system:

System 3: 1 x EDR410 installed in an office building in Sliema, Malta

DVR Setup

Add Edit Delete Configuration

Description: EDR 1640 - XGV factory, EDR810-Emmerich, EDR410-Malta San Gwann

Description: EDR410-Malta San Gwann

Location: EUROPE

Area: Malta

DVR Type: ☐ EDSR100 ☐ EDSR900 ☒ EDR410 ☐ EDR920 ☐ EDR1620 ☐ EDSR400 ☐ EDSR1600 ☐ EDR810 ☐ EDR1600 ☐ EDR1640 ☐ EDSR600 ☐ EDR400 ☐ EDR910 ☐ EDR1610 ☐ EDR1680

Connection Camera View Menu

Host: dedia@macros.dyndns.lv

HTTP Port: 80 CTRL Port: 1600 DATA Port: 37260

Timeout(ms): 10000


Username: esprit

Password: [redacted]

Close

Set the location to "**EUROPE**", the area to "**Malta**" and enter the remaining DVR settings. For DVR settings details, please refer to chapter "**DVR Setup**".

All required settings are done, all configured systems are listed in the explorer:

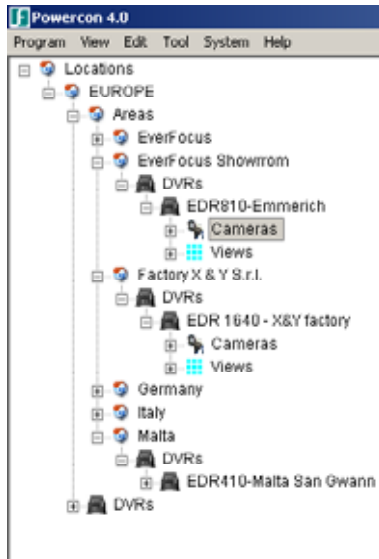

#### Step 4: Linking locations, areas, DVRs and cameras in design mode


In the **DESIGN MODE**, all logical links between LOCATIONS, AREAS, DVRs, CAMERAS and OTHERS can be defined.

The links should be set hierarchically: **LOCATIONS > AREAS > DVRs/CAMERAS**.


#### LOCATION "EUROPE"

Select location "**EUROPE**" and switch to **DESIGN MODE**:  
**MENU BAR > SYSTEM > DESIGNMODE**

The background colour of the **EXPLORER** will switch to yellow as long as **DESIGN MODE** is active.

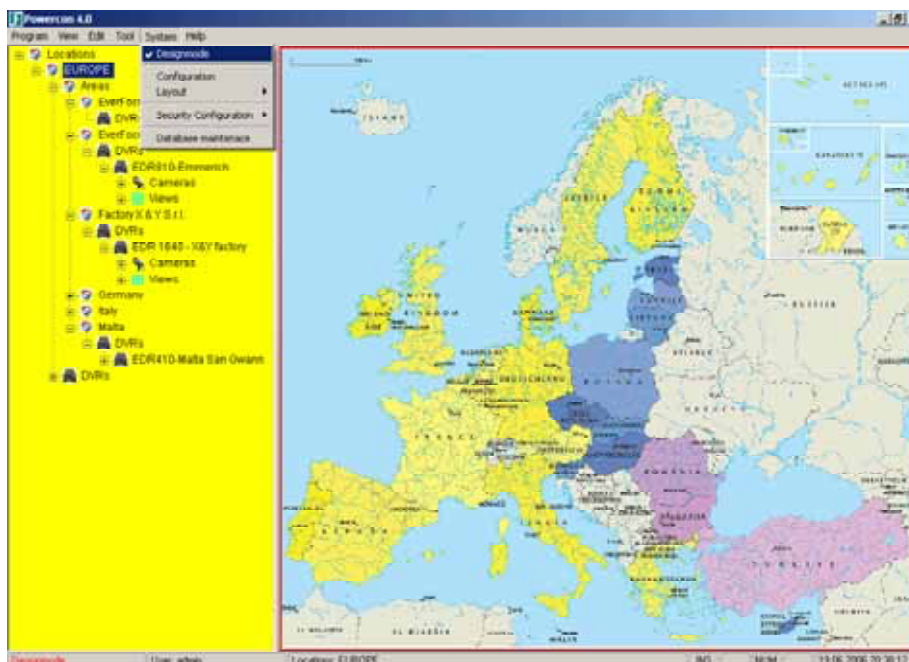


In the map of Europe, 3 links to the maps of Italy, Germany and Malta have to be set. Use "**Drag and Drop**" to move the areas "**Germany**", "**Italy**" and "**Malta**" from the explorer to the map of "**EUROPE**" location.

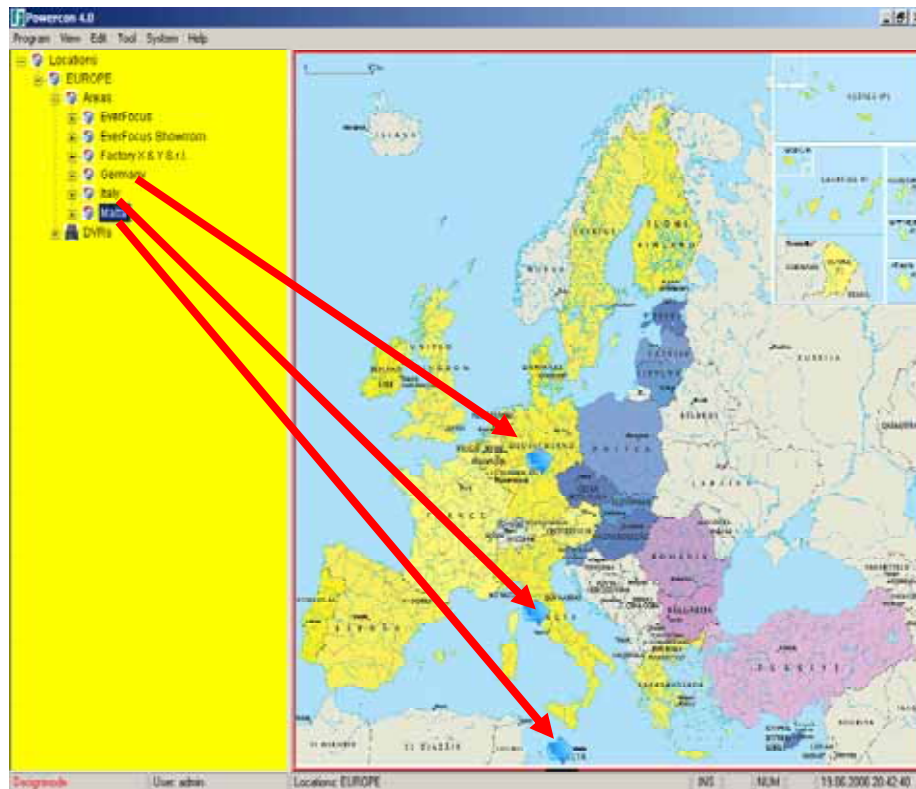

The default icon is a blue arrow.

Change the settings by right mouseclick in the map and selecting > **EDIT OBJECTS** from the context menu.

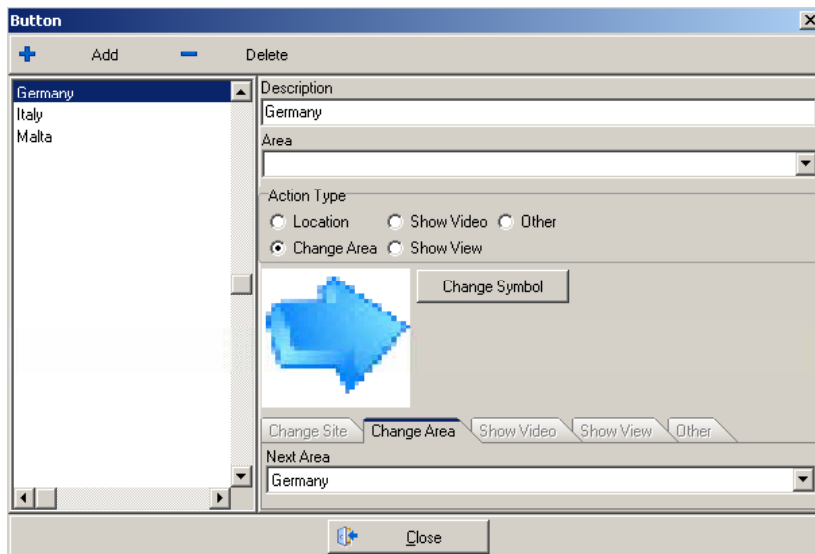

#### Menu items:

- Description:** Name of the selected icon
- Area:** Current area (in this example empty, as currently location "EUROPE" is active).
- Action Type:** Reaction to double-click of the button during operation:
  - Location:** changes to another location
  - Show Video:** opens a video window with single camera
  - Other:** opens defined application on client PC
  - Change Area:** switches to another area (map, graphic)
  - Show view:** opens a multiple camera view
- Change Symbol:** The icon can be changed to any other \*.bmp format graphic. A small library of arrows and symbols is available in the PowerCon4 program folder, path: **PowerCon4\Image\Button** please refer to "Appendix A" for a screenshot catalogue.


Depending on the selected action type, the available options (areas, cameras....) are activated in the lower part of the menu.

In our sample project, a change of the settings is not required.

Links within the areas:

Germany:


In the explorer, select the area "**GERMANY**":

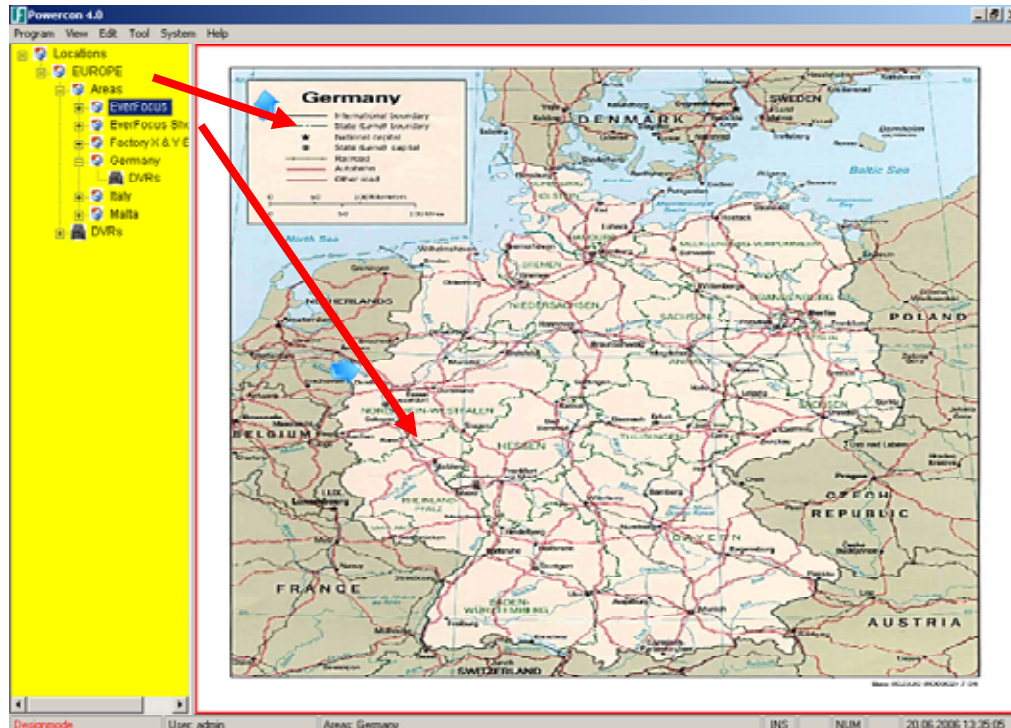

Use "**Drag and Drop**" to move the area "**EverFocus**" from the explorer to the area map of "**Germany**".

Use "**Drag and Drop**" to move the location "**Europe**" to the upper left corner of the area map of "**Germany**" in order to return to the map of "**Europe**". For linking to an upper level, change the icon into an upwards arrow:


Right mouseclick in map > **Edit Objects**:

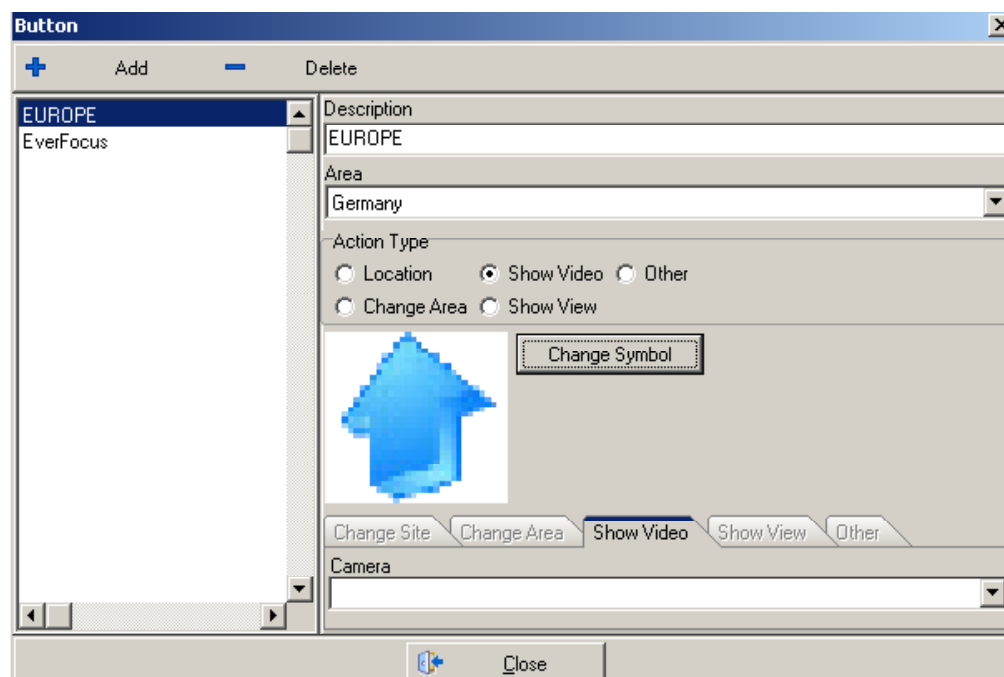

> **Change Symbol**: select "**up\_32**" in the folder **Bitmap\arrow\color**.




In the explorer, select the **"EVERFOCUS"** area:

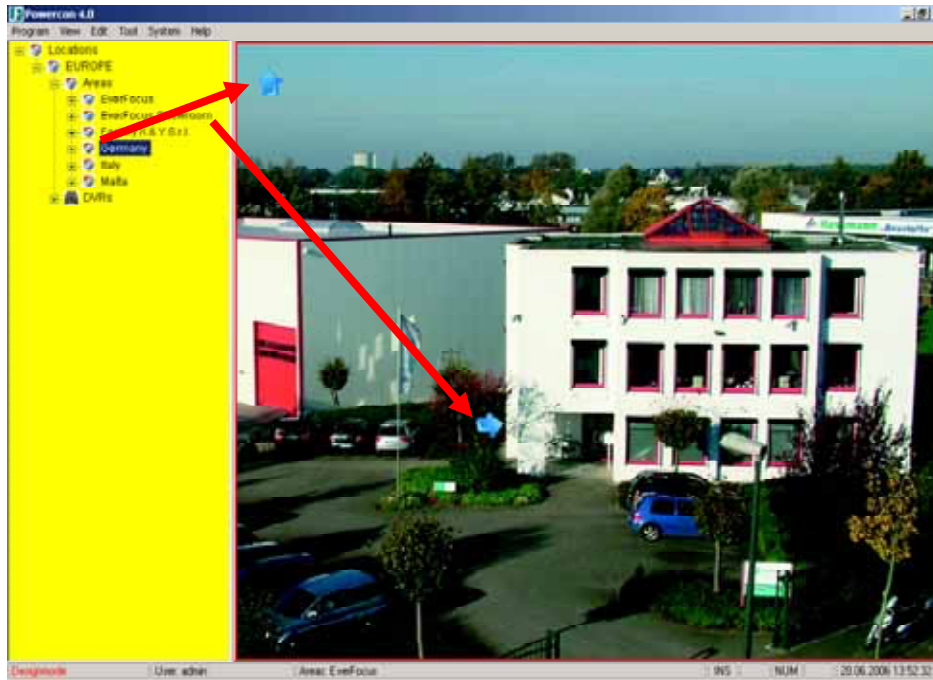

Place icons for **"EverFocus Showroom"** and the map of **"Germany"** (for returning to the area **"Germany"**) and change the type of arrow.

In the explorer, select the area **"EverFocus Showroom"**:

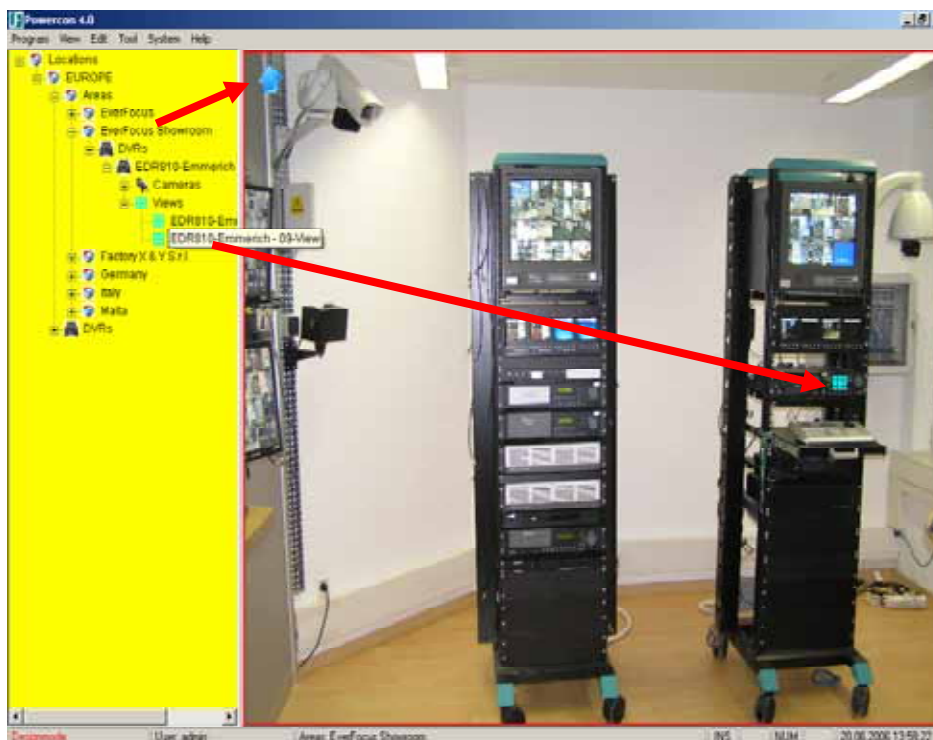


Use **"Drag and Drop"** to move the view **"EDR810-Emmerich-9-View"** from the explorer to the map (listed under \Areas\EverFocus Showroom\DVRs\EDR810-Emmerich\Views\...)

Use **"Drag and Drop"** to move the area **"EverFocus"** to the upper left corner of the showroom picture in order to return to the EverFocus building. Change the arrow type in **"Edit Objects"** menu.

## Malta

In the explorer, select the area **"Malta"**:

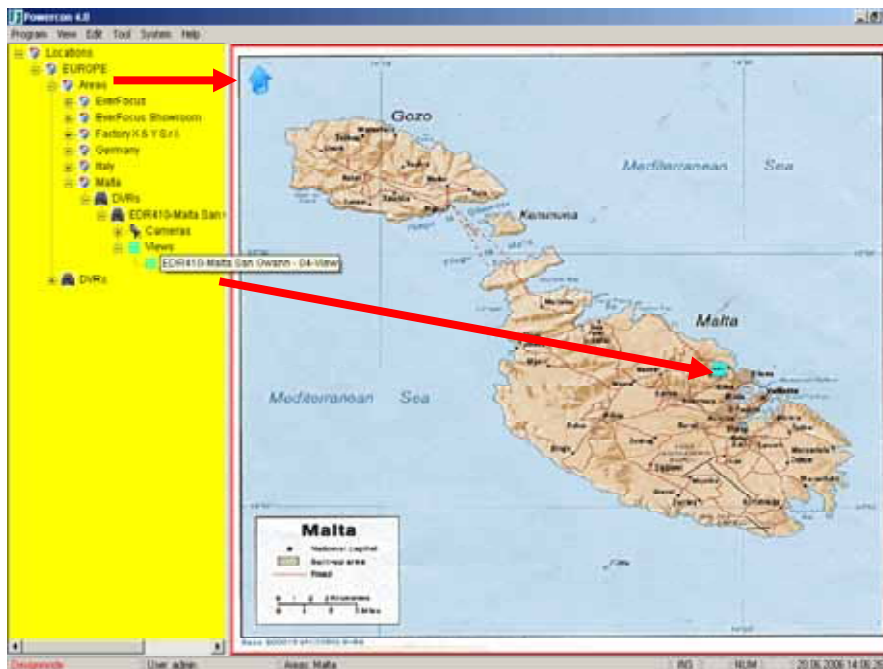


Use **"Drag and Drop"** to move the View **"EDR410-Malta San Gwann-4-View"** from the explorer to the map (listed under \Areas\Malta\DVRs\ EDR410-Malta San Gwann\Views\...).

Use **"Drag and Drop"** to move the location **"Europe"** to the upper left corner of the map in order to return to the map of Europe. Change the arrow type in **"Edit Objects"** menu.

## Italy:


In the explorer, select the area **"Italy"**:

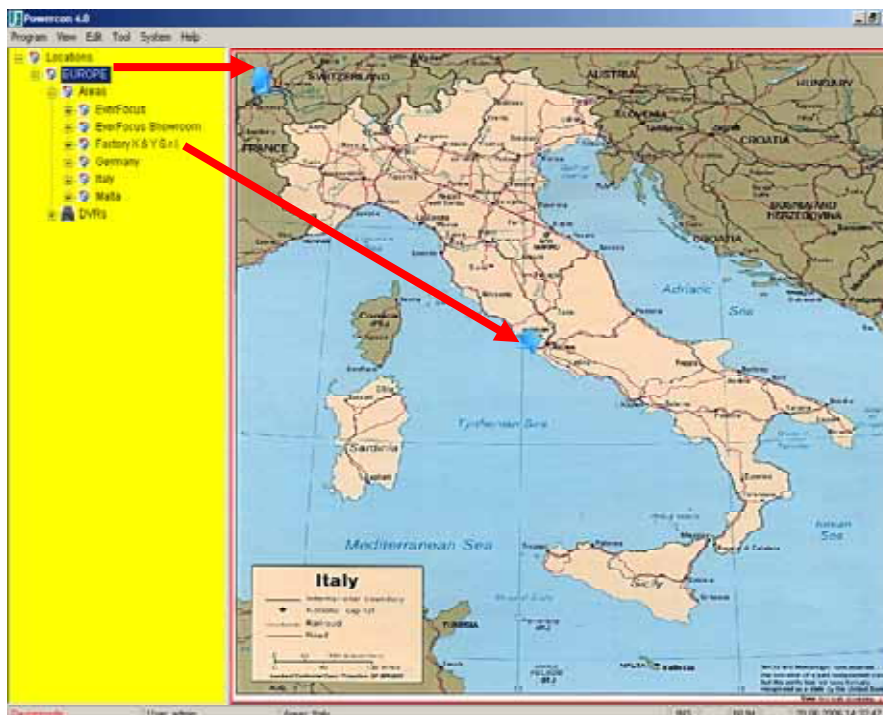

Use "**Drag and Drop**" to move the area "**Factory X&Y**" from the explorer to the map.

Use "**Drag and Drop**" to move the location "**Europe**" to the upper left corner of the map in order to return to the map of Europe. Change the arrow type in "**Edit Objects**" menu.

In the explorer, select the area "**Factory X&Y S.r.l.**":

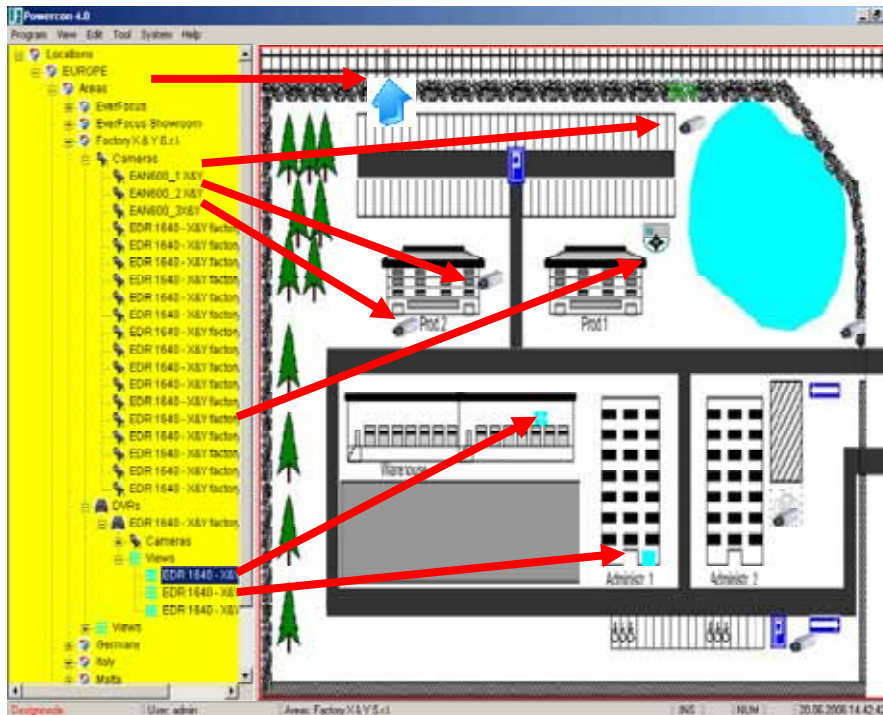

Place the icons for the installed cameras or multiple camera views into the area map. The icons can be changed with right mouseclick in the area map > **Edit Objects**.

A small library of arrows and symbols is available in the PowerCon4 program folder, path: **PowerCon4\Image\Button**. Please refer to "Appendix A" for a screenshot catalogue.

After these settings, the sample project is finished. Exit the design mode by right mouseclick in the map and select > **EXIT DESIGNMODE**, or select "**Deactivate**" in the **Menu bar > SYSTEM > Designmode**


The explorer background colour will change to white again.



# PowerCon 4.1 Operation


## Opening video windows

Open the requested video window either from the explorer or by double mouseclick on a video window icon in a map or graphic (if graphics are established):

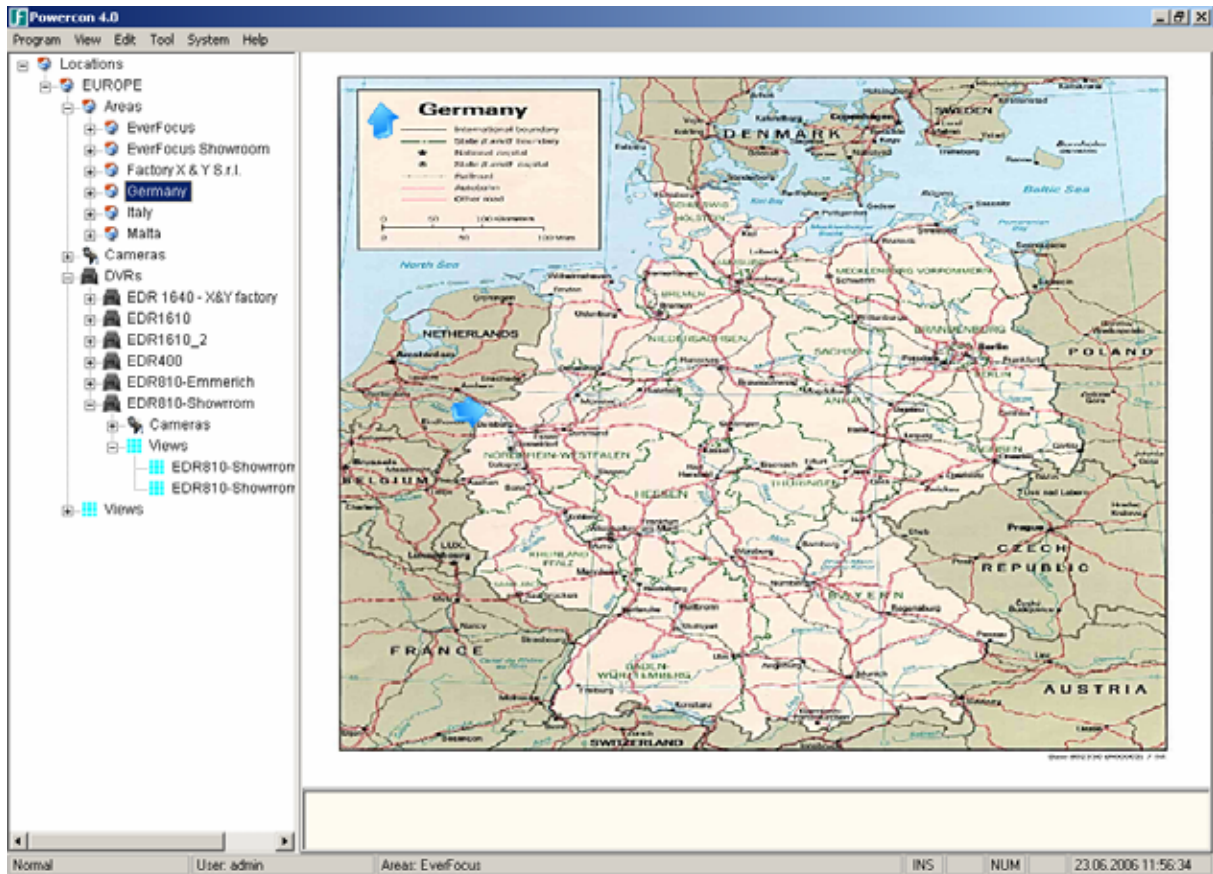


## Live View

The screenshot shows a 4 x view of an EDR810 DVR:

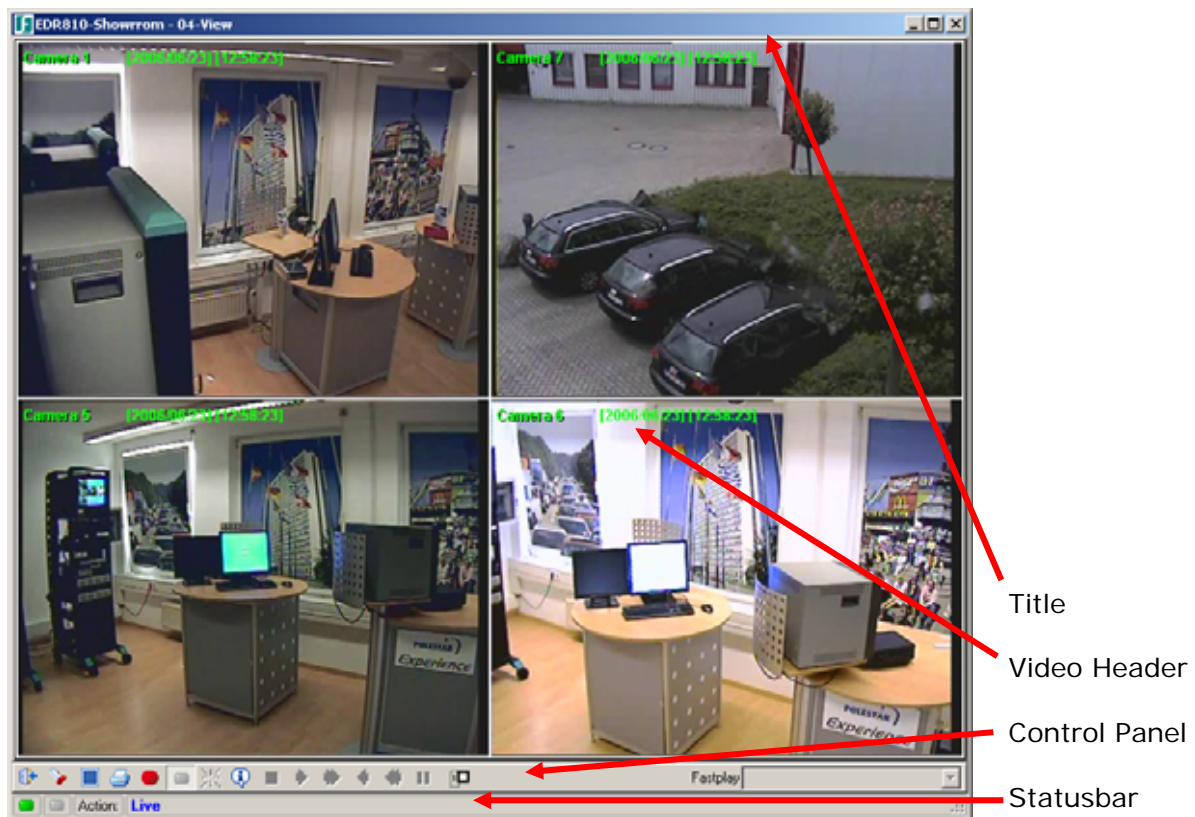

## Setup display

Click right into the video window to open the context menu:

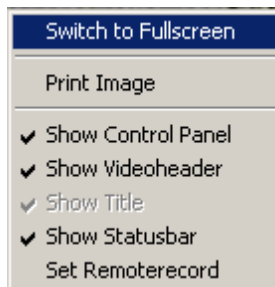


Activate or deactivate the display items.

**ATTENTION:** The "Show title" option is available for EDR400/1600 and EAN600 only!


## Switch to fullscreen:

Click right on the requested camera to open the context menu:

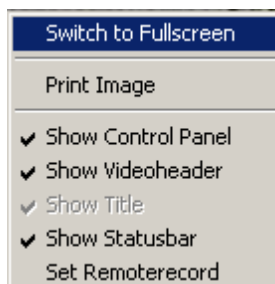


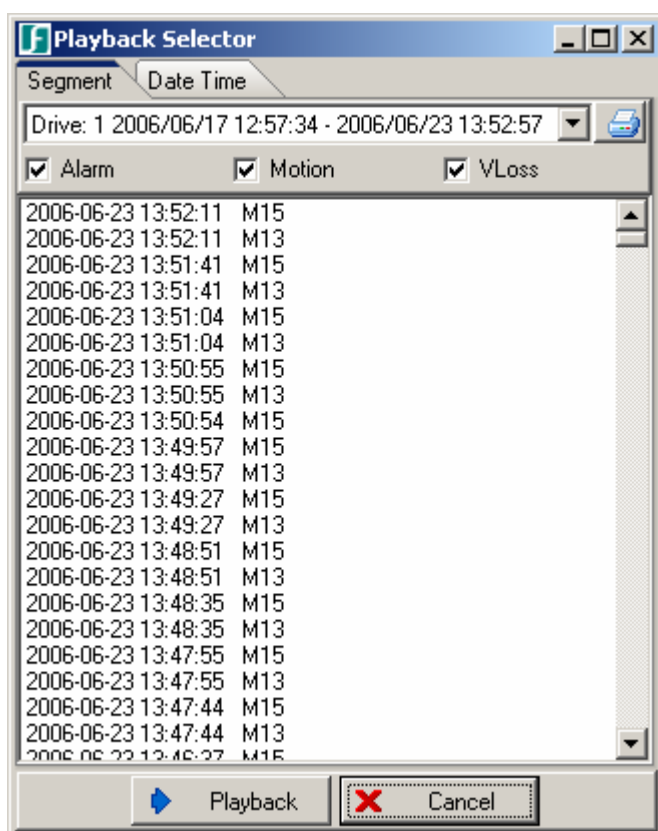
### Switch back to camera multiview:

Click right into the full screen view to open the context menu:

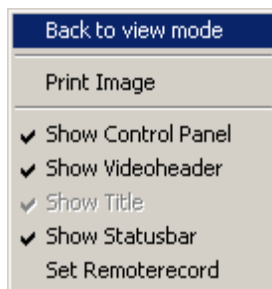

### Record search

Select the  icon at the control panel to open the "**Playback Selector**" menu:




### Search by event:

Under the "**Segment**" tab, the available hard disks and the event list are provided. The event list offers a filter for motion, alarm contact and video loss events. To use the filter function, activate / deactivate the specific checkboxes.

For playback, select the hard disk and an entry from the event list and select "**PLAYBACK**".

Alternatively, display the "**Daily Event Overview**" by double mouseclick on an event:

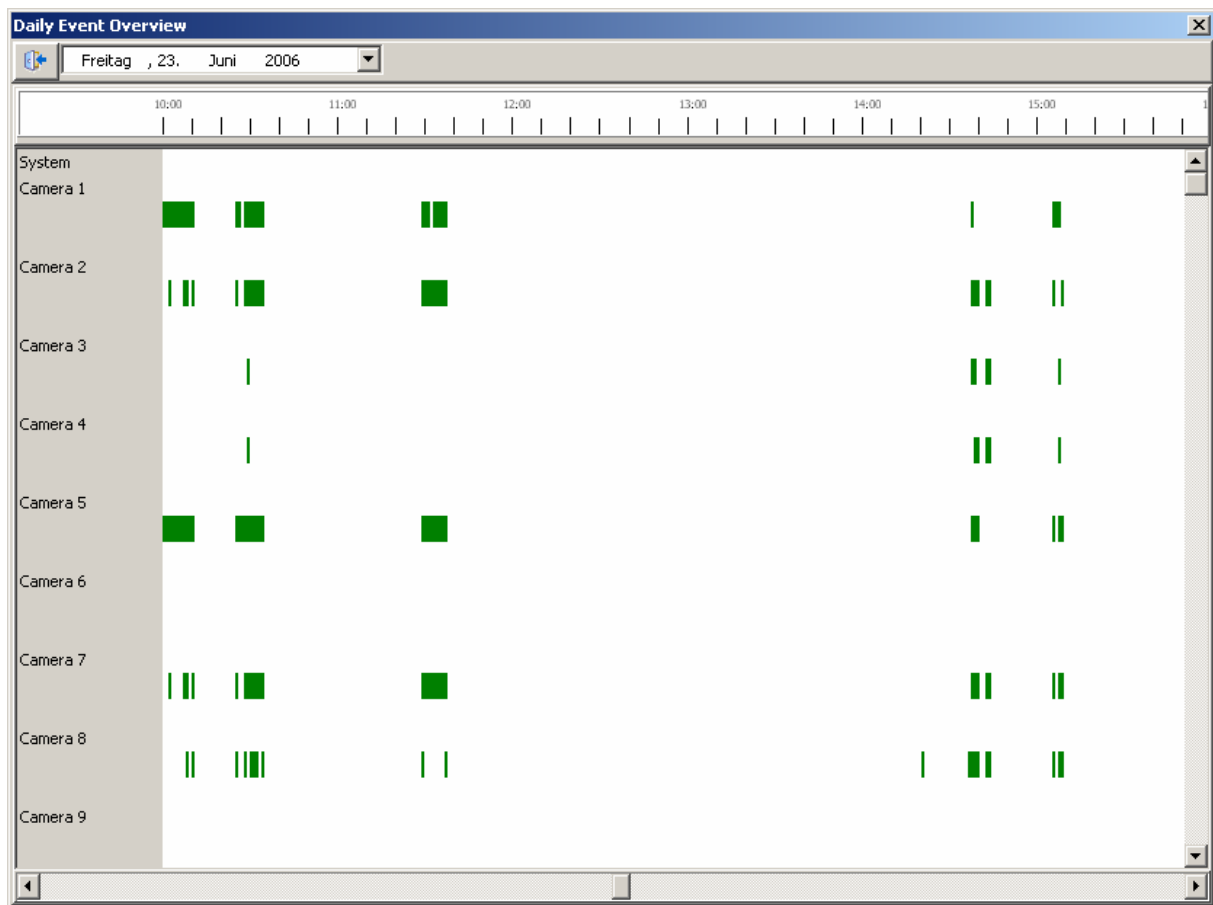

The alarm overview list contains all information on the occurred network alarms.


The event entries' colours depend on the event type:

**Motion alarm:** green  
**Alarm contacts:** red  
**Video loss:** blue  
**System alarms:** orange

Start the playback by double mouseclick on an event.


### "Fastplay" List

Once the event list is loaded, this list appears in the lower right corner of the video window. Playback from this event list can be started through selecting a list entry by mouseclick without reloading the event list.

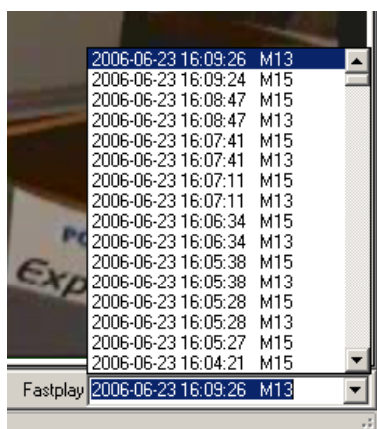


## Search by time/date:

Select the "Date Time" tab:

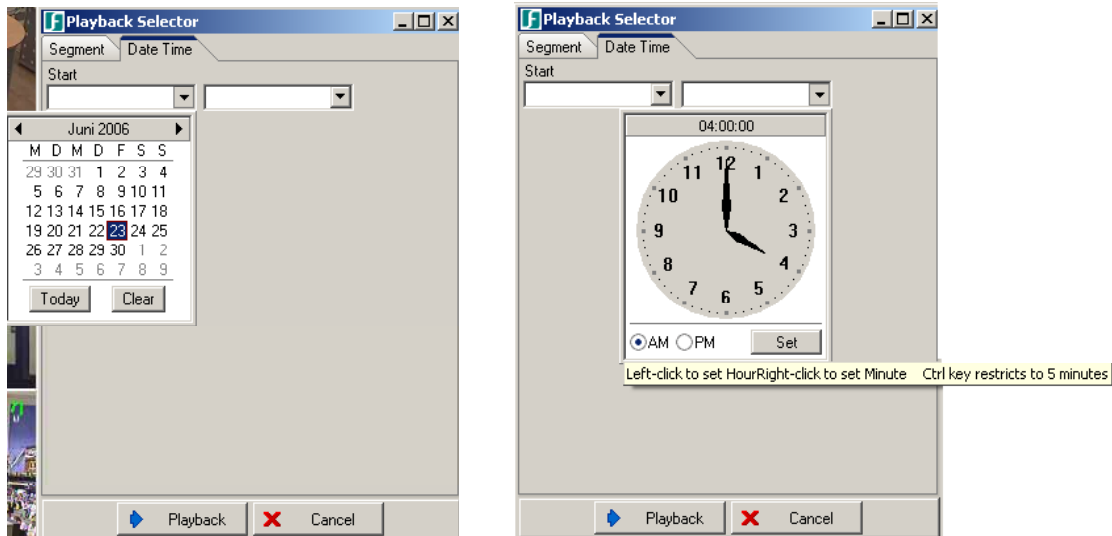

Select time and date for playback search and confirm with "**PLAYBACK**".


## Saving Screenshots

Screenshots of the video window currently displayed can be saved by selecting the  icon.



The status bar indicates both the file path and the file name of the stored image.


## Printing screenshots


Double-click on the printer icon  to open the printer context menu. A preview function is provided.

## Archiving video files

PowerCon4 provides 2 technologies to save video files at the local PC:

### 1. 1:1 file transfer of a single camera in original \*.arv file format (EDR MPEG4 series only)


The  icon in the control bar is available in single camera mode only. Select the icon to open the "**Archive Selector**":

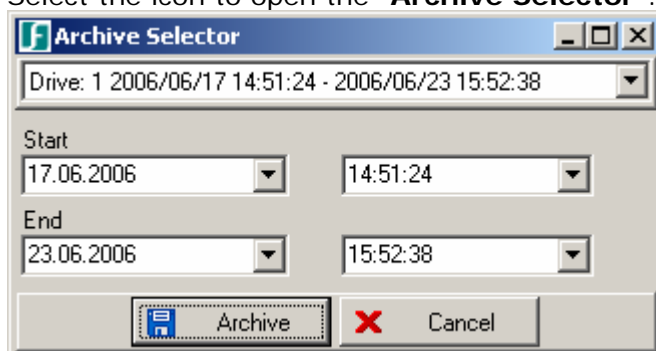


Select the hard disk and enter start and end time. Select "**Archive**" to start the file transfer. The video data will be transferred from the DVR in original quality and frame rate. Playing back \*.arv-files requires the "**DVR Viewer**" program (provided in PowerCon program group)

## 2. Saving of complete displayed video window


In this mode, the complete videoscreen content is saved to a video file on the PC. This allows also for saving camera multiviews in one videofile. The file format depends on the utilized codec. To select the codec and adjust the related settings, click right into the video window to open the context menu:

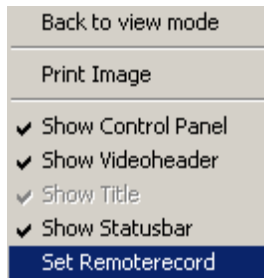


Select "**Set Remote record**" to display the codec options:

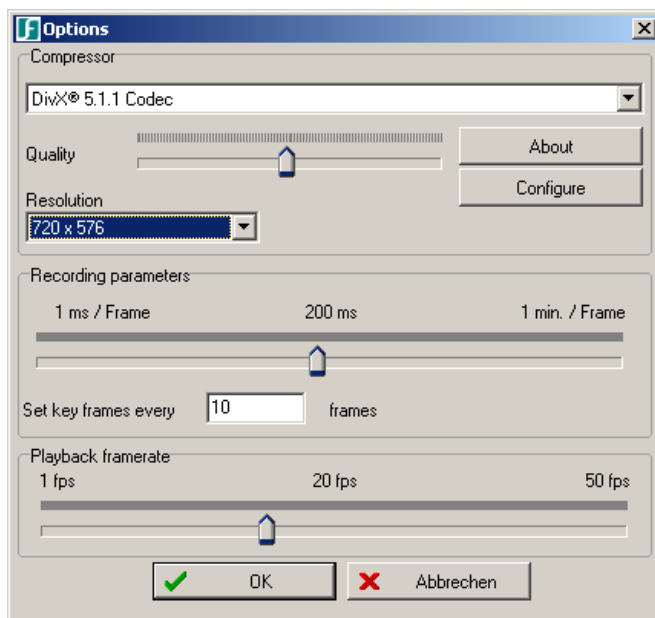

All video codecs installed on the PC are listed under "**Compressor**". The available options and settings for framerate, picture size and quality depend on the employed type of codec. There is no general rule for an optimal setting; this depends amongst others on the available PC system performance. Comprehensive codec settings guides are available for download on the DivX homepage [www.divx.com/support](http://www.divx.com/support).


To start recording, select the  icon in the control bar. The status bar indicates the progress:

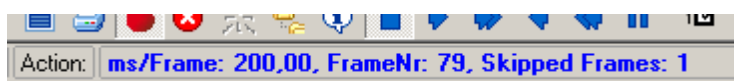

If the number of "**Skipped Frames**" is too high, the settings of the codec should be modified to a lower resolution or frame rate. In this case, the PC performance does not comply with the codec settings.

## Sequence view

Open the requested sequence either from the explorer or by double mouseclick on a sequence icon in a map or graphic (if graphics are established) to display the following screen:

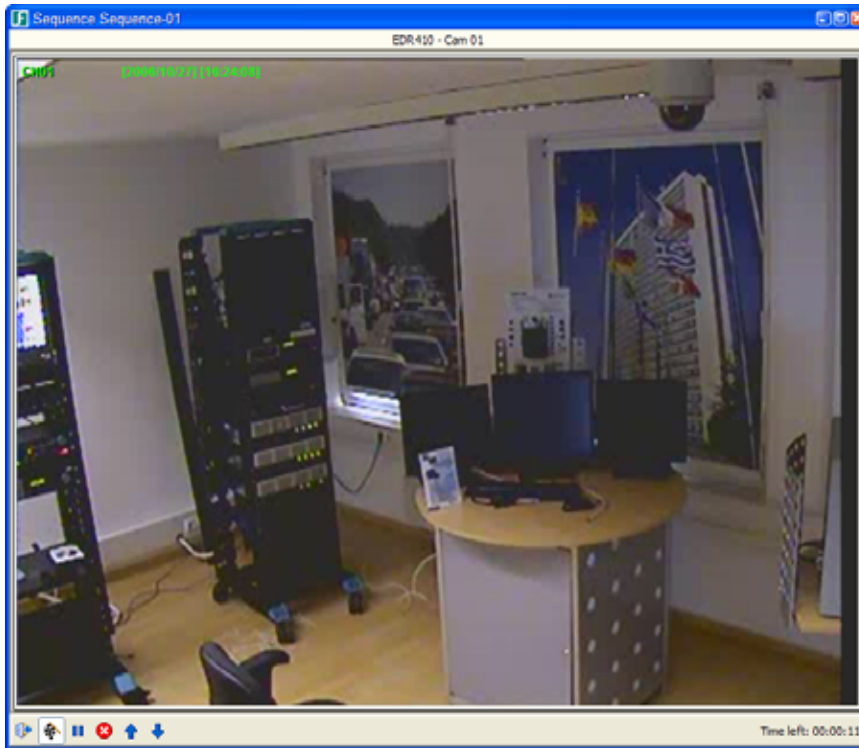

**Description of the menu bar functions:**




From left to right:

- exit
- start
- pause -> current display freezes, clock continues after pressing „Start“
- stop -> current display freezes, sequence restarts after pressing „Start“
- change to previous view ahead of schedule
- change to next view ahead of schedule



## Bug report wizard

In the unlikely event of a program error, PowerCon 4.1 will automatically create a bug report which is sent via e-mail to our technical support centre. We kindly ask you to make use of the bug report wizard in order to support our efforts in continuously improving PowerCon 4.1.

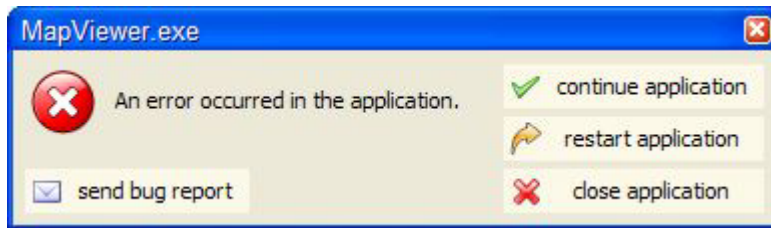

### Step 1: Contact information

A screenshot of a "Send Assistant" dialog box, specifically the "Contact Information" step (indicated by a "1" in a box). The dialog has a title bar with a close button. It contains two text input fields: "your name:" with the text "Walter Tester" and "your email:" with the text "Tester@Testcompany.com". Below these fields is a checked checkbox labeled "remember me". At the bottom, there are three buttons: "Continue", "Skip", and "Cancel".

This dialogue appears if an error occurs. Please enter your name and e-mail address to continue. By activating the checkbox "Remember me", your data will be stored for future bug report events.


### Step 2: Error details

A screenshot of a "Send Assistant" dialog box, specifically the "Error Details" step (indicated by a "2" in a box). The dialog has a title bar with a close button. It contains a text area with the text "Everytime i open a DVR connection nothing happens....". Below the text area is a checked checkbox labeled "Error can be reproduced:". At the bottom, there are three buttons: "Continue", "Skip", and "Cancel".

Please use the plain text field to describe the error as detailed as possible. The more detailed your error description is, the faster our technical support will be able to find a solution. If the error can be reproduced, please activate the respective checkbox.




### Step 3: Screenshot configuration

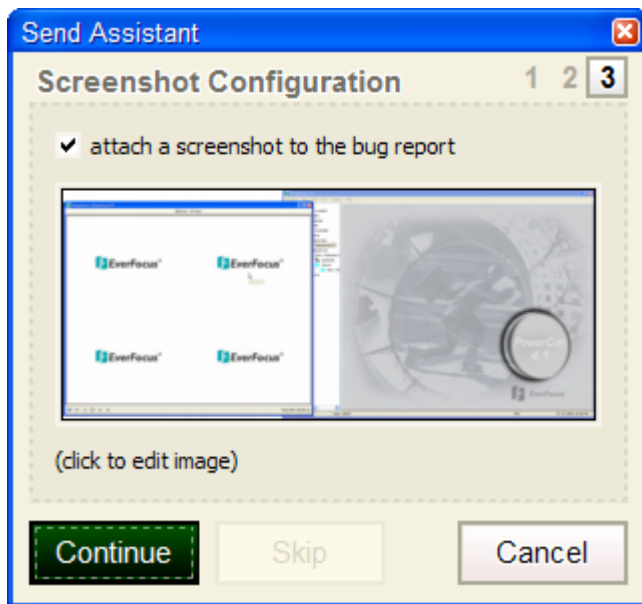


A screenshot of the screen in which the error occurred is automatically created. Please activate the checkbox to include the respective screenshot to the bug report.

By selecting **CONTINUE**, your bug report is automatically sent to our technical support centre via e-mail. By selecting **CANCEL**, the bug report is not sent, but stored in the PowerCon 4.1 program directory.

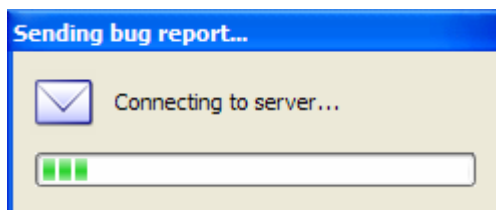


# APPENDIX A: BITMAP GRAPHICS FOR ICONS AND BUTTONS

## Arrows b/w (Folder\PowerCon4\Images\Arrows\bw)

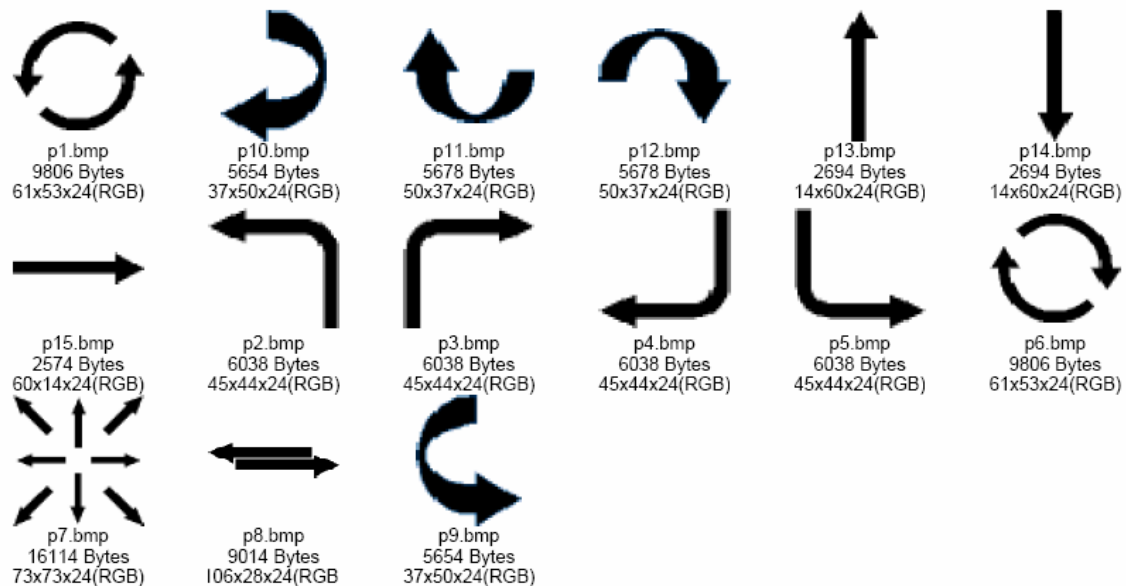

## Arrows colour (Folder\PowerCon4\Images\Arrows\color)

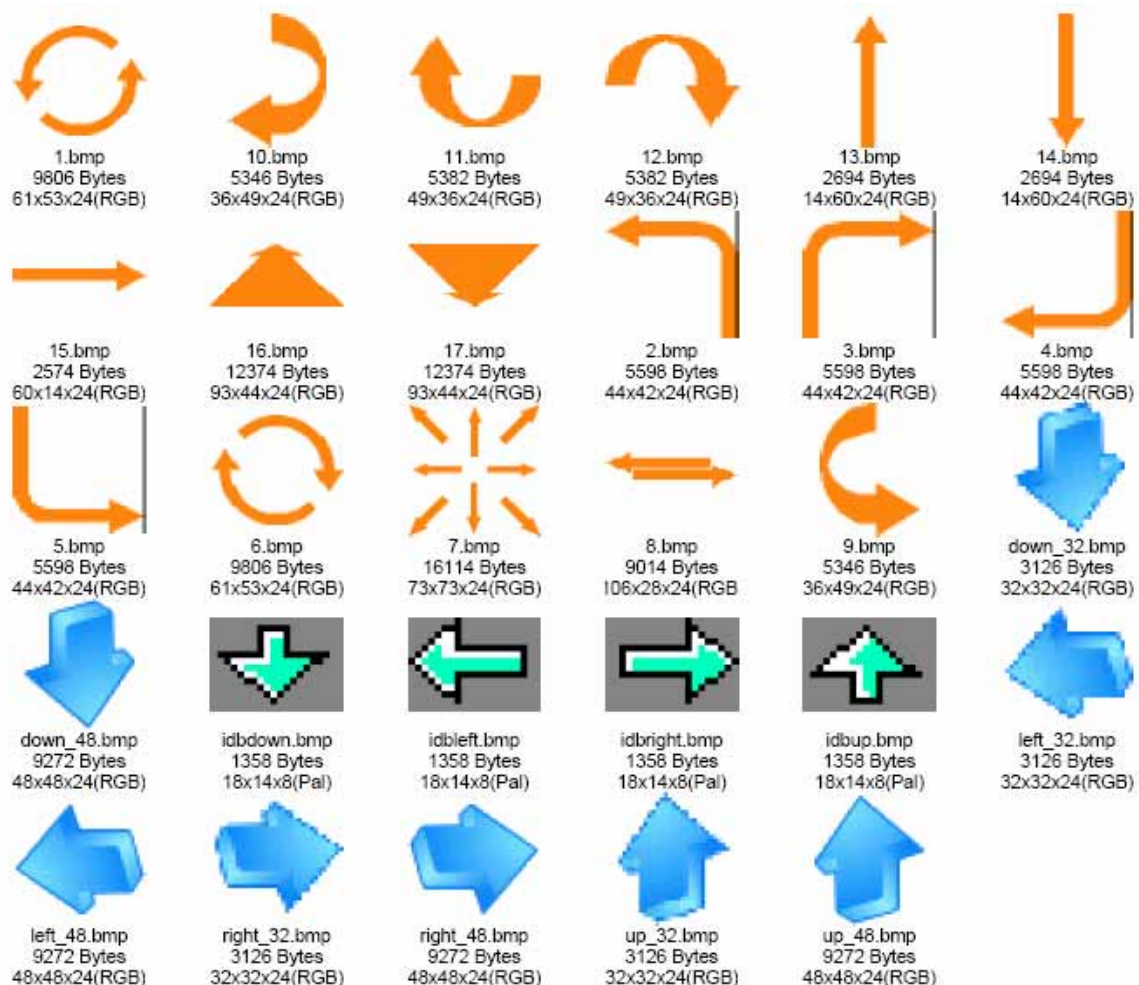

## Cameras (Folder\PowerCon4\Images\camera)



## DVR (Folder\PowerCon4\Images\dvr)




## Others (Folder\PowerCon4\Images\Others)



## Views (Folder\PowerCon4\Image\Button\View)



default.bmp  
1458 Bytes  
19x19x8(Pal)

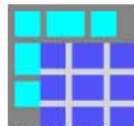


defaultMulti.bmp  
1460 Bytes  
19x19x8(Pal)




idbwx10.bmp  
1458 Bytes  
19x19x8(Pal)




idbwx10d.bmp  
1418 Bytes  
17x17x8(Pal)

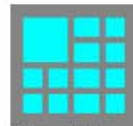


idbwx13.bmp  
1458 Bytes  
19x19x8(Pal)

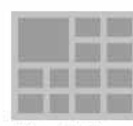


idbwx13d.bmp  
1418 Bytes  
17x17x8(Pal)

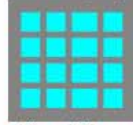

idbwx16.bmp  
1458 Bytes  
19x19x8(Pal)

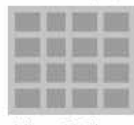

idbwx16d.bmp  
1418 Bytes  
17x17x8(Pal)

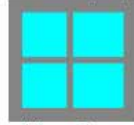

idbwx4.bmp  
1458 Bytes  
19x19x8(Pal)




idbwx4d.bmp  
1418 Bytes  
17x17x8(Pal)




idbwx7.bmp  
1458 Bytes  
19x19x8(Pal)



idbwx7d.bmp  
1418 Bytes  
17x17x8(Pal)

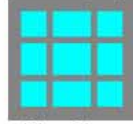

idbwx9.bmp  
1458 Bytes  
19x19x8(Pal)

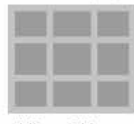

idbwx9d.bmp  
1418 Bytes  
17x17x8(Pal)

# PowerCon 4.1 Alarm Receiver

---


The PowerCon4 alarm receiver allows the receipt of DVR network alarm and works independently of the PowerCon main program. Optionally, network alarms can be distributed to other client PCs.

**Features:**


- popup window with alarm picture, manual "**LIVE**" switch, alarm action plan
- alarm log with alarm pictures and filter function
- export function of alarm listing
- alarm forwarding via network alarm to other PC or via email

The alarm receiver is installed together with the PowerCon program. The alarm receiver application starts either automatically upon PC start (checkbox for **AUTOSTART** in installation menu) or manually (**START > PROGRAMS > EVERFOCUS > POWERCON4 > ALARM RECEIVER**).


The program will start minimized, the alarm receiver icon is visible in the taskbar:

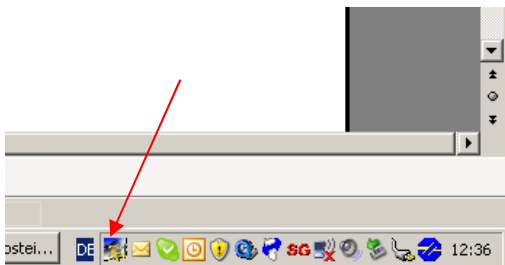

Select the taskbar icon and select "**OPEN**" in the context menu for alarm receiver configuration.

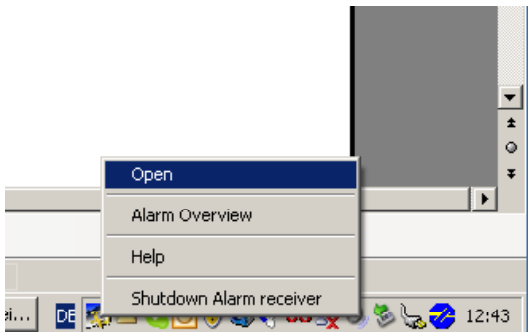

The application will open the following window:

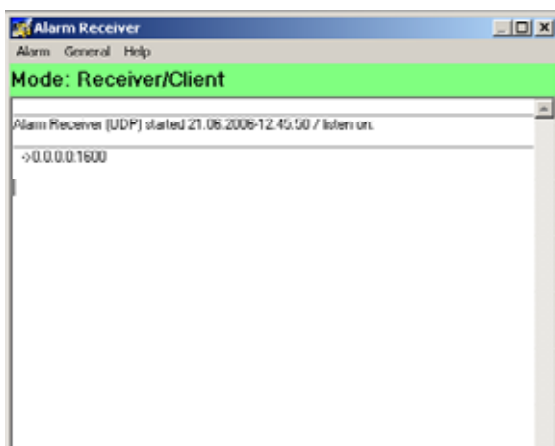


The menu bar contains following items:

- Alarm:**
- > Overview: alarm log with all network alarm entries
  - > Configuration: setup for DVR systems with network alarm transmission
  - > Action: definition of alarm actions or instructions, which can be assigned to network alarms
- General:**
- > Configuration: global alarm receiver settings for Language, IP parameters
- HELP:**
- > Manual: this document
  - > program and version information

## Alarm Receiver Configuration


Menu bar > General > Configuration:

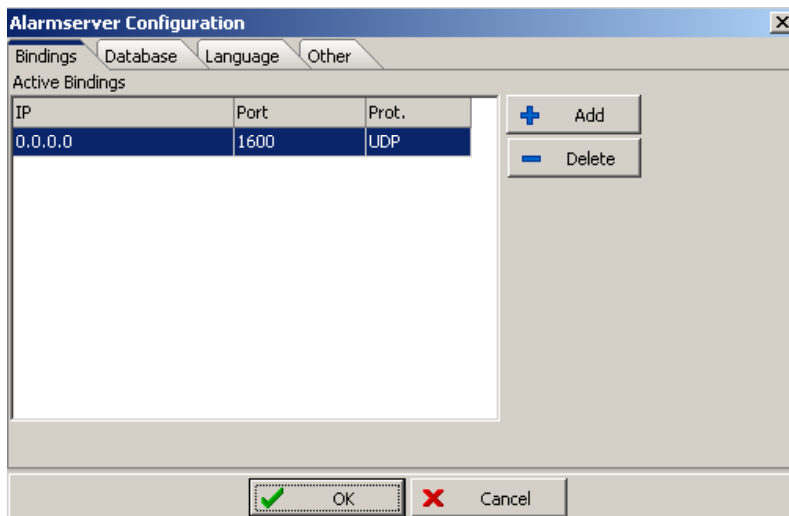

### Bindings: IP settings for the receiver PC

IP: 0.0.0.0 (default) receives on all IP connections installed on the client PC  
For receiving alarms only via a specific IP address at client PC, delete the 0.0.0.0 entry (" - DELETE") and add the IP address (" +ADD").

In the "Add Binding" menu, one of the IP addresses available at the PC can be selected.

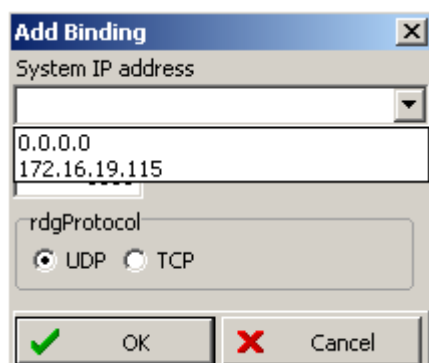


Please make sure that both port number and protocol type comply with the DVR settings (**NETWORK > ALARM menu**).

If the system contains DVRs with different protocol types and ports, an additional entry (with the same IP address) and the different protocol type / port need to be set.

## PC Operation mode

Select the "Other" tab

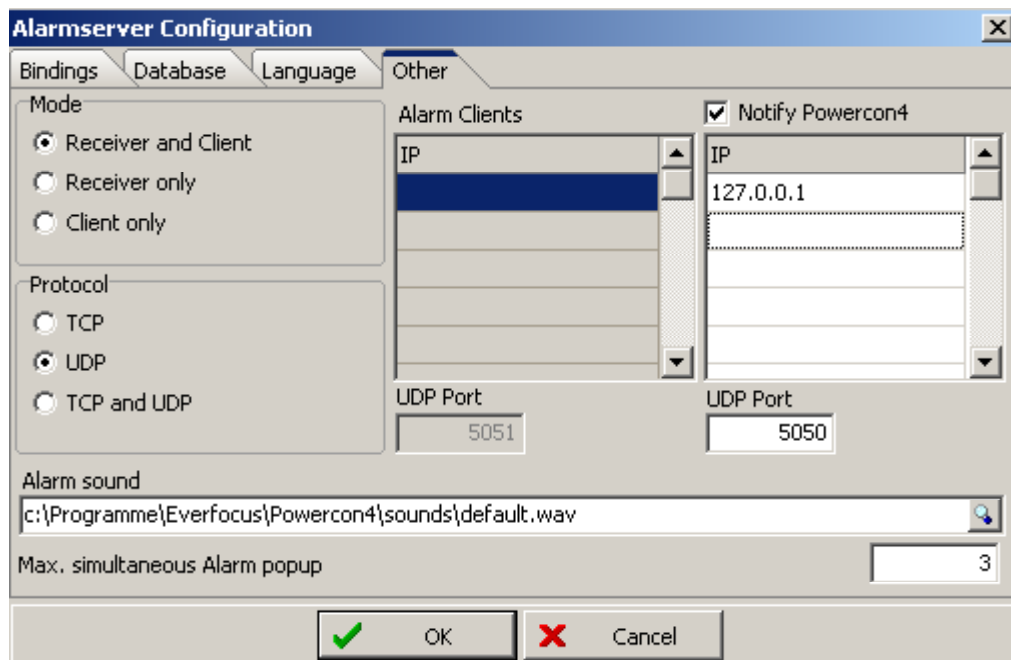

In this menu, the PC operation mode is defined:

- Receiver and Client:** default setting, standard setting for single user installation  
**Receiver only:** "server" mode, the PC only receives and distributes network alarms to other client PCs  
**Client only:** PC only receives network alarms distributed by servers working in "Receiver only" mode

### RECEIVER AND CLIENT

Standard mode for single user installations. Activate the checkbox "**Notify Powercon**" if alarm messages shall additionally be displayed in the PowerCon notification window. The IP address 127.0.0.1 is the local host IP address and should not be changed.

### RECEIVER ONLY

"Server" mode, the PC only receives and distributes network alarms to other client PCs. The IP addresses of the client PCs receiving the network alarms are entered in the list "**Alarm Clients**".

### CLIENT ONLY

PC only receives network alarms distributed by servers working in "Receiver only" mode. No additional IP address settings are required.

### PROTOCOL

The protocol type must comply with the protocol type of the alarm transmitter DVR. Alarm transmission from server to client always works in UDP mode. If the system contains DVRs with different protocol types and ports, activate the checkbox "**TCP and UDP**".

### UDP PORT

UDP ports for alarm transmission from server to client PCs.

**ATTENTION:** These ports are not related to the DVR port settings

### ALARM SOUND:


Select a \*.wav format sound file for alarm notification

### MAX. SIMULTANEOUS ALARM POPUPS:

If the system uses alarm popup windows, each window will open a separate ActiveX application, requiring high resources from the Windows swap file.


Depending on the PC performance, an error could occur after opening too many popup windows (10~50, depending on PC). Therefore, the number of maximum open alarm windows can be limited here. Default value is 10.

Upon reaching the maximum number of alarm windows, an alert message appears on the screen:

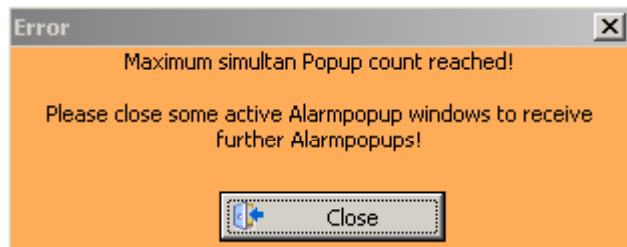

### Languages

Select the "Language" tab:

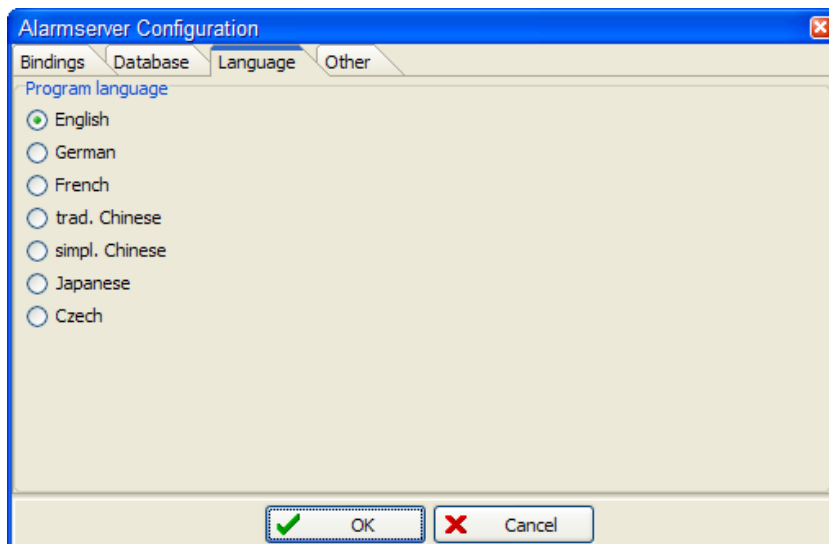

Select one of the available languages for the alarm server application.




## Database

**ATTENTION:** Changes in the database settings should only be conducted by experienced administrators with enhanced database management knowledge. For standard single user installations, no changes are required in this menu!


A change in the database file path is only required if several users require access to the same database. Therefore, the database has to be hosted on a server.

Select the "**Database**" tab:

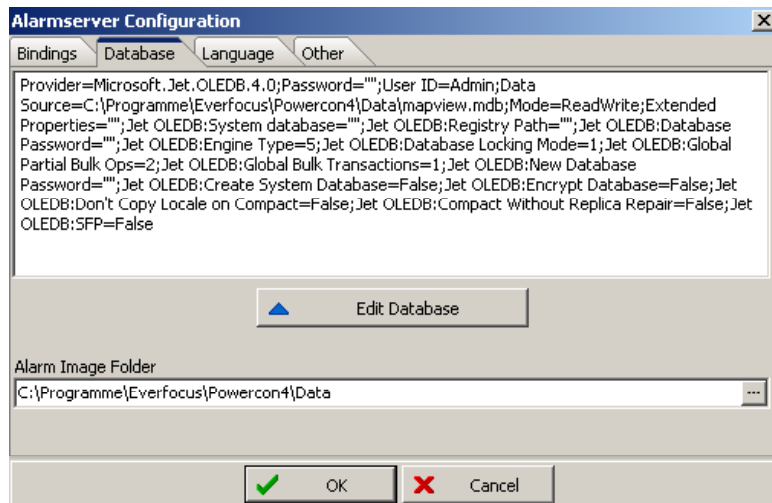

The window shows the currently used database and the file path of the alarm images folder.

"**Edit Database**" opens a new window:


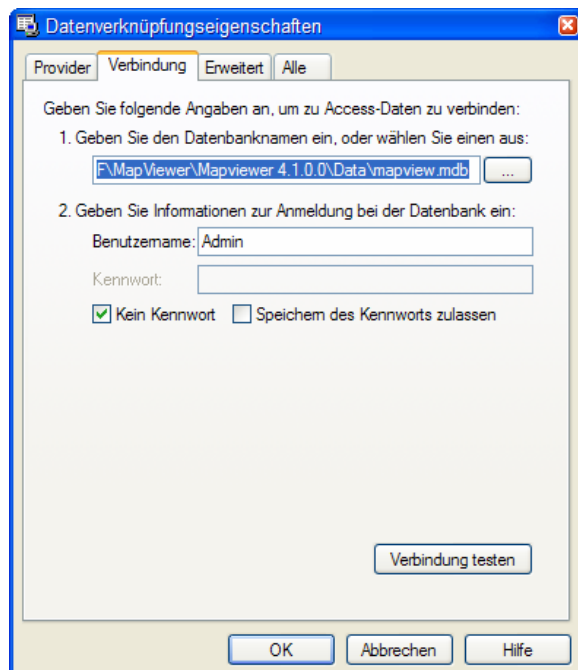


The language of the database connection string dialogue depends on the language of the installed windows system. For details and help to create and modify database connection strings, use the help database of the operating system.

## DVR settings

### Menu bar > Alarm > Configuration

The list contains all DVR systems installed in Powercon. DVRs must be set up in the PowerCon program - new DVR systems can not be installed in the alarm server menu.

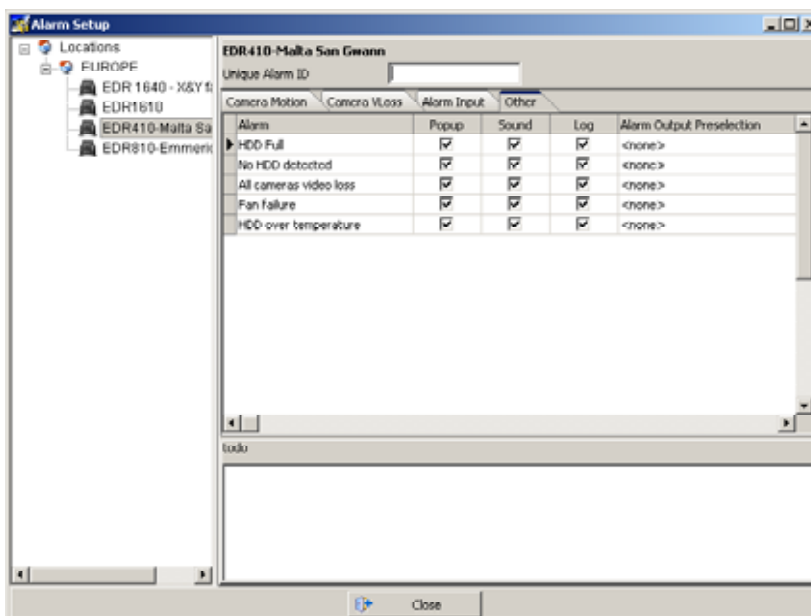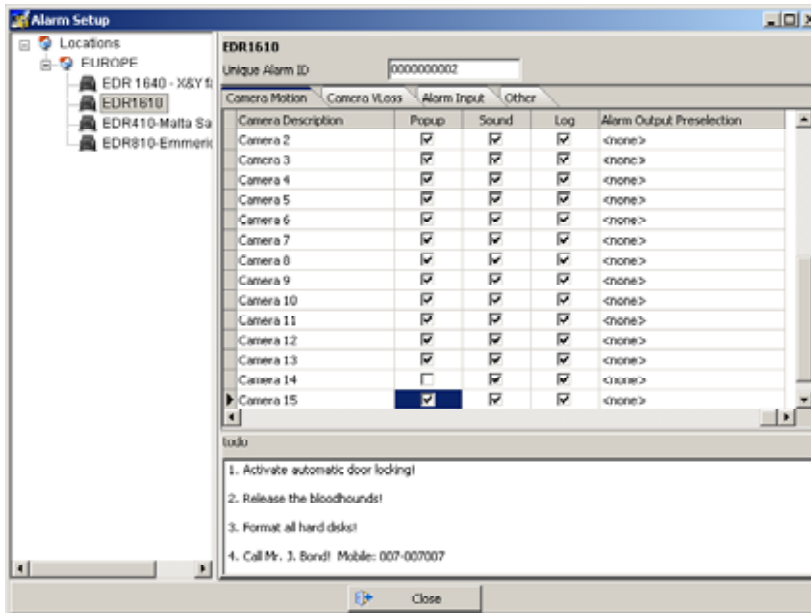

For all available network alarm events, there are checkboxes available for:

- POPUP:** a popup window with alarm picture will appear upon alarms triggered by motion and alarm contacts
- Sound:** an alarm sound is activated at the PC
- Log :** an entry in the alarm event list will be created
- Alarm output preselection:** related to "POPUP". The popup window provides the possibility to manually switch a predefined output relay if live connection to the DVR is established. The relay can be specified in this column.

## Other settings:

**UNIQUE ID:** The input of a Unique ID is mandatory for alarm reception (not for EDR400 and EDR1600, item is deactivated for these DVR models). The ID has to comply with the DVR ID.

**todo:** freely editable text field for alarm instructions, these instructions will appear in the alarm popup menu (tab "todo")

**Required DVR settings:**

- network alarm option has to be activated for the specific alarm type
- in **NETWORK** menu additional to the EDR IP settings:
  - > ALARM > IP address, protocol type (UDP or TCP) and unique ID (unique ID not for EDR400/1600)


**ATTENTION:** Setup of Unique ID is mandatory for DVR and alarm server setting (not for EDR400/1600)!

## Alarm actions

The alarm popup menu also contains a tab "**Action**" where the operator can define actions to be taken as alarm follow-up. Standard procedures are available in a pull-down menu.

To pre-define standard procedures:

**Menu bar > Alarm > Actions:**

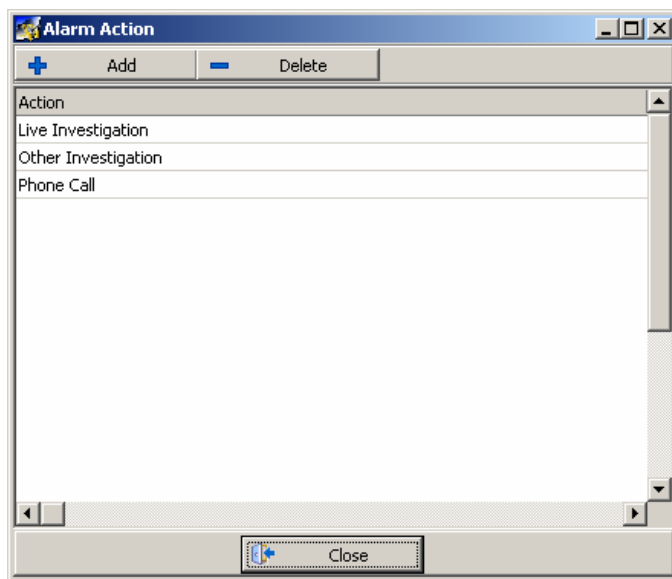

Enter more standard actions with "**+Add**" and remove actions from the list with "**-Delete**".

## Alarm server operation

### Alarm Popup Window

If alarm popup is defined in the menu, network alarms will create an automatic popup window on the PC screen.

Additionally, the window contains an alarm picture in case alarms are triggered by motion or alarm contacts. The operator can switch to live video by mouseclick on the "Live" button.

The screenshot shows a window titled "Network Alarm-630". Inside, there is a green header bar with the text "EDR1610\_2". Below this, the "Time" is "14:12:07" and the "Date" is "22.06.2006". The "AlarmTyp" is "Motion detection on Camera 15!". The "Camera" is "New DVR - Cam 15". There are three tabs: "Picture", "todo", and "Action". The "Picture" tab is selected, showing a security camera view of a parking lot with several cars. At the bottom of the window, there are two buttons: "Live" and "Close".

Annotations with red lines point to the following elements:


- Number of alarm in log list
- DVR title ("Description")
- Alarm time and date
- Alarm type
- Assigned alarm camera
- Taken actions
- Alarm instructions
- Alarm picture or live picture
- Switch from alarm picture to live mode
- Exit / close popup window

Click the "**Live**" button to switch from static alarm picture to live mode:



In live mode, the additional "**Switch**" button allows for switching a DVR output relay if this is defined in the alarm server DVR setup.

Alarm instructions related to this alarm are displayed by clicking the "**todo**" tab.

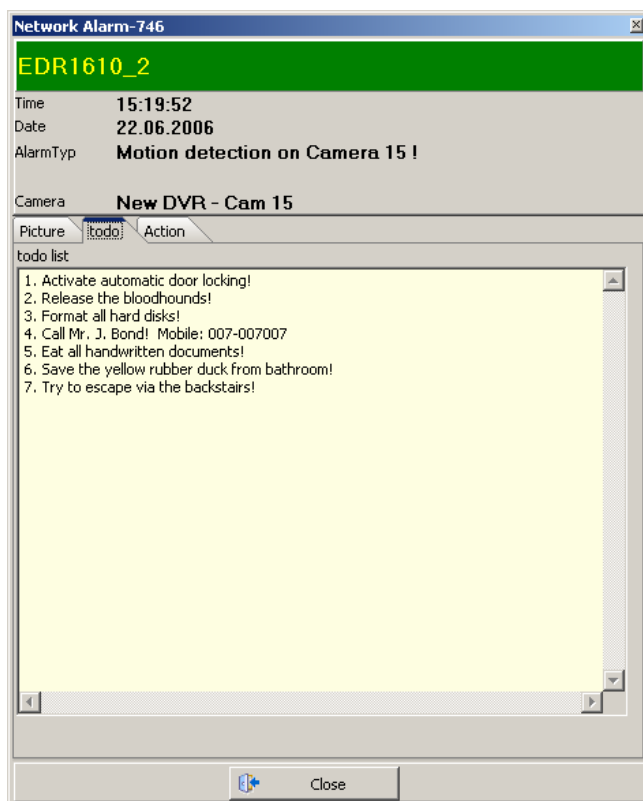

Any actions taken by the operator can be registered in the "**Actions**" tab.  
The operator can either select predefined actions from pulldown list or write an individual text.

The screenshot shows a software window titled "Network Alarm-556". At the top, there is a green header bar with the text "EDR1610" in yellow. Below this, the alarm details are displayed: "Time 18:14:14", "Date 21.06.20", "AlarmTyp Motion detection on Camera 15 !", and "Camera EDR1610 - Cam 15". Below the details, there are three tabs: "Picture", "todo", and "Action". The "Action" tab is currently selected. Under the "Action" tab, there is a section labeled "Action Taken" which contains a list box with three items: "Live Investigation", "Phone Call", and "Other Investigation". Below the list box is a large empty text area for additional notes. At the bottom of the window, there is a "Close" button with a small icon to its left.

## Alarm overview

The alarm overview list contains all information on the occurred network alarms. The alarm entries' background colours depend on the type of alarm:

**Motion alarm:** green


**Alarm contacts:** red

**Video loss:** blue

**System alarms:** orange

The alarm list can be updated either manually ("**Refresh**") or automatically ("**Auto Refresh**").


Select "**Print**" to print the selected list; a printout preview is provided.

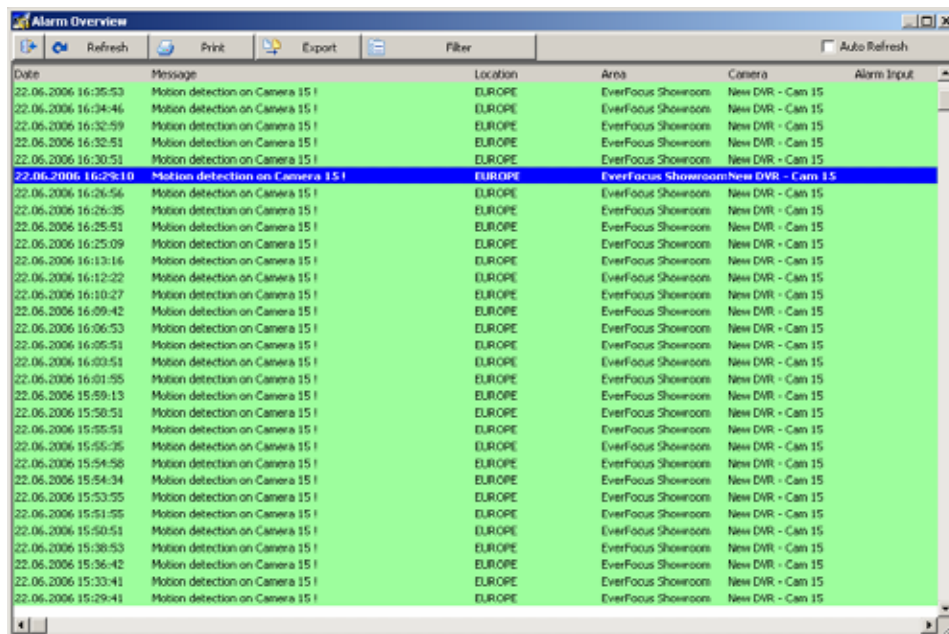

The screenshot shows the 'Alarm Overview' window with a table of alarm entries. The table has columns for Date, Message, Location, Area, Camera, and Alarm Input. The entries are sorted by date and time, showing multiple 'Motion detection on Camera 15' alarms. The background color of the rows alternates between green and white, indicating motion alarms.

Date	Message	Location	Area	Camera	Alarm Input
22.06.2006 16:35:53	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:34:46	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:32:59	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:32:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:30:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:29:10	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:26:56	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:26:35	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:25:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:25:09	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:13:16	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:12:22	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:10:27	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:09:42	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:06:53	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:05:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:03:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 16:01:55	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:59:13	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:58:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:55:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:55:35	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:54:58	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:54:34	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:53:55	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:51:55	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:50:51	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:38:53	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:36:42	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:33:41	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:29:41	Motion detection on Camera 15	EUROPE	EverFocus Showroom	New DVR - Cam 15	

A double-click on an alarm entry opens both the alarm image and the taken alarm actions in the lower part of the screen.

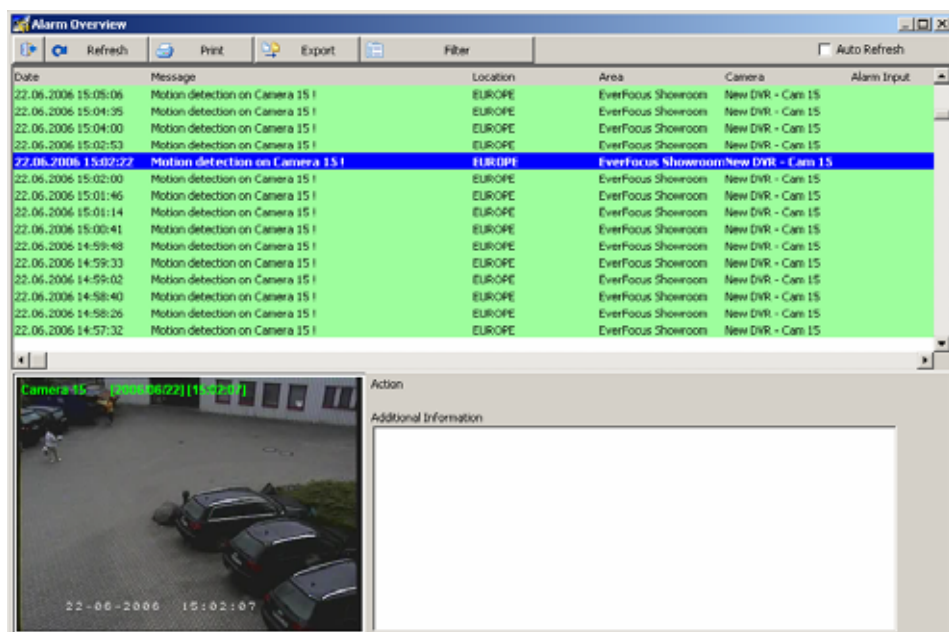

Clicking any other item in the list closes the image window.

An advanced filter function allows for selecting specific alarms from the database. Click on **"Filter"**:

Field	Operator	Value	Boolean
Camera	=	EDR1610 - Cam 15	
Alarm Date	=	21.06.2006	AND
Camera	=	EDR1610 - Cam 15	

Apply Cancel

After entering the filter items and Boolean terms, select **"Apply"** to start the search.

The export function allows for saving the alarm list to a file in a database file in \*.mdb format (MS Access). Select **"Export"** to open the dialogue box:

Date	Message	Location	Area	Camera	Alarm Input
22.06.2006 15:05:06	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:04:36	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:04:00	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:02:53	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:02:22	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:01:00	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:01:46	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:01:14	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 15:00:41	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:59:48	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:59:33	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:58:40	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:58:26	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:57:32	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:57:20	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:56:48	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:56:20	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:56:13	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:55:46	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:55:20	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:55:06	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:54:00	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:53:00	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:52:53	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:51:47	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:51:15	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:50:53	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:50:40	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:49:33	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	
22.06.2006 14:48:40	Motion detection on Camera 15.1	EUROPE	EverFocus Showroom	New DVR - Cam 15	

Confirm: Have displayed records to export database? Yes No Cancel

After confirmation with **"YES"**, all list data will be exported and the displayed list will be cleared.




# I/O Controller EPS 100


From version 4.1 on, PowerCon supports the management of EPS 100 I/O controller.

## EPS 100 setup in PowerCon

Select **Menubar > EDIT > I/O Controller**:

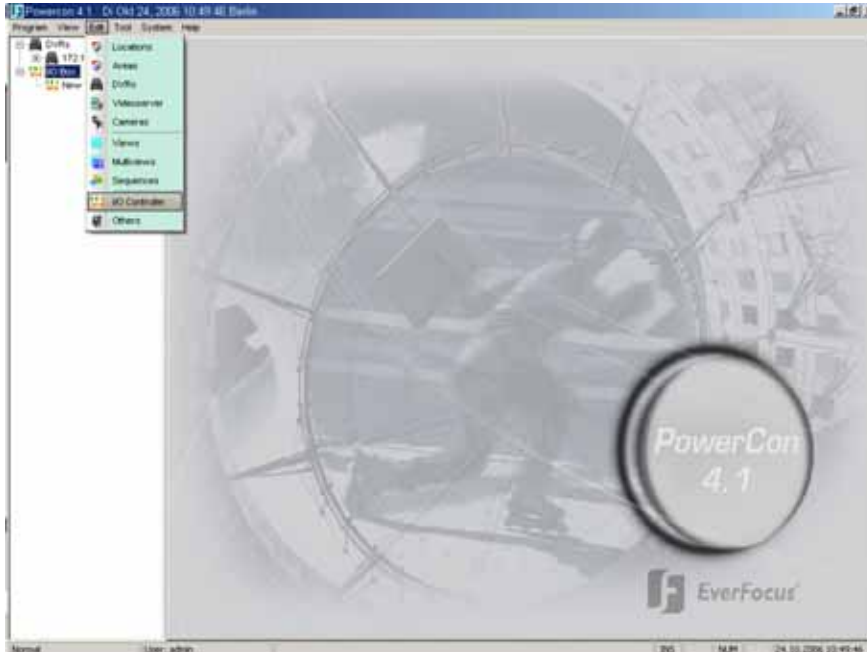

The setup menu appears with a list of already installed I/O controllers on the left:

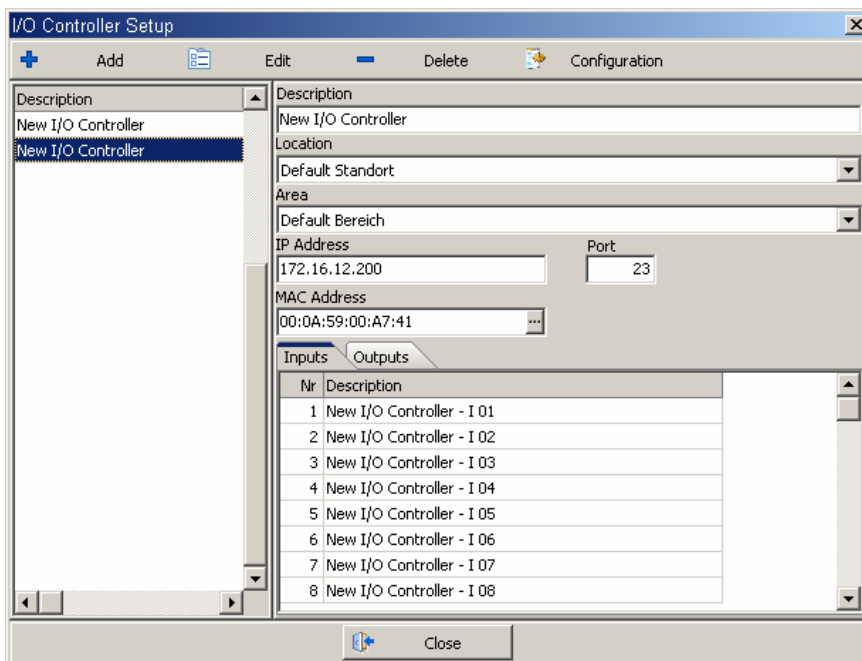

**Description:**

Free editable title of controller box

**Location / Area:**

If PowerCon is used with maps/ graphics, EPS-100 can be assigned to requested areas and / or locations.

**IP Address:**

IP-address or web address (if connected via internet)

**MAC Address**

Display of the EPS 100 MAC address. Select "..."  
on the right to refresh this display. This function can also be used as a connection test.

To add an I/O controller which is located in same LAN as the client PC, select + **ADD**. All I/O controllers available in the LAN network are listed in the **I/O Controller List**. This **SEARCH** function works independently of the PC or EPS 100 IP range:

**I/O Controller List**

Controller MAC list

- 00:0A:59:00:A7:41
- 00:0A:59:00:A3:7C
- 00:0A:59:00:A8:E6

Network Parameters

IP Address: 172.16.12.200

Netmask: 255.255.0.0

Gateway: 172.16.1.5

Control Port: 23

Apply

I/O Controller Name

Name: New I/O Controller

New OK Cancel

For the basic network settings, enter IP address, subnet mask and gateway. If necessary, also the control port can be changed (if standard port 23 is blocked by firewall, ISP...).

**ATTENTION:** Do not use port 99 in this setting. Port 99 is used for configuration up- and download!

Confirm the network settings with **APPLY** and enter a short description in the **I/O Controller Name** field.

After having entered the basic network settings, close the menu with **OK**. The new values are resumed in the **I/O Controller Setup**.

If the controller is not installed in a LAN network (connected via Internet), select **NEW** to enter the settings manually in the **I/O Controller Setup**.

**I/O Controller Setup**

+ Add Edit Delete Configuration

Description

- New I/O Controller
- New I/O Controller

Description: New I/O Controller

Location: Default Standort

Area: Default Bereich

IP Address: 172.16.12.200 Port: 23


MAC Address: 00:0A:59:00:A7:41

Inputs Outputs

Nr	Description
1	New I/O Controller - I 01
2	New I/O Controller - I 02
3	New I/O Controller - I 03
4	New I/O Controller - I 04
5	New I/O Controller - I 05
6	New I/O Controller - I 06
7	New I/O Controller - I 07
8	New I/O Controller - I 08


Close

Select **CONFIGURATION** to open the configuration menu:

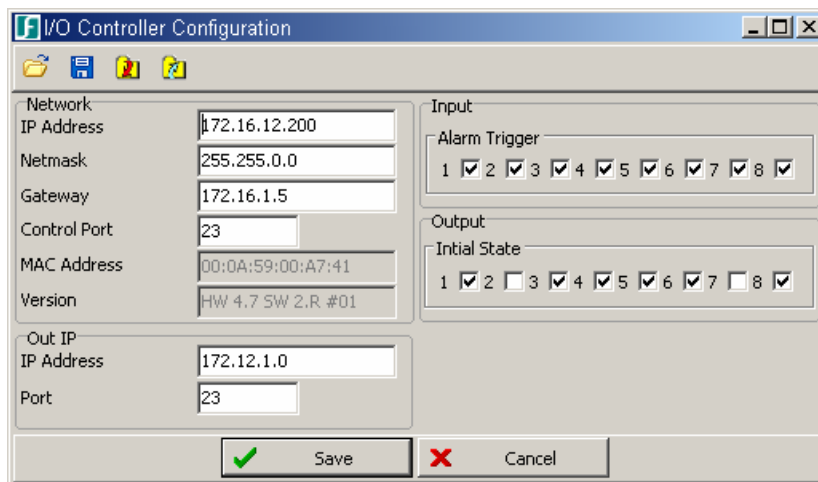

The 'I/O Controller Configuration' window contains the following fields and controls:

- Network:** IP Address (172.16.12.200), Netmask (255.255.0.0), Gateway (172.16.1.5), Control Port (23), MAC Address (00:0A:59:00:A7:41), Version (HW 4.7 SW 2.R #01).
- Out IP:** IP Address (172.12.1.0), Port (23).
- Input:** Alarm Trigger (checkboxes 1-8, all checked).
- Output:** Initial State (checkboxes 1-8, 1, 3, 4, 5, 6, 8 checked; 2, 7 unchecked).
- Buttons:** Save (green checkmark), Cancel (red X).

Select  **DOWNLOAD** to load the current EPS 100 configuration.


The following values can be changed:

<b>IP address:</b>	internal EPS 100 IP address
<b>Netmask:</b>	subnet mask of the LAN EPS 100 is connected to
<b>Gateway:</b>	gateway address of network / router
<b>Control port:</b>	normal EPS 100 communication port, standard value is 23. Additionally, port 99 is used for configuration up- and download
<b>MAC address:</b>	EPS 100 MAC address (display only)
<b>Version:</b>	display of hard- and software version
<b>Out-IP IP address:</b>	client PC address for receiving network alarm messages
<b>Out-IP Port:</b>	TCP port for network alarm transmission <b>ATTENTION:</b> Please make sure that PowerCon alarm receiver monitoring this port is set to TCP receiving mode!
<b>Input Alarm Trigger:</b>	if checkbox is activated, the assigned switch input is active (reacts on switching).
<b>Output initial state:</b>	Standard setting of the switch outputs. All checked outputs are set to <b>ON</b> after configuration upload or power loss.

After entering changes, select  **UPLOAD CONFIGURATION** to transfer the configuration to EPS-100.

Select **SAVE** to save this setting in the client PC database and to close the window.

For changing input or output descriptions, select **INPUT** or **OUTPUT** and **EDIT**:

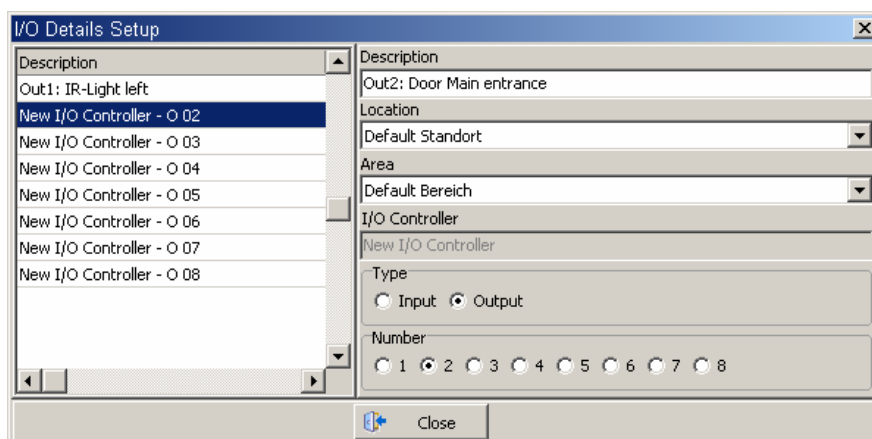


The 'I/O Details Setup' window shows a list of I/O controllers on the left and configuration details on the right:

- Left List:** Out1: IR-Light left, New I/O Controller - 0 02 (selected), New I/O Controller - 0 03, New I/O Controller - 0 04, New I/O Controller - 0 05, New I/O Controller - 0 06, New I/O Controller - 0 07, New I/O Controller - 0 08.
- Right Panel:**
  - Description:** Out2: Door Main entrance
  - Location:** Default Standort
  - Area:** Default Bereich
  - I/O Controller:** New I/O Controller
  - Type:** Input (radio), Output (radio selected)
  - Number:** 1, 2 (radio selected), 3, 4, 5, 6, 7, 8
- Buttons:** Close.

Both the description and the assignment to areas and locations can be changed, as well as the assignment to the contact inputs/outputs.

## Setting for visualization in Explorer List


Input contacts of EPS-100 can change the colour of assigned areas and cameras in the explorer list. To enable this function, activate the checkbox **GRAPHICAL ALARM NOTIFICATION** under **MENU BAR > SYSTEM > CONFIGURATION > NOTIFICATION**.

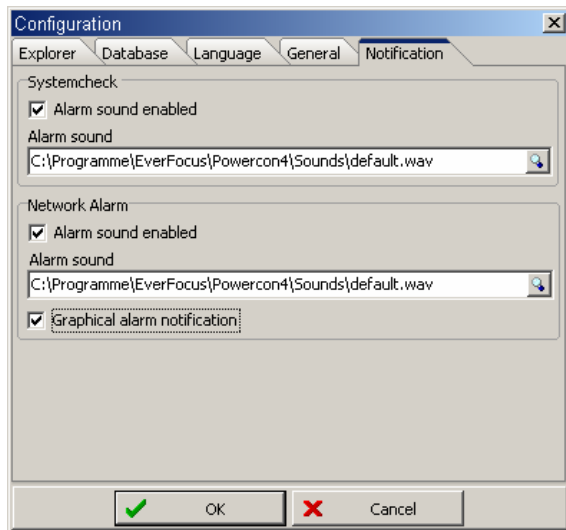

## Network alarm setup


If the EPS 100 setup is configured in the PowerCon software, the EPS 100 is also listed in the alarm receiver application.

Select **Alarm receiver>Alarm>Configuration** and choose the requested I/O controller.

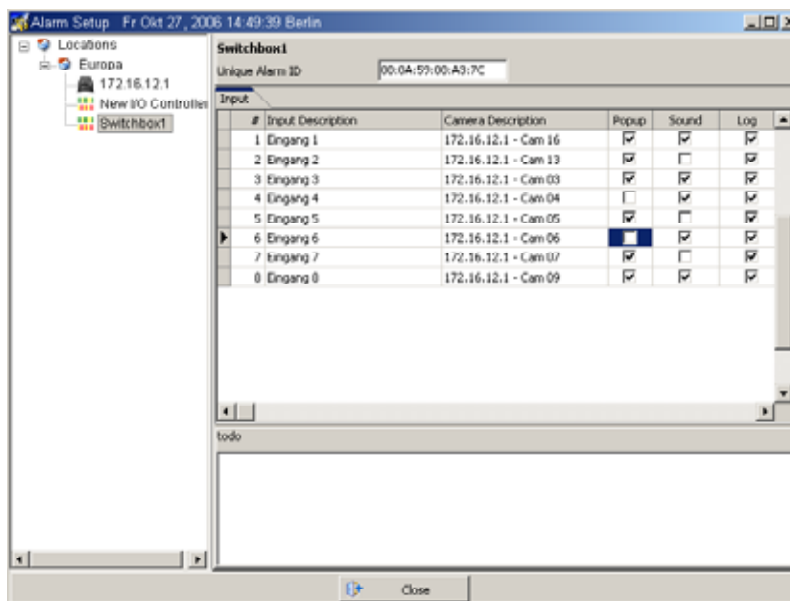


- Unique Alarm ID:** The EPS 100 MAC address is used for unique ID. The address is entered automatically.
- Input table:** For each EPS 100 switch input, the reaction can individually be defined:
- Camera description:** Select a camera linked to this contact. This camera will be displayed in a popup window, and the camera icon will flash in maps or graphics.
- Popup:** An alarm popup window with alarm message and further options will open.
- Sound:** The alarm sound file will open in case of alarm (setup in **Alarm Receiver > General > Configuration > Other > Alarm sound** )
- Log:** A log entry will be created in case of alarm.
- Todo:** Action list with alarm reaction instructions (appears in popup window)
- TCP mode:** EPS 100 generally sends alarms in TCP mode, UDP is not possible. Make sure that the alarm receiver is set to TCP mode:

**Alarm receiver > General > Configuration > Bindings:**

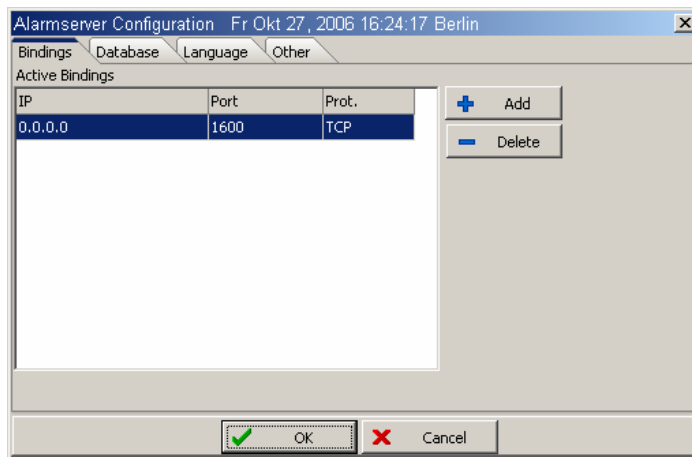


and **Alarm receiver > General > Configuration > Other:**

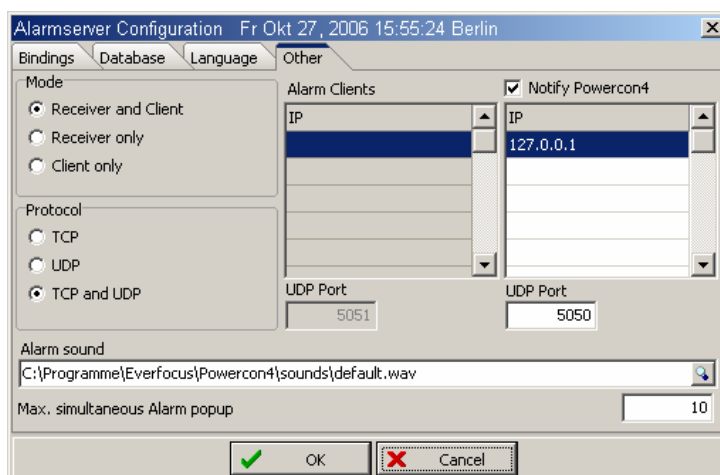

## EPS 100 operation

### Switch output control

Selecting (doubleclick) an installed I/O box in the explorer list opens the operation window:

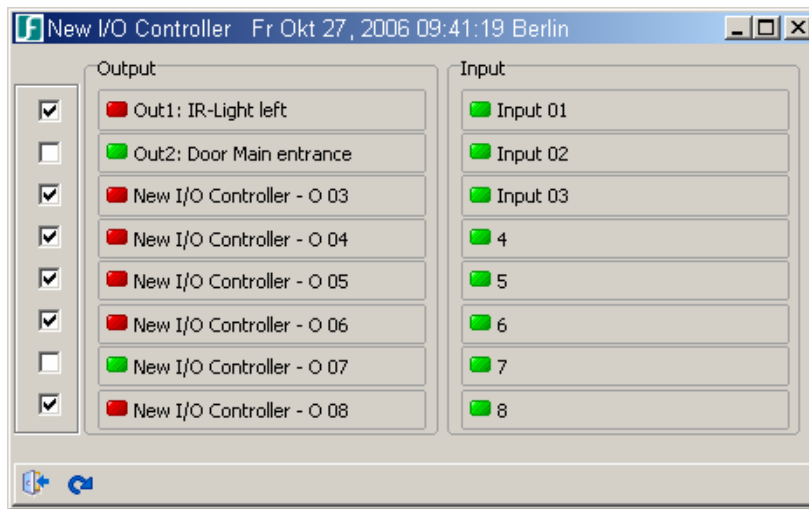

The left list shows the switch outputs and their status. Activate a checkbox to switch the output.

After acknowledgement from EPS 100, the "status lamp" will change the colour:


**RED:** output ON (active)

**GREEN:** output OFF


The right list shows the input status:

**RED:** input ON (active)

**GREEN:** input OFF

The input status does not refresh automatically. Select  **REFRESH** to reload the EPS 100 status.

Alternatively, a single input / output can be selected from the explorer list (similar functionality):

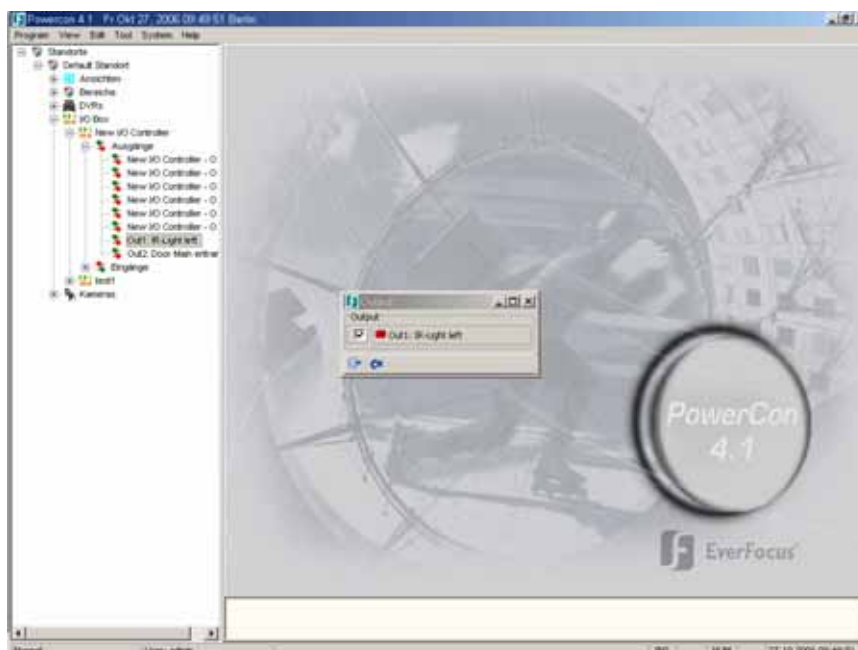


## Network Alarm


If network alarm is programmed for EPS 100 switch inputs, the following alarm reactions are possible (depending on setting):

- alarm sound
- popup window with alarm message
- assigned area in explorer list will change background colour to red
- assigned cameras are framed by a red flashing border in maps or graphics
- alarm listing in optional notification window

Example: Screen with map before alarm

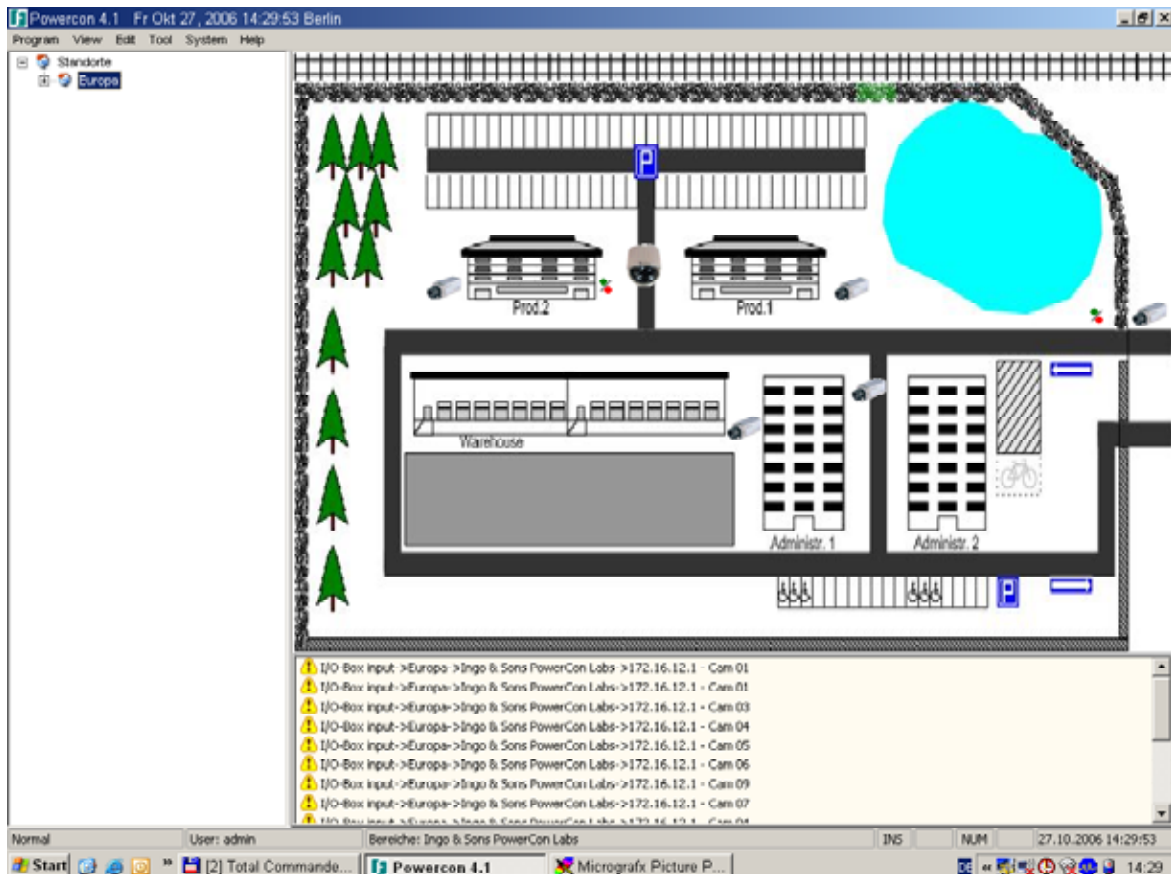

Example: Screen with map after alarm

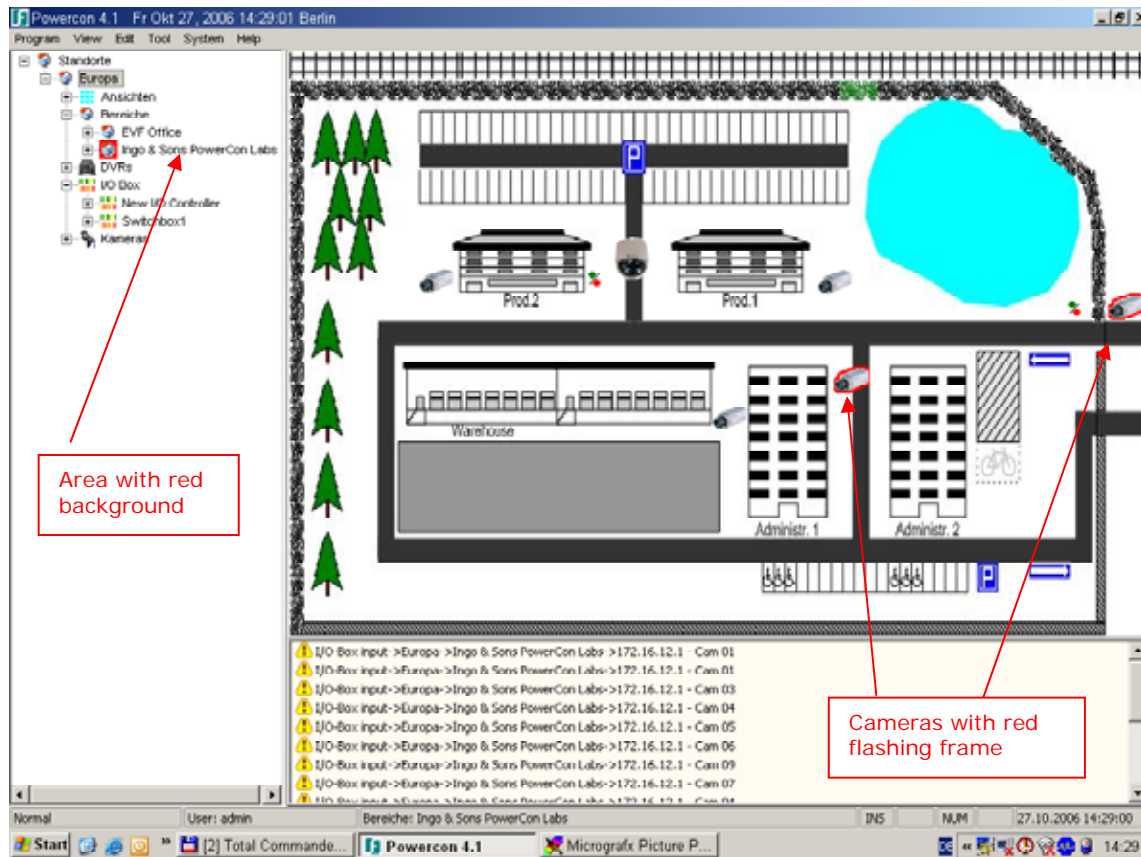


Right mouseclick on any alarm item allows for resetting all alarms.




## Popup window

The optional popup window automatically opens in case of alarm

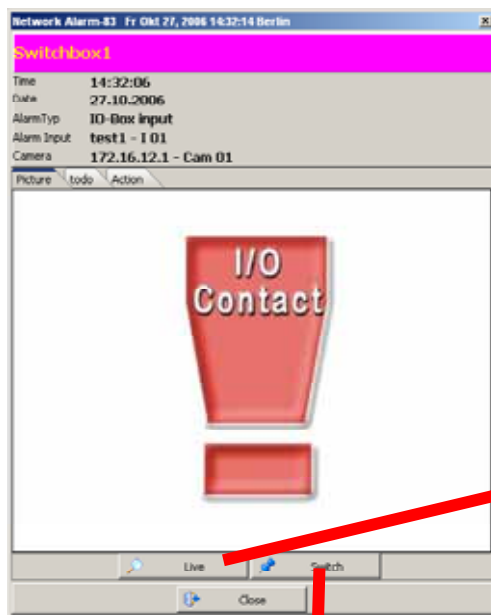

"Live" connects live to assigned camera

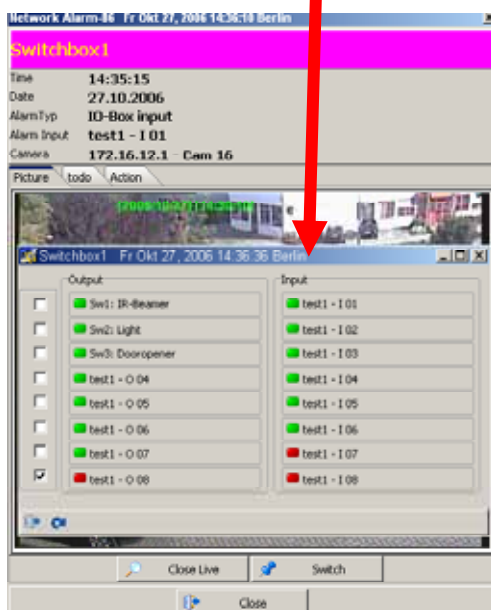


**SWITCH** opens the EPS 100 operation menu with status and output switches.

# PowerCon 4.1 SystemChecker


The PowerCon 4 SystemChecker is an application working independently from PowerCon. Acting as a "Watchdog", it checks the network availability of connected DVR systems by cyclic portscan of defined DVRs.

The SystemChecker application is installed together with the PowerCon program and starts either automatically upon PC start (activate **AUTOSTART** checkbox in installation menu) or manually (**START > PROGRAMS > EVERFOCUS > POWERCON4 > SystemChecker**).

The program will start minimized; the SystemChecker Icon is visible in the taskbar:

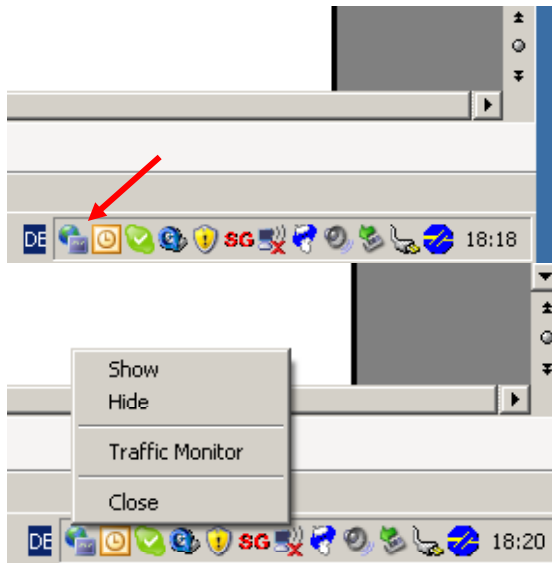


For configuration of the SystemChecker, click right on the taskbar icon and select "**SHOW**" from the context menu:

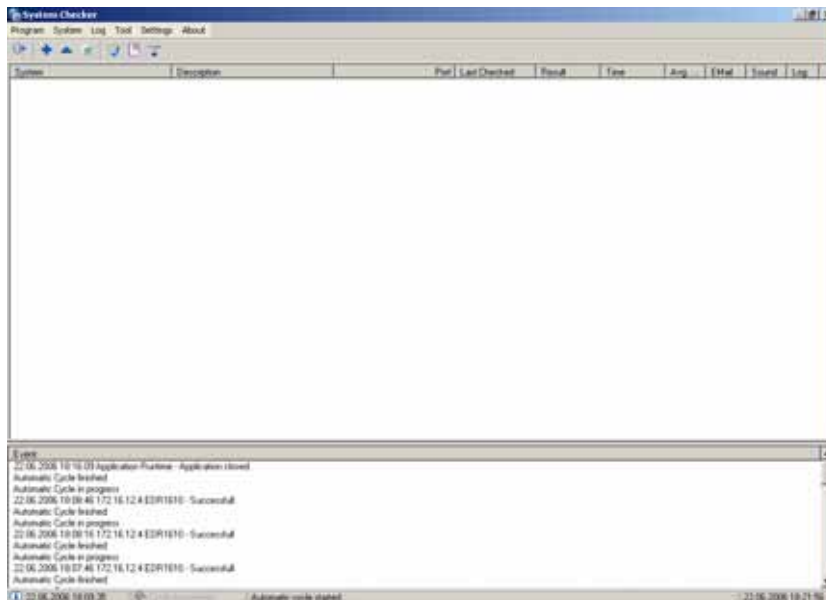


The window is divided in 2 parts: the upper part contains the system list and the lower part displays the event list.

## General settings


Open the configuration menu with the icon  or select **Menu bar > Settings > Configuration**:

Tab "Language":

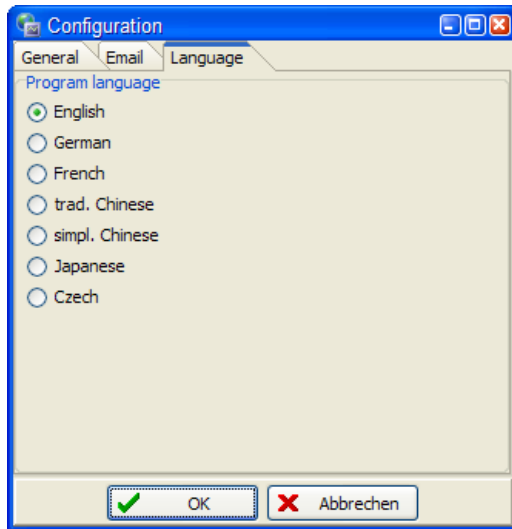

Select one of the supported program languages.

Tab "General"

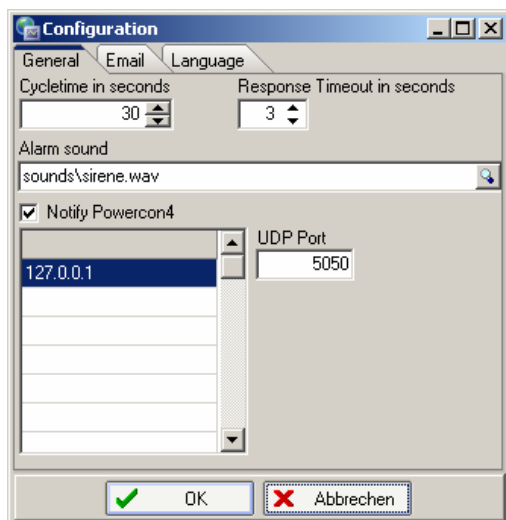

**Cycletime in seconds:**

**Response Timeout:**

**Alarm sound:**

**Notify PowerCon4:**

Enter the interval time between the system checks.

Enter the maximum accepted response time of the connected system during scan.

In case of alarm (connected system not available in network), a sound can be activated. Select a sound file in \*. wav format.

If this checkbox is activated, an alarm will be forwarded to PowerCon. The alarm appears in the PowerCon notification panel.

For forwarding to PowerCon, an IP address and UDP port input is required. Default settings are 127.0.0.1 (local host) and port 5050.

For standard single user installation, no changes have to be done here.

## Tab "Email"

Configuration

General Email Language

SMTP server  
smtp.testserver.com

☒ SMTP require Authentication

Username  
greenappletree

Password  
23HgF5

From address  
greenappletree@testserver.com

Recipients  
fae\_boss@testcenter.org; admin@testcenter.org

Subject  
EVF Systemchecker Failure Notification

OK Abbrechen


For forwarding an alarm message via e-mail, the following entries are required:

- |                      |  |
|----------------------|--|
| <b>SMTP server:</b>  | Send Mail server of the email sender<br>If the Server requires authentication with user name and password, activate the checkbox and enter user name and password. |
| <b>From address:</b> | E-mail address of sender   |
| <b>Recipients:</b>   | E-mail address(es) of mail recipient(s),<br>When entering multiple addresses, separate addresses by semicolon.   |

Select "OK" to save the settings and leave the menu.

## Configuration of monitored systems

Click the  icon or select **Menu bar > System > Add:**

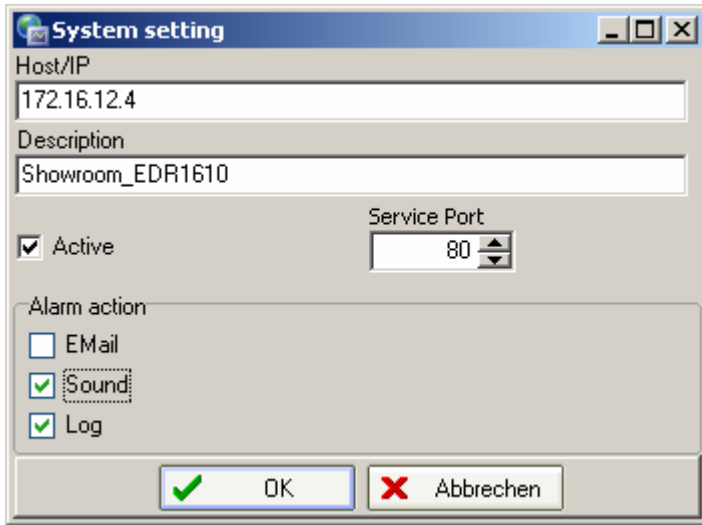

The 'System setting' dialog box contains the following fields and controls:


- Host/IP:** Text field containing '172.16.12.4'.
- Description:** Text field containing 'Showroom\_EDR1610'.
- Service Port:** Spin box set to '80'.
- Active:** Checked checkbox.
- Alarm action:** Group box containing three checkboxes:
  - ☐ EMail
  - ☒ Sound
  - ☒ Log
- Buttons:** 'OK' (with a green checkmark icon) and 'Abbrechen' (with a red X icon).

**Host/IP:** Enter the hostname or the IP address of the monitored system  
**Description:** Name of the system  
**Active:** Activate the checkbox to include this system in the cyclic check (this checkbox is also available for each item on the left side of the system list)  
**Service port:** Port to be checked at the monitored system. Select a port which is used (open) from the system.  
**ATTENTION:** For EDR series, do not use the data ports for scanning, as these are dynamic and active upon live connection only! For utilized ports at EDR DVRs, please refer to the network menu.  
**Alarm action:** Activate the checkboxes for the desired alarm reactions: E-mail (setup required in general settings!), alarm sound and log list entry.

Select "**OK**" to save the settings and leave the menu.


For additional systems, select the  icon or use **Menu bar > System > Add:**

The added system appears in the system list:

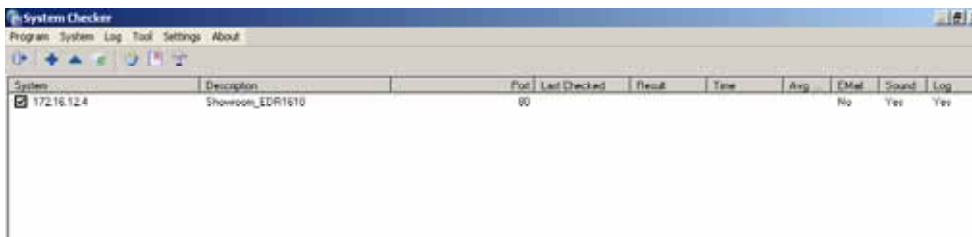


The 'System Checker' window displays a table with the following data:

System	Description	Port	Last Checked	Result	Time	Avg	EMail	Sound	Log
<input checked="" type="checkbox"/> 172.16.12.4	Showroom_EDR1610	80					No	Yes	Yes


To edit systems available in the list, select the  icon or select **Menu bar > System > Edit.**


## Operation


For starting the SystemChecker, select **Menu bar > Settings > Cycle active:**

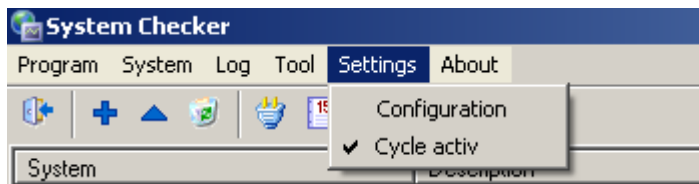

The results of the checks are displayed in the event list in the lower part of the window:

Event		
Automatic Cycle in progress		
22.06.2006 18:04:16	172.16.12.4	EDR1610 - Successfull
Automatic Cycle finished		
Automatic Cycle in progress		
22.06.2006 18:03:46	172.16.12.4	EDR1610 - Successfull
Automatic Cycle finished		
Automatic Cycle in progress		
22.06.2006 18:03:16	172.16.12.4	EDR1610 - Successfull
Automatic Cycle finished		
Automatic Cycle in progress		
22.06.2006 18:02:46	172.16.12.4	EDR1610 - Successfull
22.06.2006 18:09:35	 Cycle in progress	Automatic cycle started...

To display the log file of application activities, select the  item or select **Menu bar > Log > Show**:

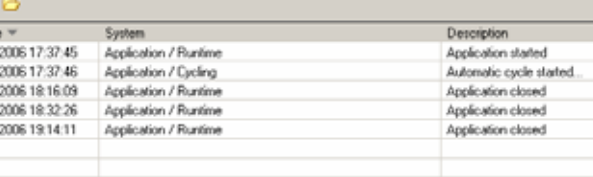

The screenshot shows a window titled "Log Viewer" with a standard Windows XP-style title bar. Below the title bar is a toolbar with three icons: a blue circular arrow, a blue square, and a yellow folder. The main area of the window contains a table with three columns: "Date Time", "System", and "Description". There are five rows of log data, each preceded by a small circular icon with a number inside. The data shows a sequence of events: application start, automatic cycle start, application close, application start, and application close.

Date Time	System	Description
22.06.2006 17:37:45	Application / Runtime	Application started
22.06.2006 17:37:46	Application / Cycling	Automatic cycle started
22.06.2006 18:16:09	Application / Runtime	Application closed
22.06.2006 18:32:26	Application / Runtime	Application closed
22.06.2006 19:14:11	Application / Runtime	Application closed

## Network traffic monitor

To open the Network Traffic Monitor, select the  icon or select **Menu bar > Tools > Traffic monitor**.

For further description, please refer to chapter “**Menu bar / Tool**”.

# EDR 1600 / 400 HDD Player

---

**Note:** When working with hard disks, please refer to the EDR system's documentation containing important information about damage and data loss avoidance.

EDR 1600 /400 system hard disks can be connected to a normal PC, and hard disk recordings can be played back with the external hard disk player.

The following accessories are required for the playback of EDR 1600/400 hard disks:

**EPS-EDR HDD Playerkit 1:**


External hard disk player to read EDR-1600 and EDR-400 hard disks via the PC USB connection

**EPS-EDA HDD Playerkit 2:**

External hard disk player to read EDA-800 hard disks via the PC USB connection


## Programme start

The HDD reader software is installed together with the PowerCon main program. To start the application, select **START > PROGRAMS > EVERFOCUS > POWERCON4 > EDR 1600 HDD Player**.

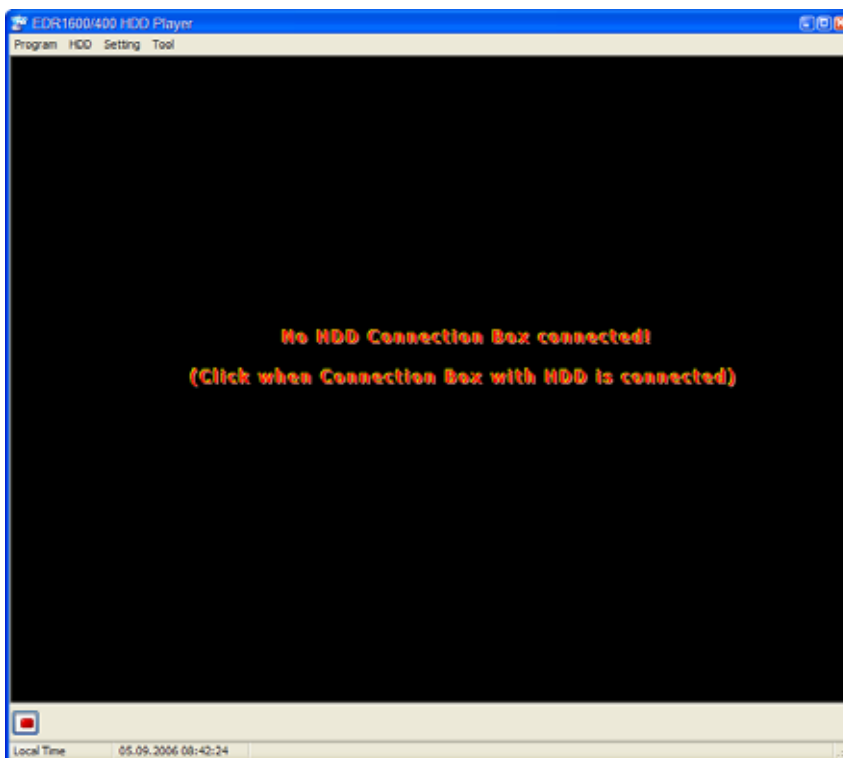

## Connect HDD

To open the HDD reader, click on the displayed text **OR** click on the red button in the status bar **OR** select **HDD > CONNECT**.

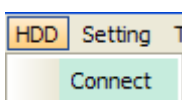

## Operation


HDD playback is controlled through the buttons at the bottom screen margin in the same way as the playback of recordings of a connected, distant EDR 1600/400 system.

### Playback control

After selecting one or several cameras for playback from the main screen, the playback control buttons are displayed at the bottom screen margin.



All selected cameras are controlled simultaneously:

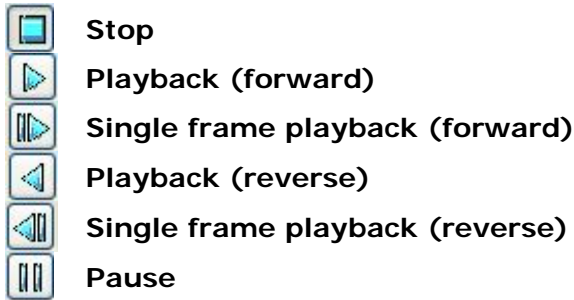

Use the buttons to operate the different functions.



To directly go to a specific position within the HDD recordings, select the slider and move the pointer to the desired position.



The second sliderbar is used to infinitely adjust the playback speed. Move the sliderbar to the right to increase the playback speed and to the left to reduce the playback speed.

### Print images / export images and video streams





Within the playback, open the context menu through right mouseclick.




Select „**Print Image**“ to print out the selected single image on a local printer.


Select „**Export Image**“ to save the selected single image as JPEG file in the directory **\\Programs\\EverFocus\\Powercon4\\Image\\Export**.

Select „**Record Video**“ to save the current video stream as AVI file in the directory **\\Programs\\EverFocus\\Powercon4\\Video\\Export**.


Stop the export by selecting „**Stop Recording**“ from the context menu.

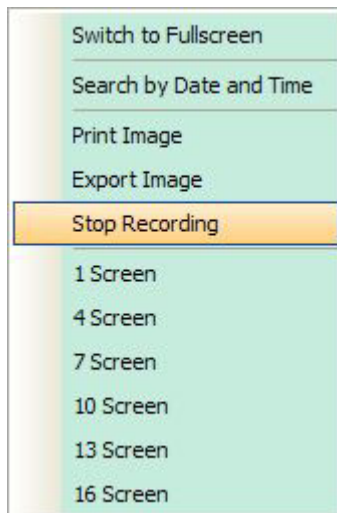

**ATTENTION:** There are two different options for exporting video streams. If „**Direct Recording**“ is enabled within the „**Setting**“ menu, the video stream is exported directly to the above mentioned directory as AVI file.

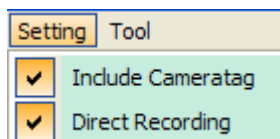

If this function is disabled, a series of single images is saved in the directory **\Programs\EverFocus\Powercon4\tmp** upon selecting „**Record Video**“. Afterwards, these single images can be converted into an AVI file by selecting „**Tool\Build Video**“.

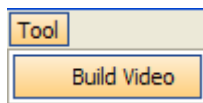


## Search recordings

Within the playback mode, click right to open the context menu for searching the HDD for specific recordings.




Select „**Search by Date and Time**“ to open the HDD search dialogue.

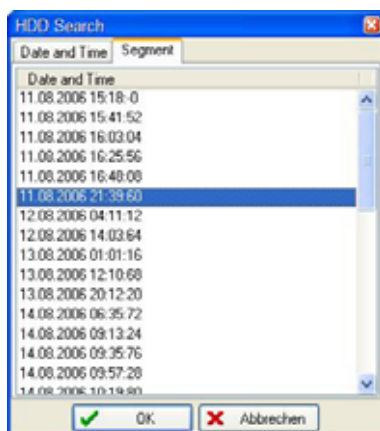

To play back a specific period, use either the „**Date and Time**“ tab to directly enter the requested time, or use the „**Segment**“ tab to select the respective HDD segment. Confirm your selection with **OK** to start the playback.

After having finished the HDD player operation, disconnect the HDD connection by selecting **HDD > DISCONNECT**.

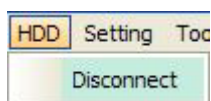

Shut down the program by selecting **PROGRAM > EXIT**.

